

Assembly Instructions

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR BUNK BED FRAME.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT jump on this bed frame.

This bed has not been designed or constructed as play equipment.

DO NOT use this bed frame unless all fixings are secured.

Always use on a level, even surface.

WARNING "High beds and the upper bed of bunk beds are not suitable for children under six years due to the risk of injury from falls".

WARNING "Bunk beds and high beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang items to any part of the bunk bed that are not designed to be used with the bed for example, but not limited to ropes, strings, cords, hooks, belts and bags".

WARNING "Children can become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g. cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure shall not exceed 75mm or shall be more than 230mm*.

WARNING Do not use the bunk bed/high bed if any structural part is broken or missing.

Always follow the manufacturer's instructions.

The recommended size of the mattress(es) is 90cm x 190cm.

Ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed.

BS EN 747 : 2012 PART 1 & 2 + A1 : 2015

WARNING: If this bed is placed on a laminated floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.

CARE & MAINTENANCE:

Periodically check all screws & fixings to ensure they are secure.

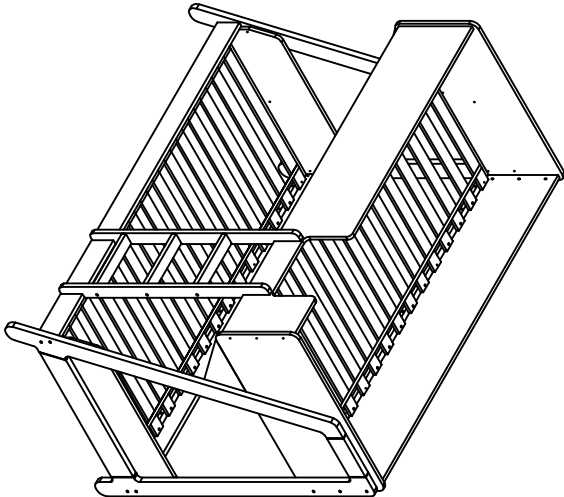 
DO NOT push the bed frame as this will damage the legs.

Always lift the bed with two people to reposition.

Keep any sharp objects away from the frame.

Recommended maximum mattress height for top bunk is 160mm.

ASSEMBLY INSTRUCTIONS

 

 





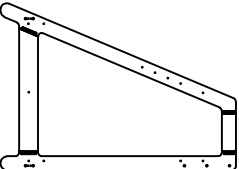 
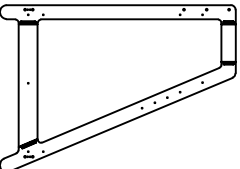 
 
 

 
 
 


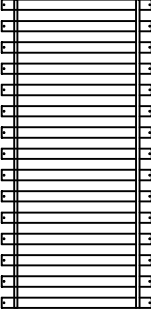 

 

 
ASSEMBLY TIPS

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

Warning 1

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE LIST		
1		6 PCS
JCBC M6 x 80mm	7	26 PCS
	BARREL NUT M6 x 13mm	
2		20 PCS
JCBC M6 x 60mm	8	1 PC
	ALLEN KEY M4	
3		28 PCS
JCBC M6 x 30mm		
4		16 PCS
JCBC-W M6 x 30mm		
5		44 PCS
WOOD SCREW 4.0 x 30mm		
6		26 PCS
WOOD DOWEL Ø10 x 30mm		

COMPONENT LIST		
A		1 PC
B		1 PC
C		1 PC
D		1 PC
E		1 PC
F		1 PC
G		1 PC
H		1 PC
I		1 PC
J		1 PC
K		2 SETS
L		1 PC
M		1 PC
N		3 PCS
O		2 PCS

