
9892096COMUK

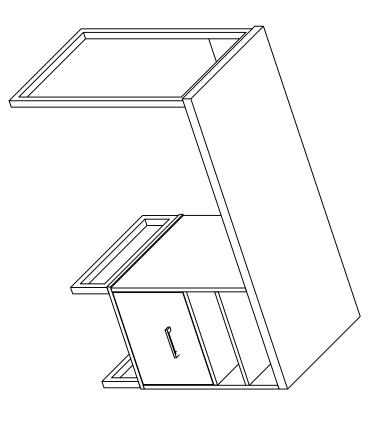

INFORMATION. PLEASE READ IT CAREFULLY AND KEEP FOR FUTURE REFERENCE THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY

Do Not Return This Product!

Contact our customer service team for help first

Call: 01942 524100

Visit:CSEurope@dorel.com

Borehamwood WD6 1JN United Kingdom Building 4, Imperial Place, Maxwell Road Dorel Home Furnishings Europe Ltd.

WARNING

- Unit can tip over causing severe injury or death.
 Anchor unit to stud in wall (if instructed to).
 Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers

Recommended no. of people needed for assembly: 2

 
Before starting

- ☐ Read each section carefully before starting. It is very important are not followed in sequence, assembly difficulties will occur. that each step is performed in the correct order. If these steps
- Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
- Work in spacious area, preferably on a carpet, near the place the unit will be located
- □ Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

Have the following tools close at hand








Identify, sort and count the parts before beginning assembly.


HELPFUL HINTS

 
- - Slides have a lip on the right side only.
- Back panels provide stability and support.
- Clean the product with your choice of furniture polish and a soft cloth. Unit may collapse without the back panel installed DO NOT USE harsh chemicals or abrasive cleaners.
- Move your new furniture carefully. Two people are needed to lift and carry the unit to its new location.
- Never push, drag or scoot your furniture (especially on a carpet).








Cam Lock Fastening System

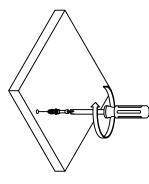

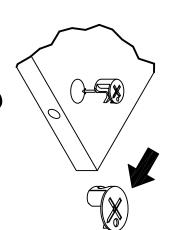

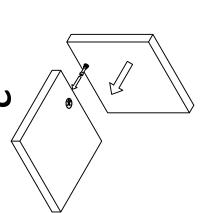

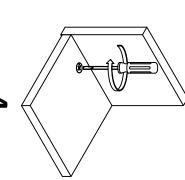

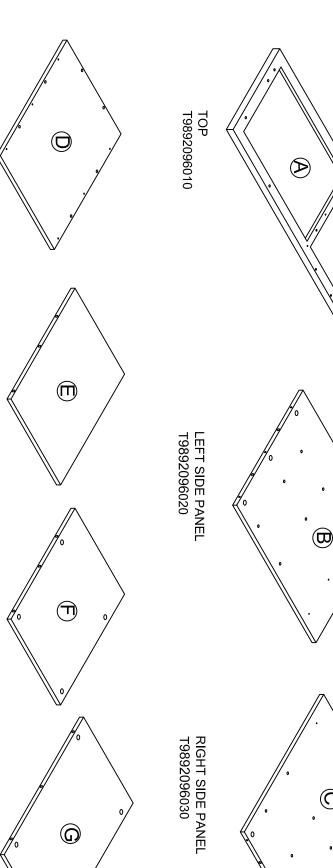



DRAWER FRONT T9892096080

DRAWER BACK T9892096090

LEFT DRAWER SIDE T9892096100

 
RIGHT DRAWER SIDE T9892096110

BOTTOM PANEL T9892096040


FIXED SHELF T9892096050


FIXED SHELF T9892096060

BACK PANEL T9892096070






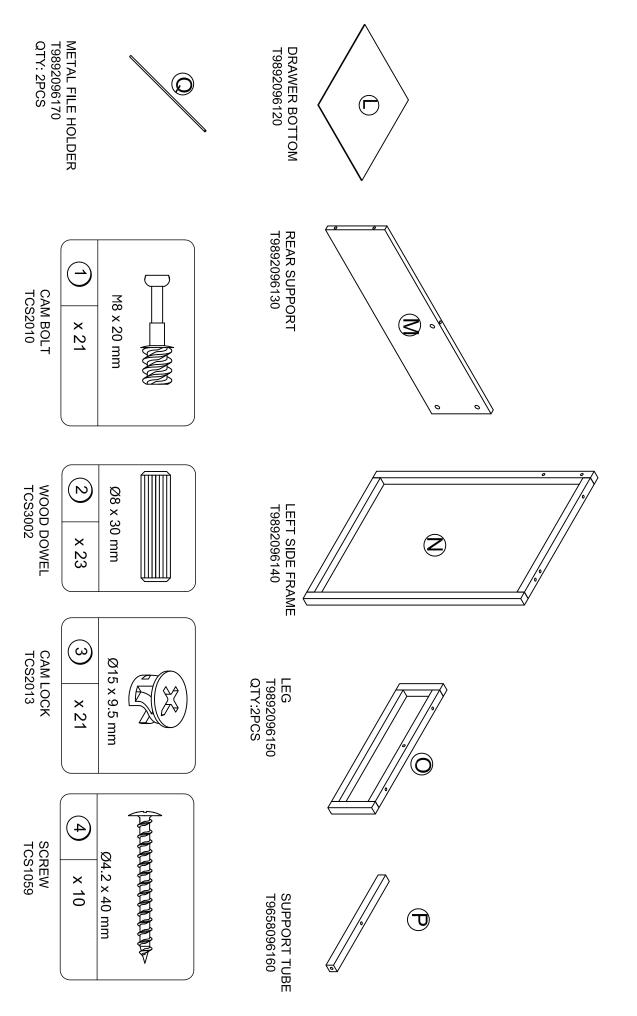

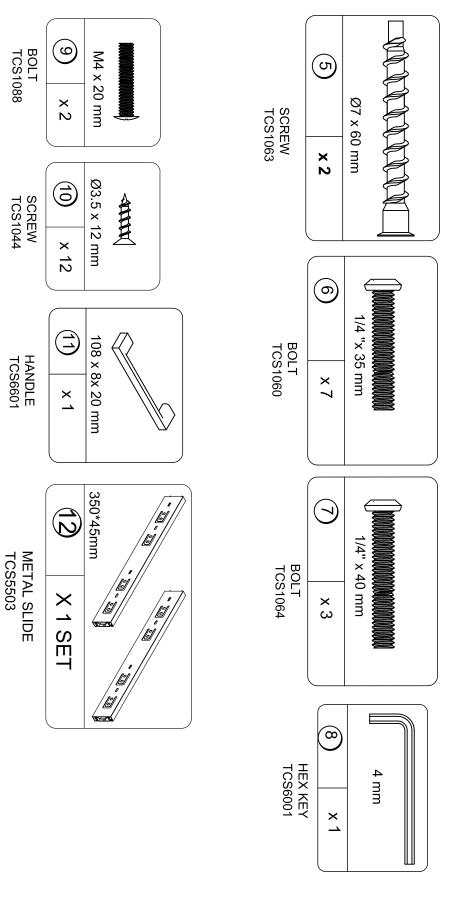

 - 1) Pull toward arrow to open the slide until its stops and then flip it over.
- 2) Push plastic lever down and pull apart.







Cabinet member




Drawer member




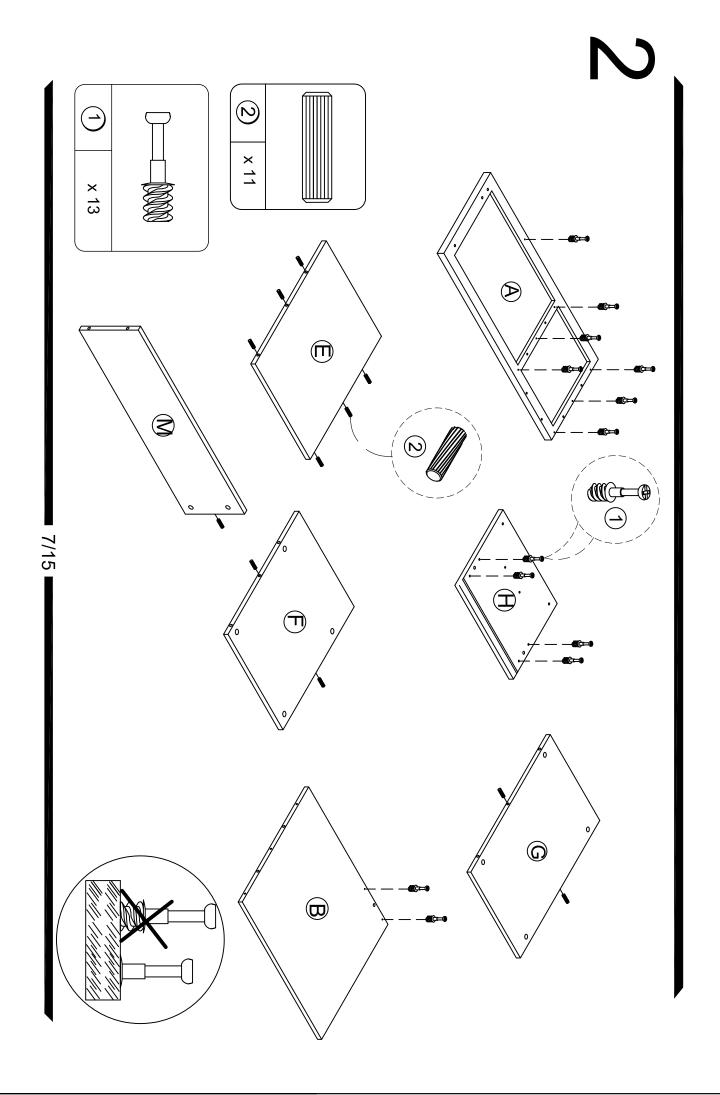

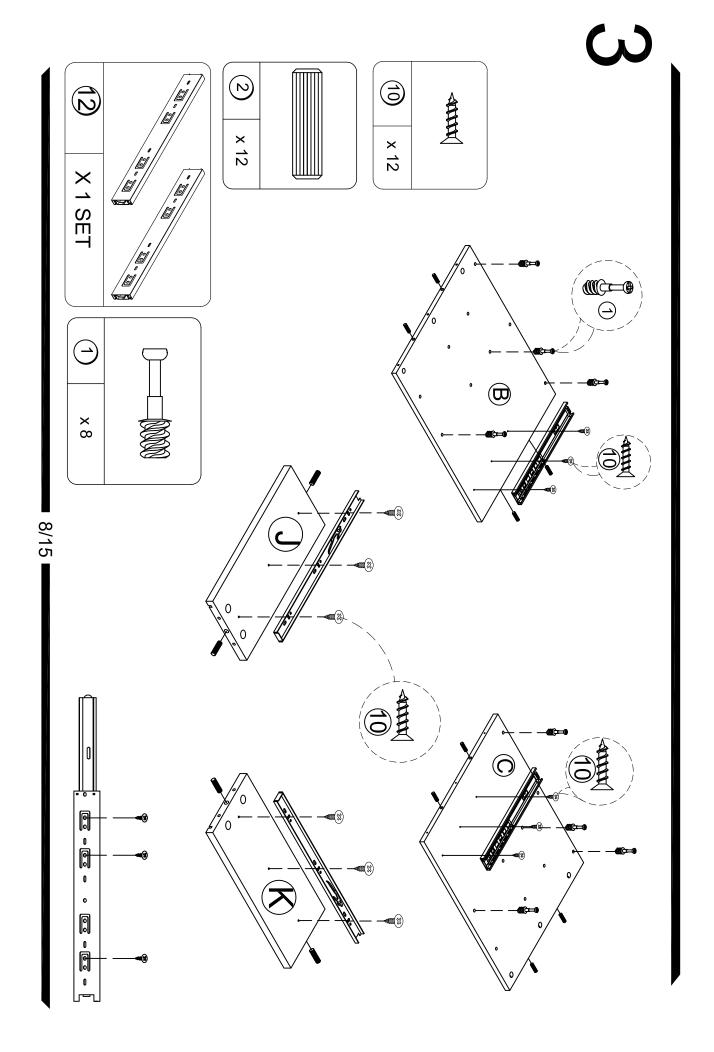

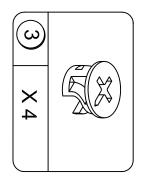


4

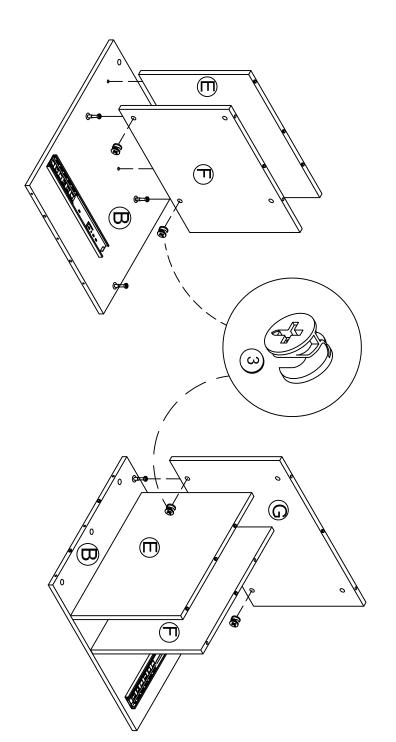



9/15

Proper orientation of CAM LOCK

LOCK

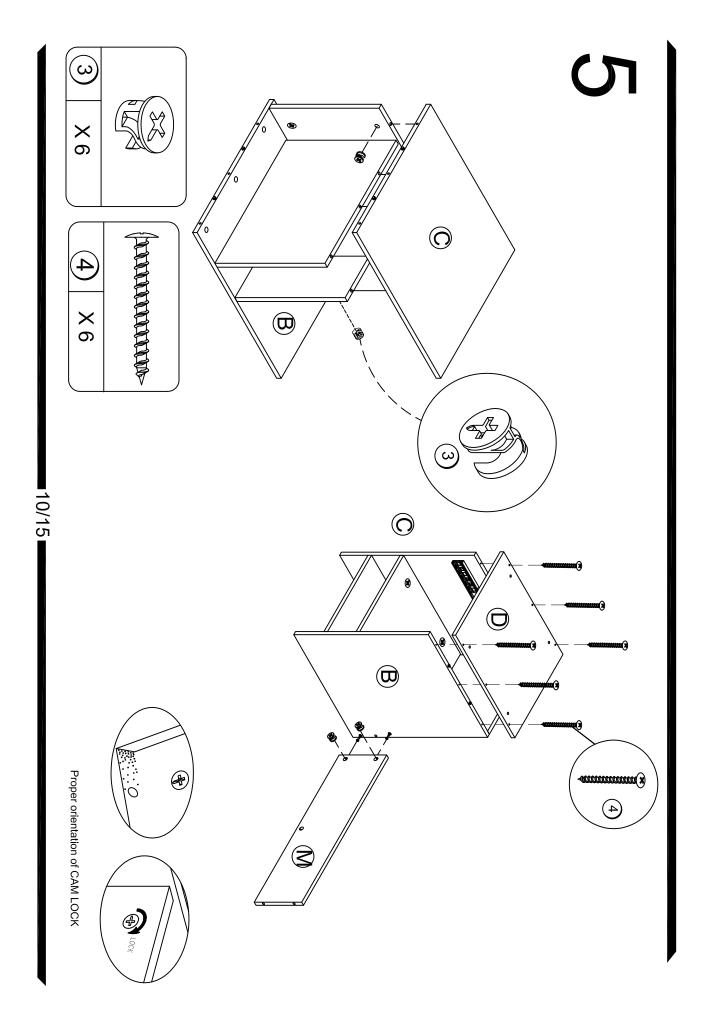

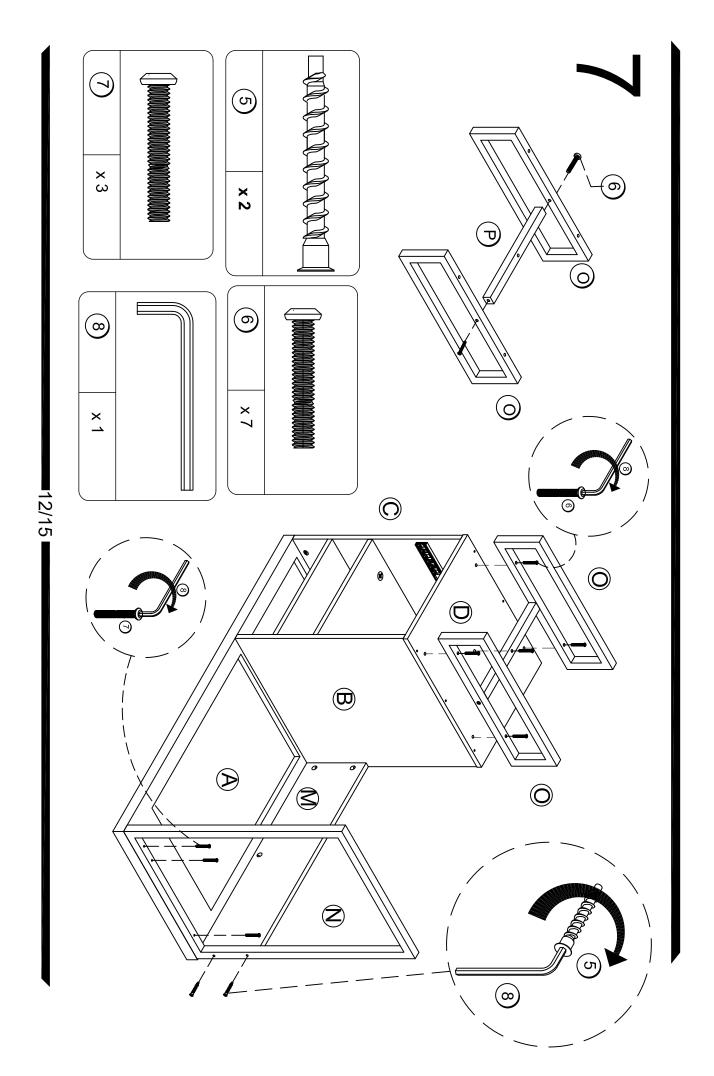

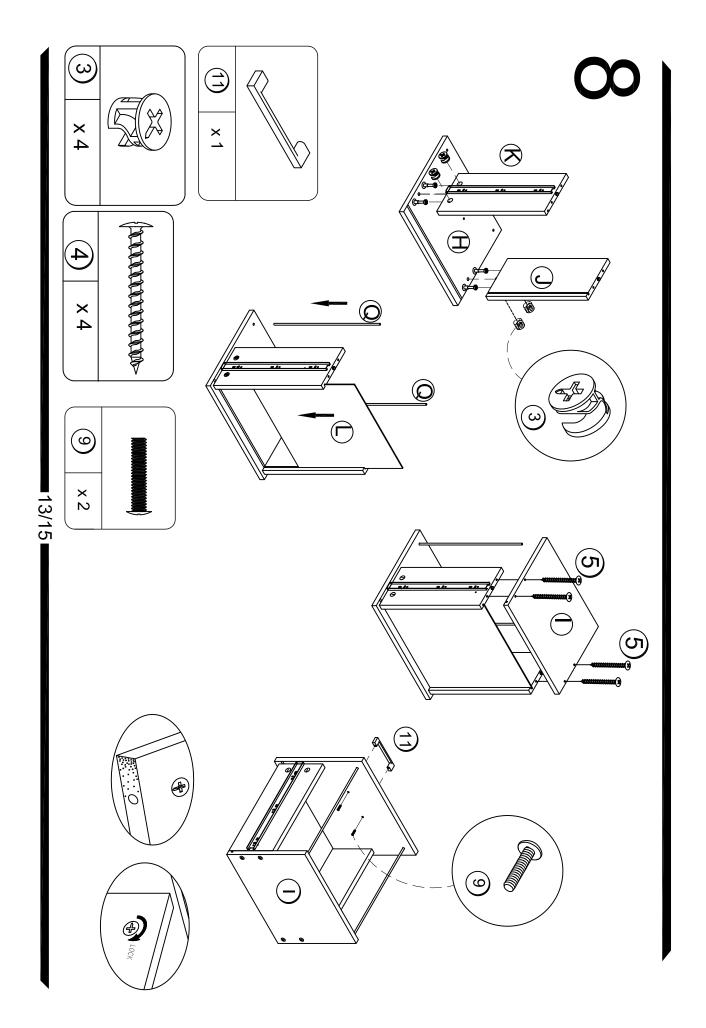


9

NOTE: This step is just for insert or remove drawer if needed

To Insert Drawer Into Cabinet


- 1) Position anti tip mechanism, as shown.
- Bring ball bearing retainer fully forward, as shown.
- With help of another person, carefully align and insert drawer slide into cabinet slide, guiding the drawer slide between the ball bearing retainer, as shown.
- 4) Push the drawer into cabinet. You may experience a light resistance when pushing the drawer into cabinet but once both slides are properly engaged, drawer should slide in and out smoothly.

NOTE: Do not use excessive force to insert drawer as this may cause the damage to slides.

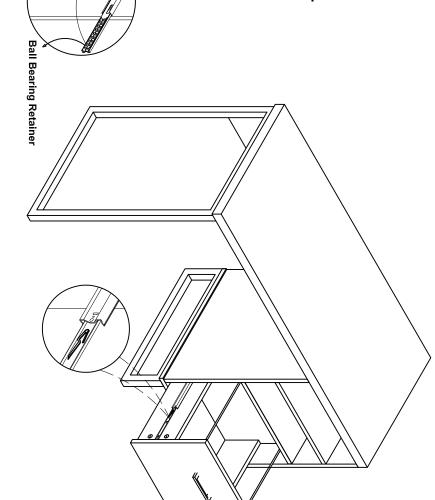


To Remove Drawer, If Needed

- Pull the drawer fully open so levers are visible.
- Push UP on left side lever and DOWN on right side lever.
- Holding levers in place, pull drawer toward you.

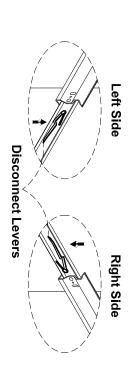

WEIGHT LIMITS:

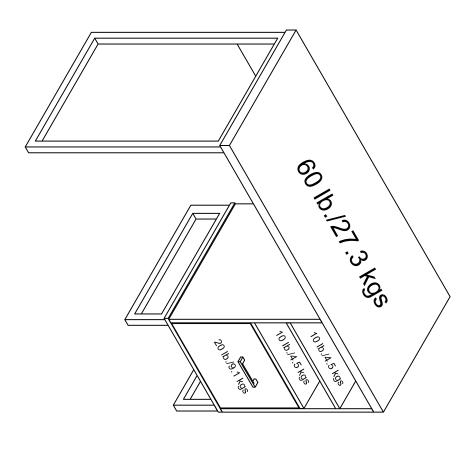

▶

WARNING

Please make sure that all the objects are removed before moving the assembled unit. The unit must be lifted by more than one person, not dragged or pushed. Failure to do so will cause product damage, instability,

product collapse, and/or serious injury.

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.