


# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Thank you for purchasing the **BERGEN THREE TIER SHOE CABINET**. Please read the instructions carefully to ensure safe operation of the product.

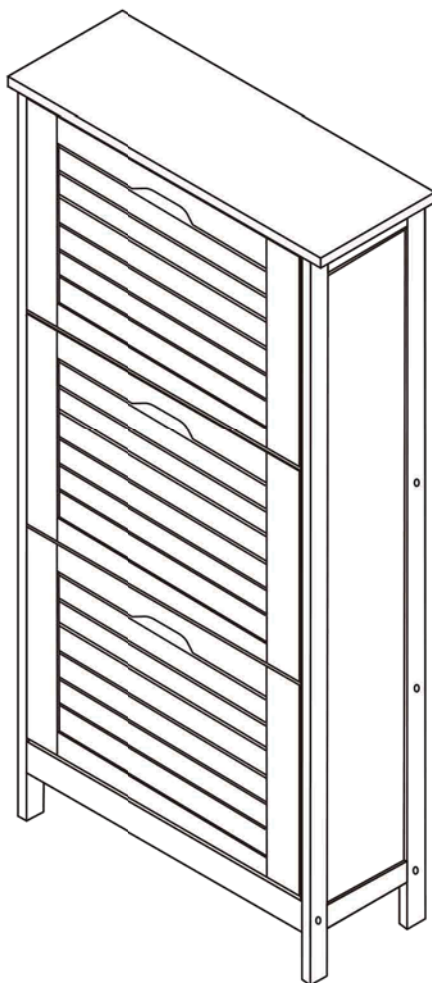

**Size: W530xD180xH108.5cm**  
**Colour: WHITE/GREY**

---


**PLEASE READ** this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

**CAUTION:** There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

---

## Tools Required

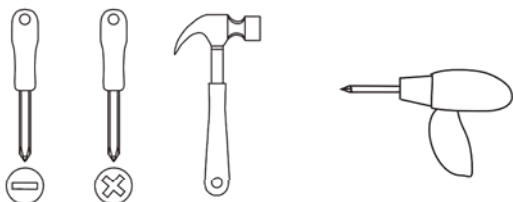

1 Person Build  
1 Person 1.5 Hour

# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

## IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### INFORMATION

- The product is intended for a maximum load of 12 kg spread evenly thorough the storage compartments . Do not exceed this weight .
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Tools are not included.

### WARNINGS


- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.
- It is essential that this unit is fixed to a wall with the fixings provided.
- We recommend the use of the wall fixing provided for safety reasons. N.B. if in doubt pls consult a qualified tradesperson. **Warning:** Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

### CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.



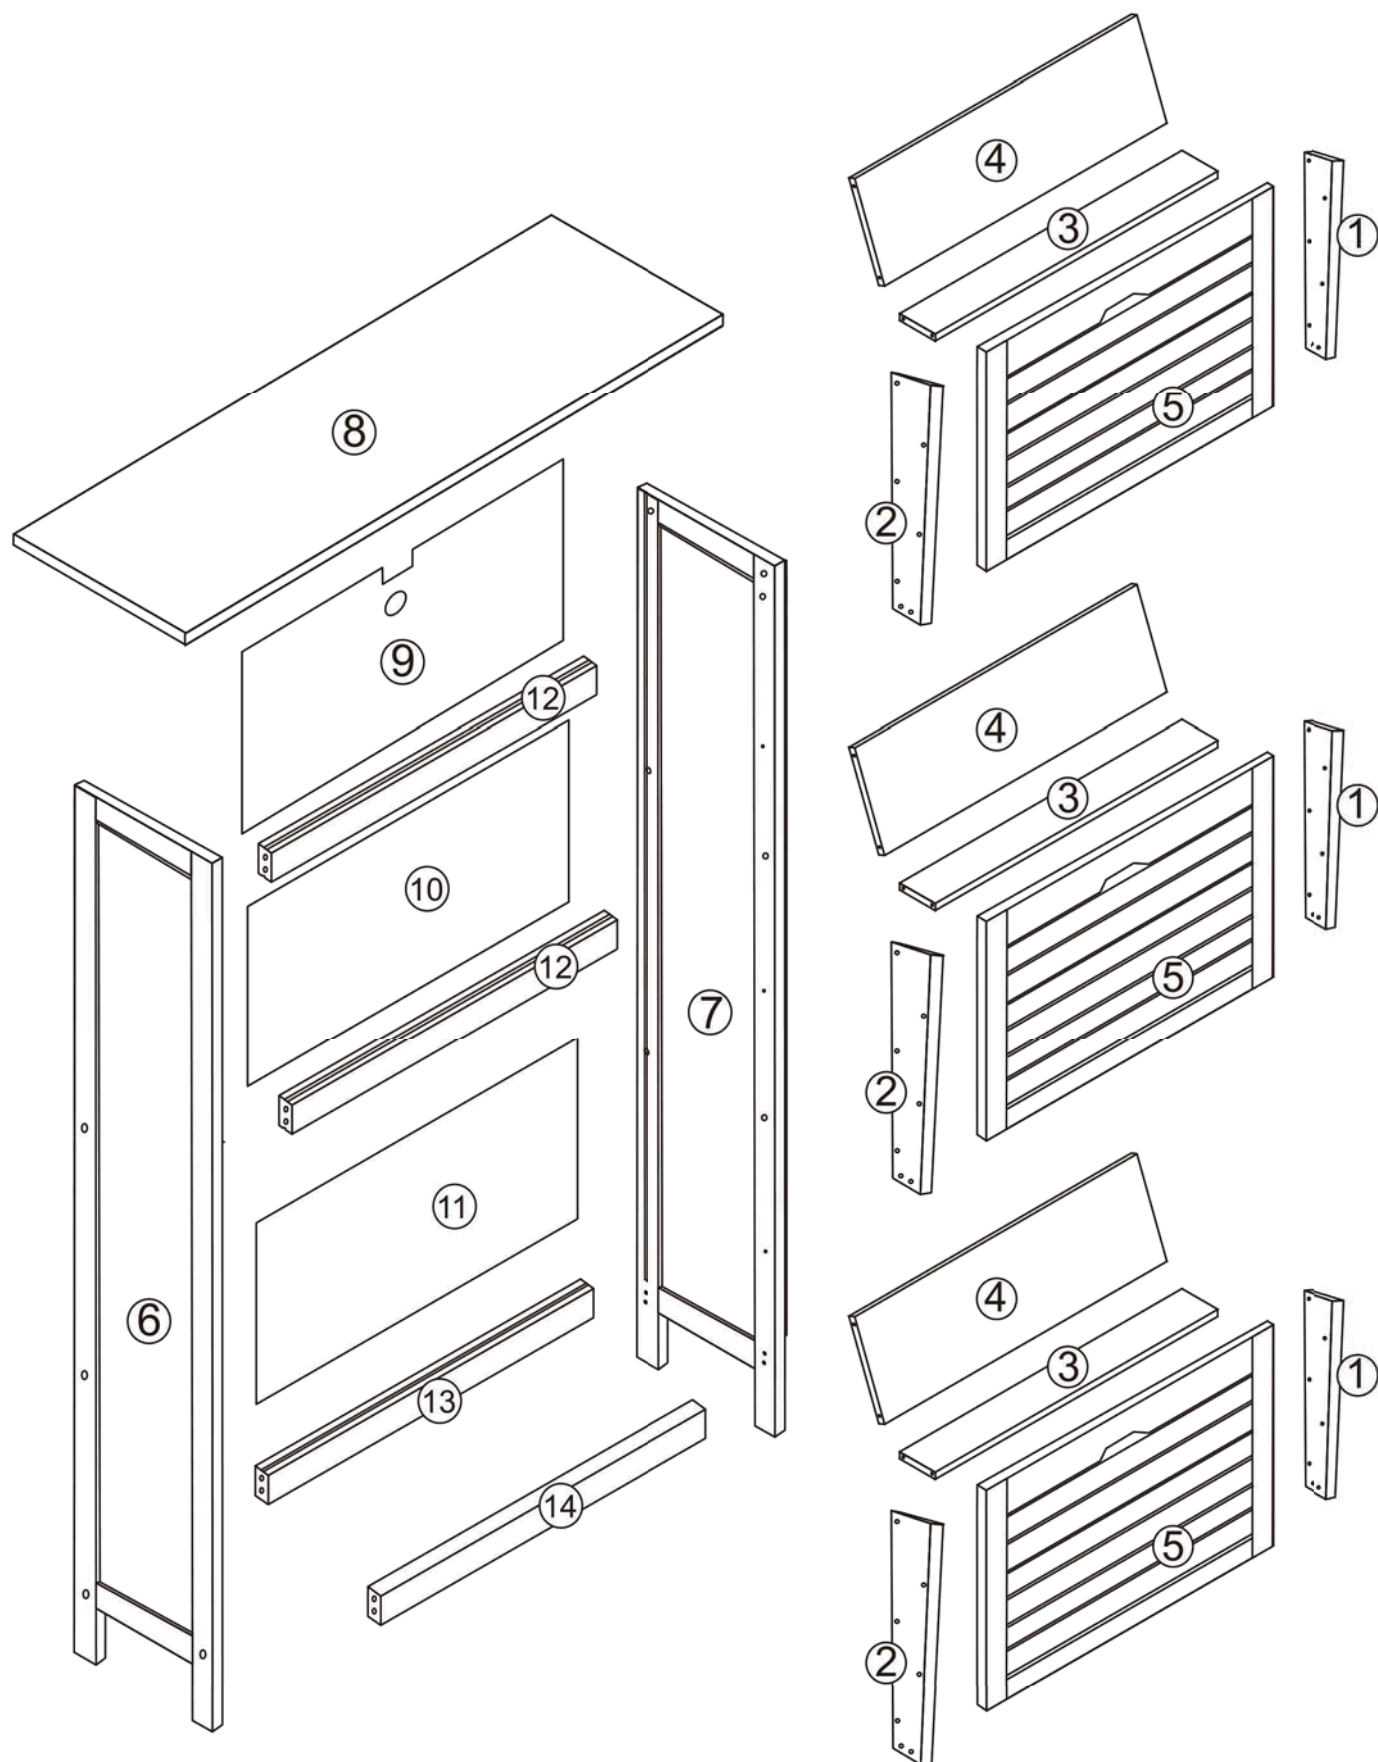





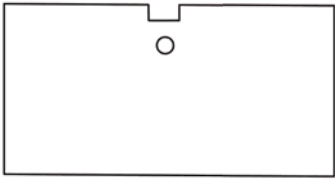





# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.

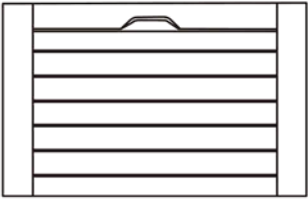

# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


## PARTS

1 	2 	3 
Description: RIGHT DRAWER BRACKET QTY:3pcs Dimension:236x158x9mm	Description:LEFT DRAWER BRACKET QTY:3pcs Dimension:236x158x9mm	Description:DRAWER BOTTOM PANEL QTY:3pcs Dimension:450x65x9mm
4 	5 	6 
Description:DRAWER BACK PANEL QTY:3pcs Dimension:450x130x9mm	Description:DRAWER FRONT PANEL QTY:3pcs Dimension:470x320x15mm	Description:LEFT SIDE PANEL QTY:1pc Dimension:1070x176x15mm
7 	8 	9 
Description:RIGHT SIDE PANEL QTY:1pc Dimension:1070x176x15mm	Description:TOP PANEL QTY:1pc Dimension:530x181x15mm	Description:BACK PANEL QTY:1pc Dimension:483x314x3mm
10 	11 	12 
Description:BACK PANEL QTY:1pc Dimension:483x314x3mm	Description:BACK PANEL QTY:1pc Dimension:483x314x3mm	Description:SUPPORT PANEL QTY:2pcs Dimension:472x30x15mm
13 	14 	
Description:SUPPORT PANEL QTY:1pc Dimension:472x35x15mm	Description:SUPPORT PANEL QTY:1pc Dimension:472x30x15mm	

# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

## Fixings

Ref	Dimensions	Qty
A	BOLT Ø5x38mm	8
B	BARREL NUT Ø7x10mm	8
C	DOWEL Ø6x30mm	4
D	SCREWS Ø3x25mm	36
E	DOOR AXIS Ø5x 16 mm	6
F	DOOR STOPPER Ø12x24mm	6
G	CAM BOLT Ø6x35mm	4
H	CAM LOCK Ø15x9mm	4

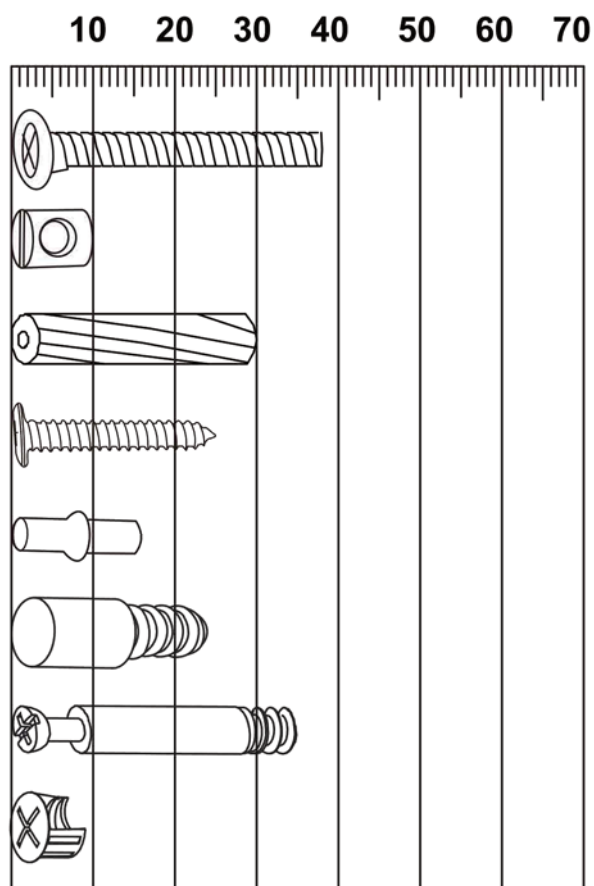

## Fixings (Not to scale)

Y	WALL FIXING HARDWARE	1
---	-------------------------	---





**CAUTION:** There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product .

If you keep the fittings in a bowl during assembly you will be less likely to lose them!

# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


## General Hints and Tips

## Don't screw too deep

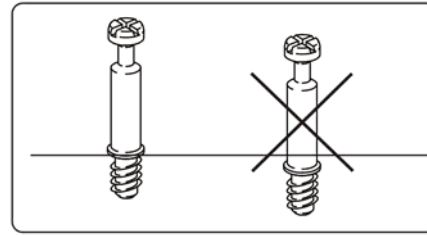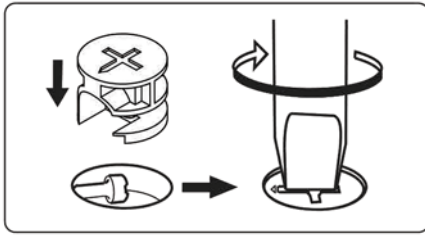



## Layout Parts on Soft Surface

Layout all part on a soft surface i.e. Rug, carpet or packaging carton

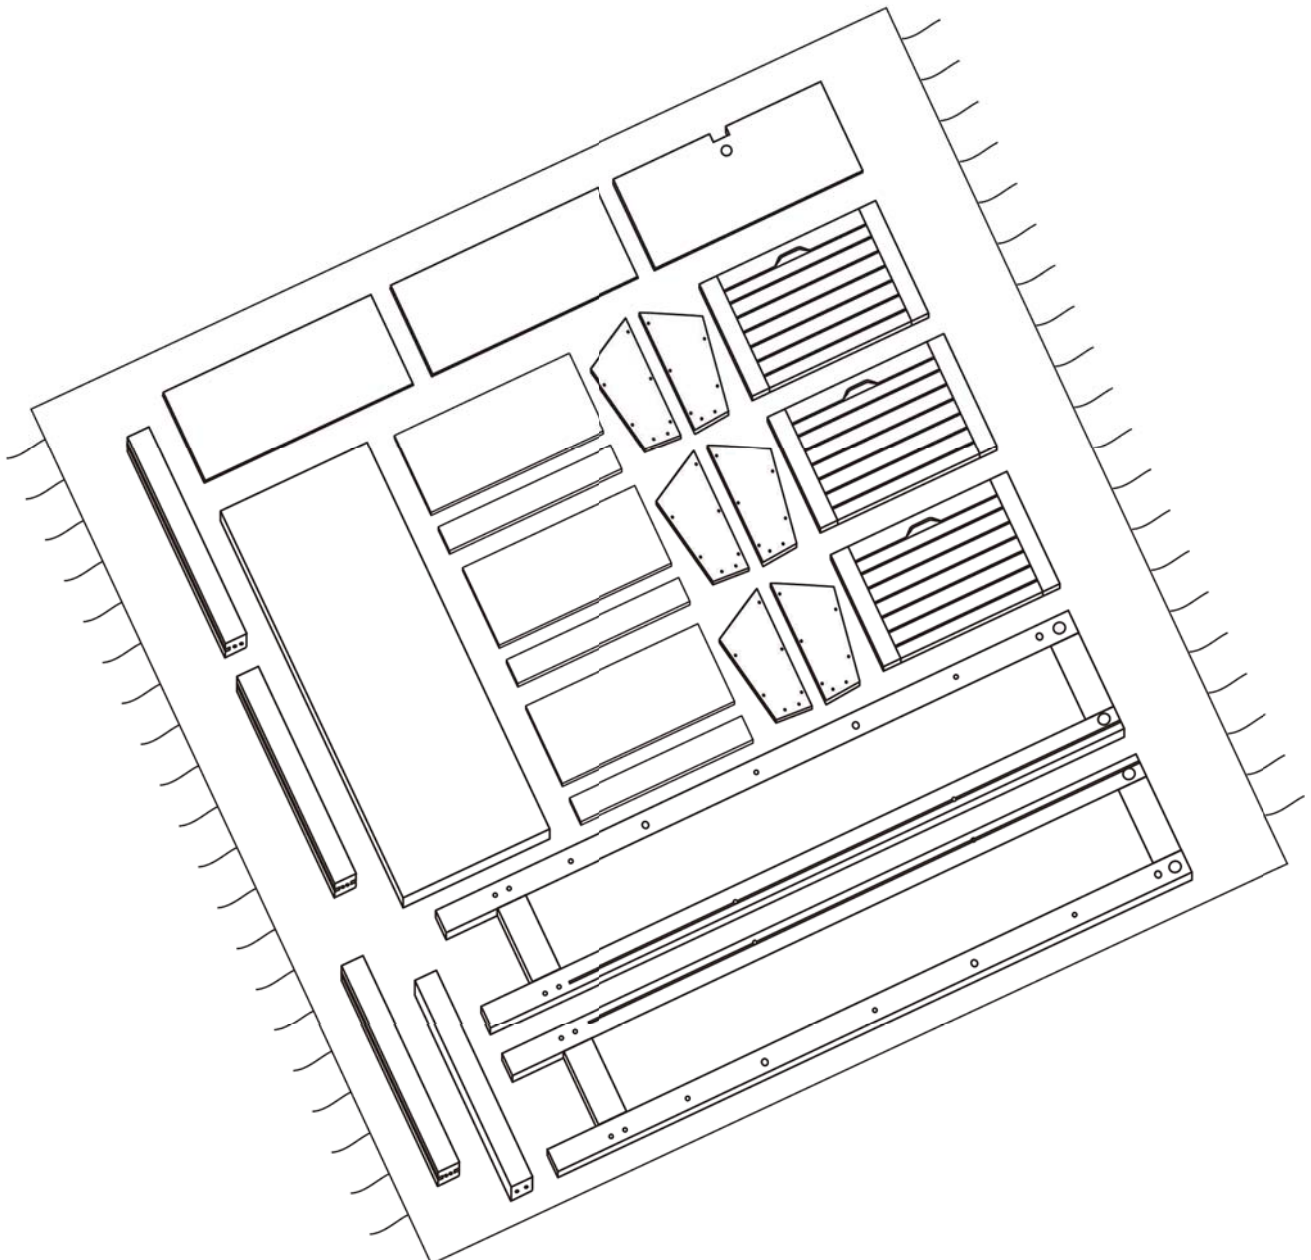

# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

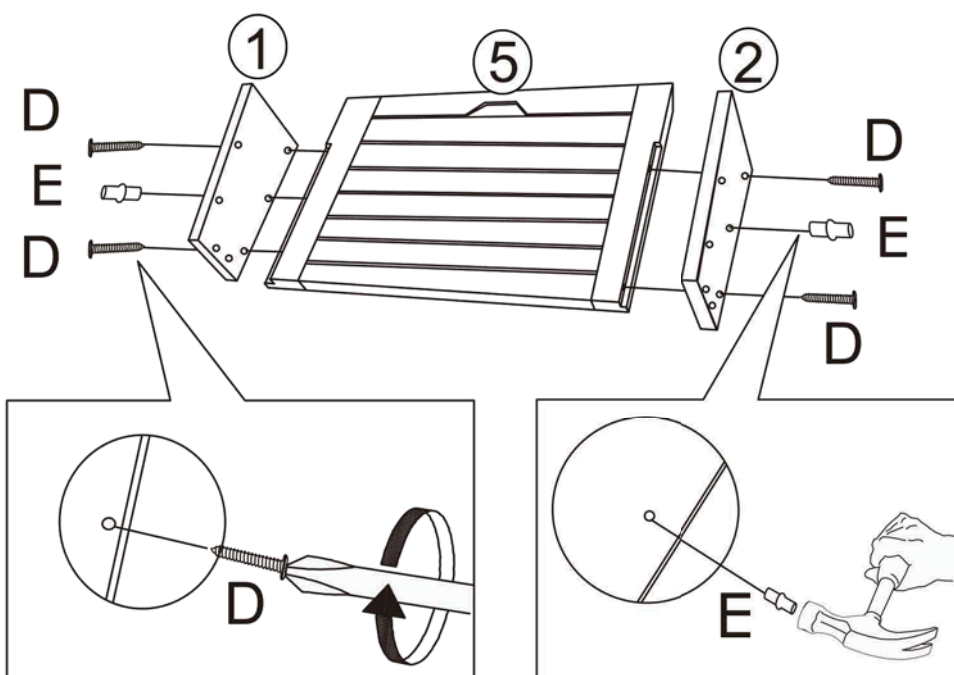STEP 1	PARTS REQUIRED
 <p style="text-align: right; font-size: 2em;">x3</p>	<p>1: Right Drawer Bracket x3                  2: Left Drawer Bracket x3                  5: Drawer Front Panel x3</p> <p>D: Screws x12                  E: Door Axis x6</p>

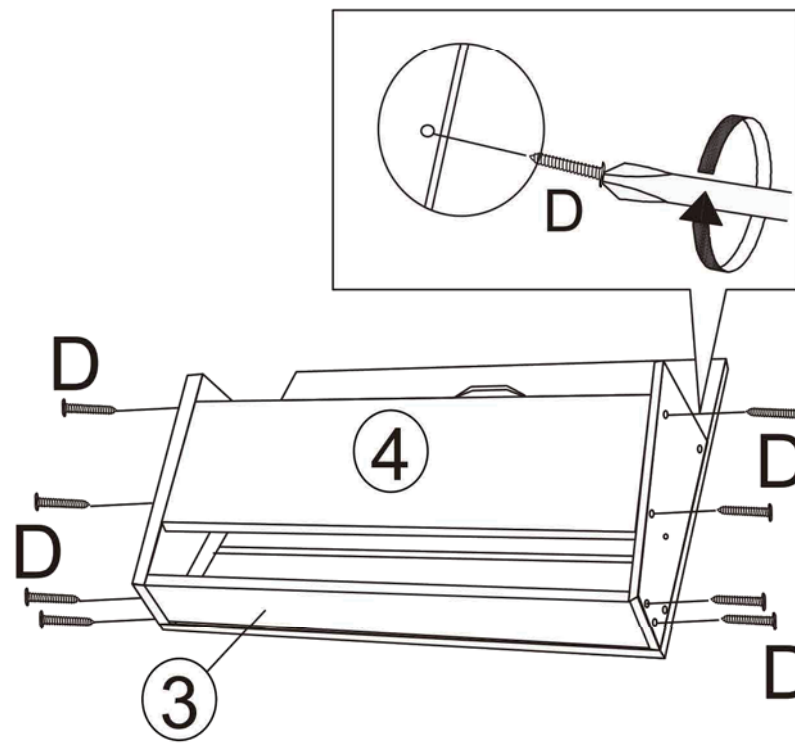STEP 2	PARTS REQUIRED
	<p>3: Drawer Bottom Panel x3                  4: Drawer Back Panel x3</p> <p>D: Screws x24</p>


# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

## STEP 3

## PARTS REQUIRED

6: Left Side Panel x1  
12: Support Panel x2  
13: Support Panel x1  
14: Support Panel x1

A: Bolt x4  
B: Barrel Nut x8  
C: Dowel x4

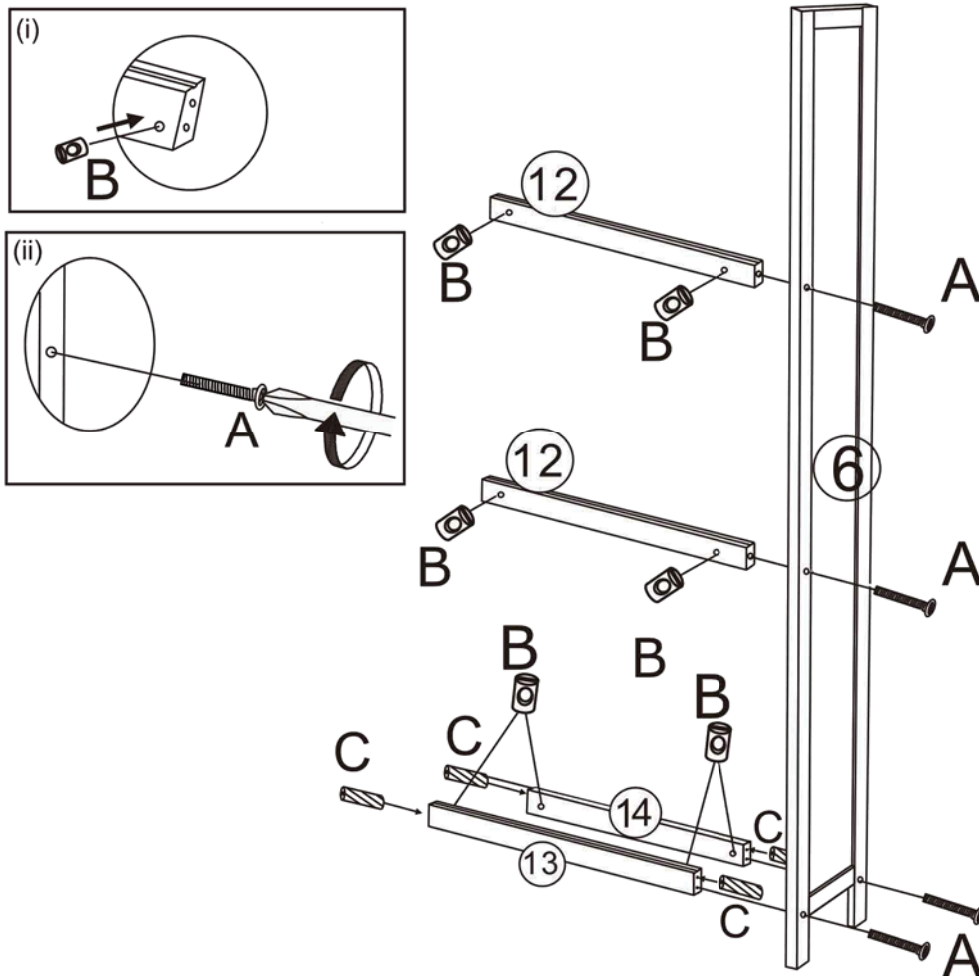


## STEP 4

## PARTS REQUIRED

9: Back Panel x1  
10: Back Panel x1  
11: Back Panel x1


F: Door Stopper x3

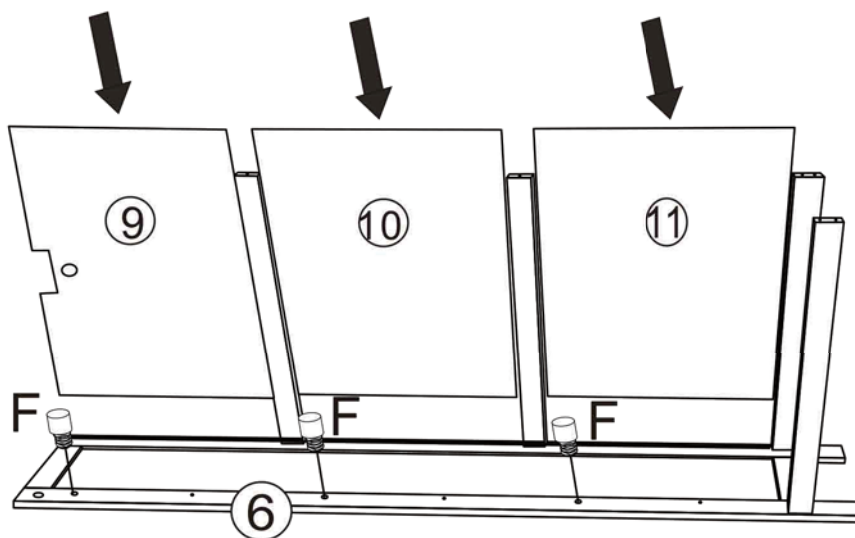

# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


## STEP 5

## PARTS REQUIRED

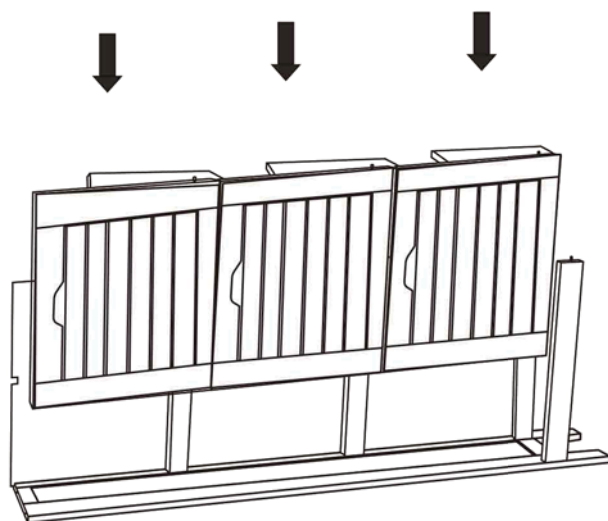

## STEP 6

## PARTS REQUIRED

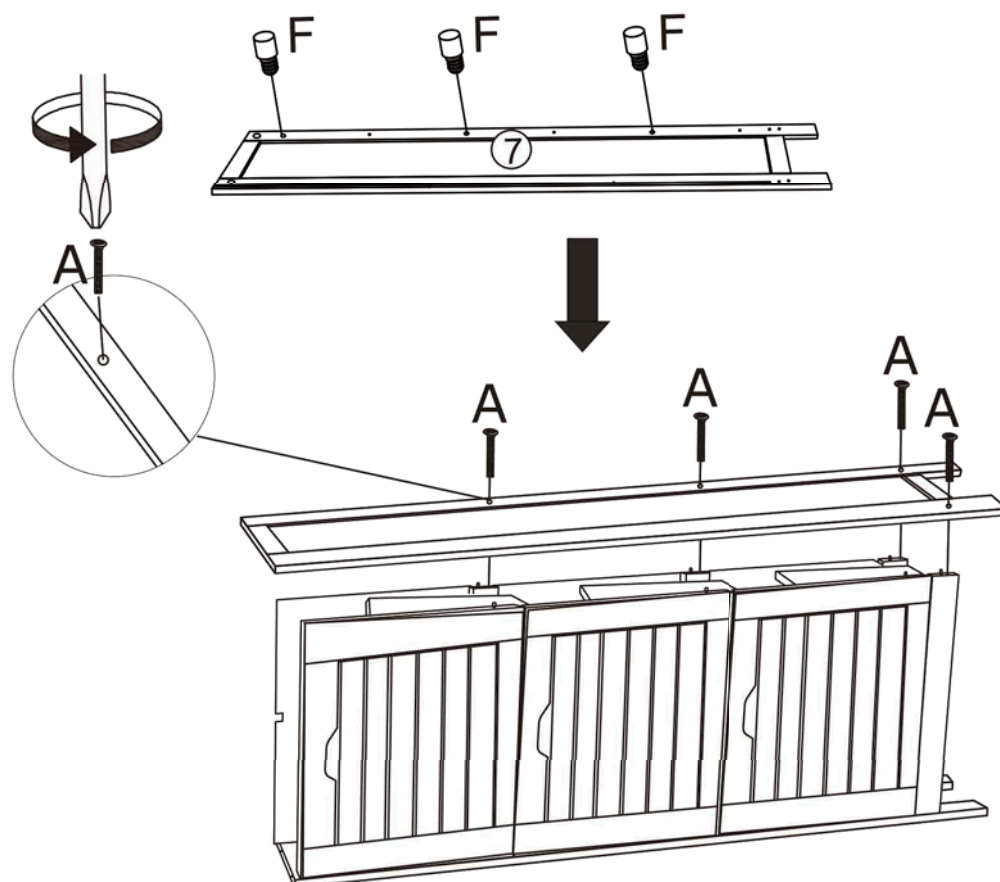



7: Right Side Panel x1

A: Bolt x4

F: Door Stopper x3

# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

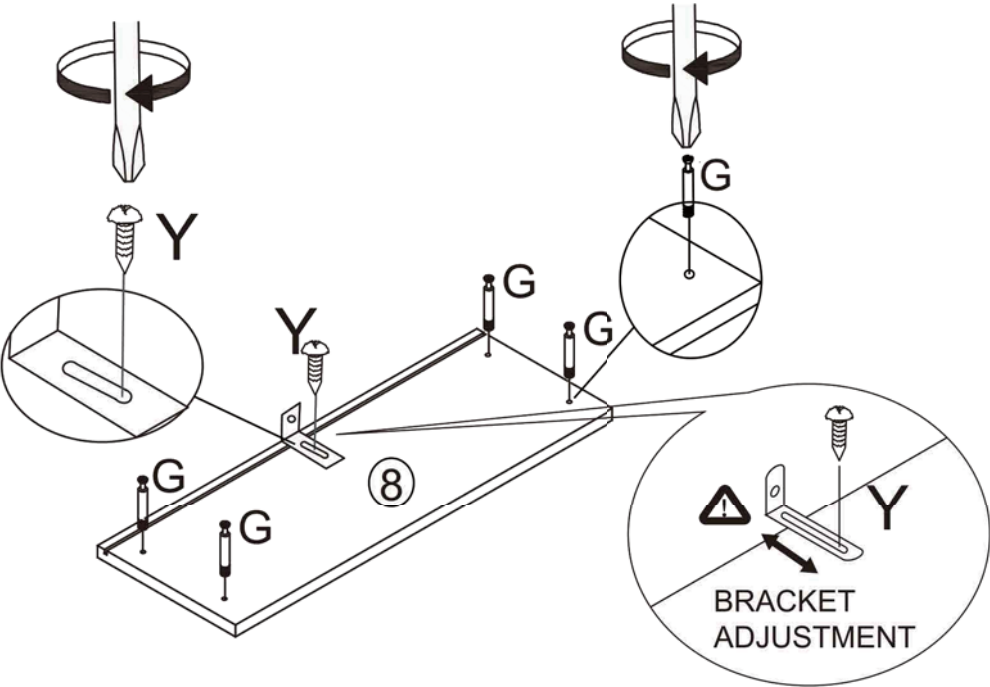STEP 7	PARTS REQUIRED
	<p>8: Top Panel x1</p> <p>G: Cam Bolt x4</p> <p>Y:Wall Fixing x1</p>

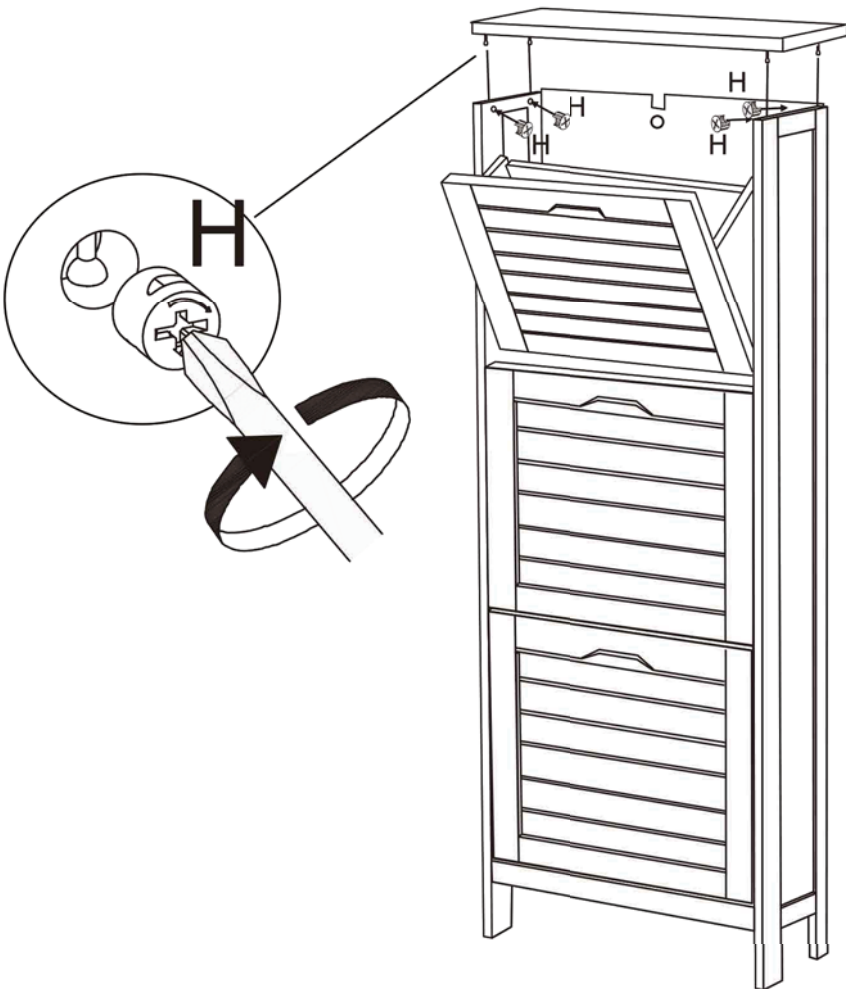
STEP 8	PARTS REQUIRED
	<p>H: Cam Lock x4</p>

# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


## WALL STRAPS

## PARTS REQUIRED


i)

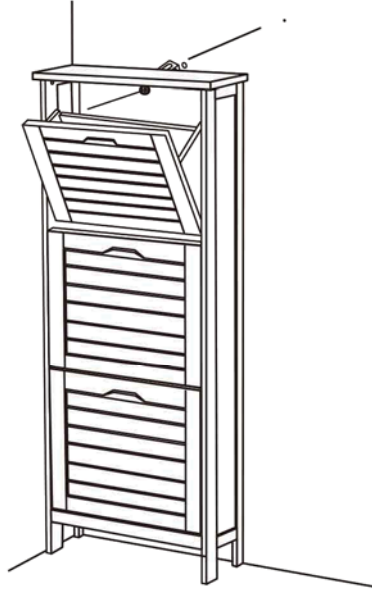

ii)

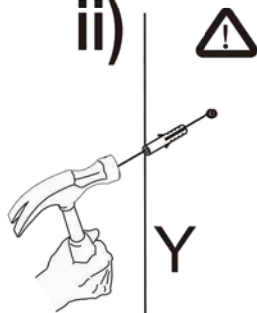

iii)

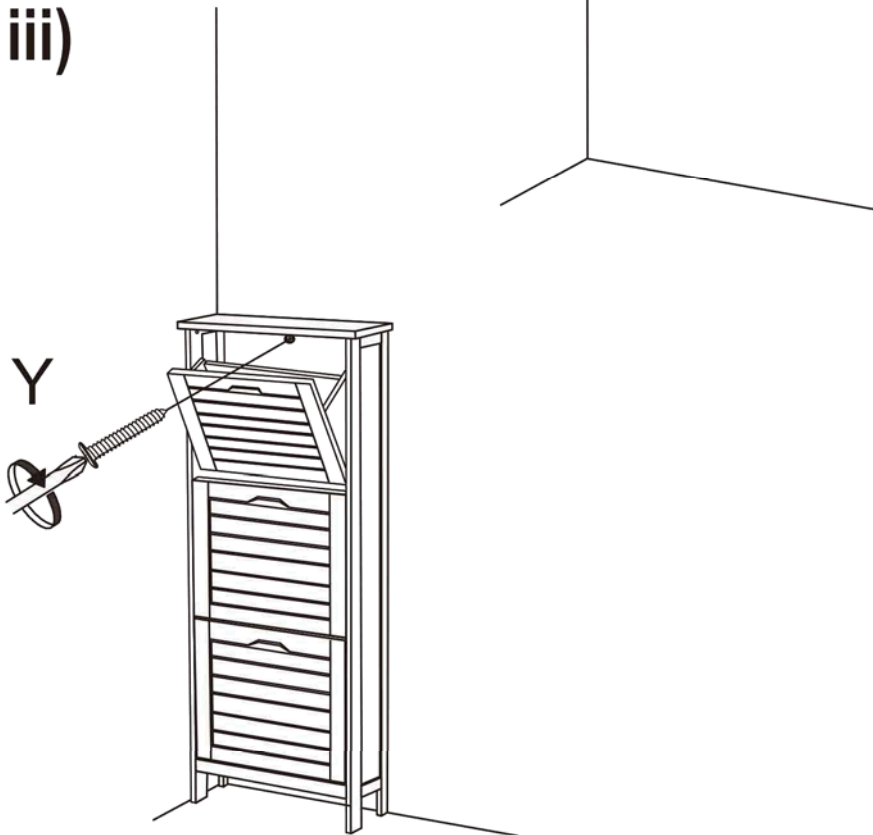

Y:Wall Fixing x1



Warning: Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.


# BERGEN THREE TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

## Complete Assembly

Your **BERGEN THREE TIER SHOE CABINET** is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage.

Also, make sure the connectors are tight and secure.

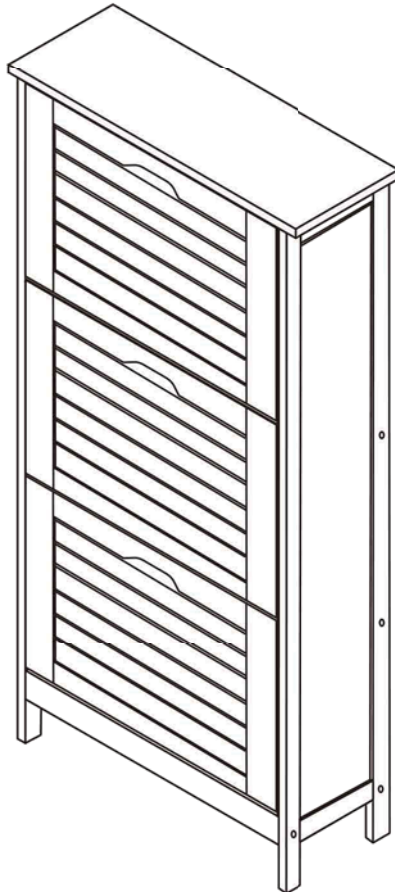

**Keep instructions for future reference**

