
Thank you for purchasing the COLONIAL 2 DOOR DELUXE CUPBOARD. Please read the instructions carefully to ensure safe operation of the product.

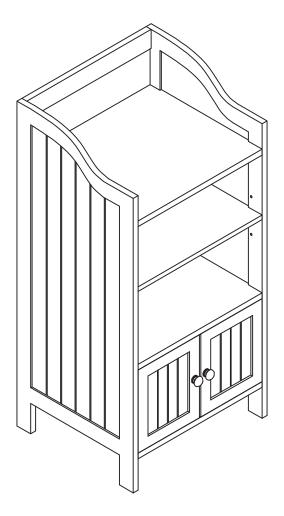


W410 x D355 x H870mm COLOUR: WHITE

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required:







Batch No.: WMI 16211 (PO# 2349)

Page 1 of 12

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools are not included.
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.

WARNINGS

- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.
- We recommend the use of the wall fixings provided for safety reasons.
 N.B. If in doubt please consult a qualified tradesperson. Warning: Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.
- It is essential that this unit is fixed to a wall with the fixings provided.


CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

Batch No.: WMI 16211 (PO# 2349)

Page 2 of 12

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.

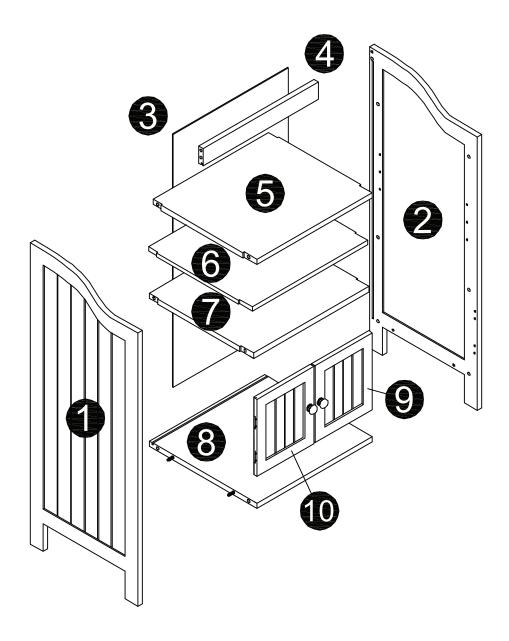


Batch No.: WMI 16211 (PO# 2349) Page 3 of 12

Parts and Fittings Checklist

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from small children.

Parts

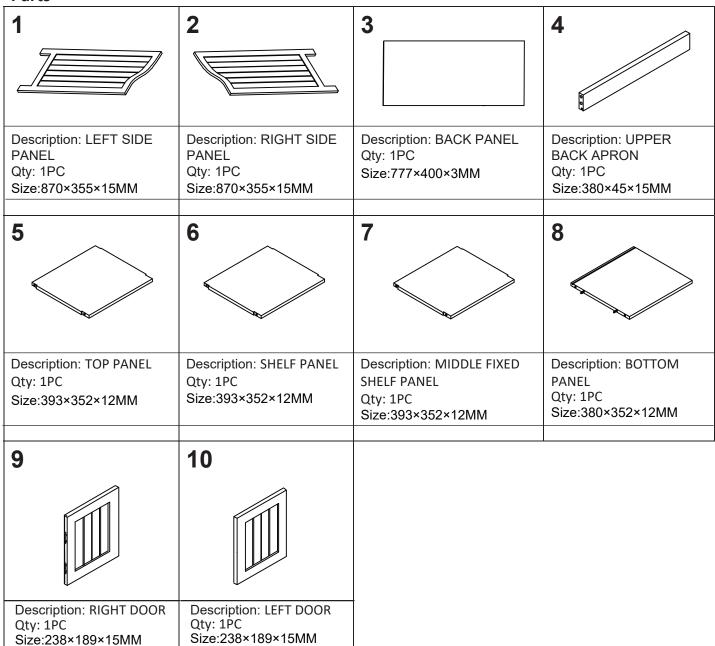


Batch No.: WMI 16211 (PO# 2349)

Page 4 of 12


Fixings (to scale)

Ref	Dimensions	Qty
Α	Wood Dowel-Ø5.8x30	6
В	Cam Bolt-Ø6x35	14
С	Screw-Ø3x12	21
D	Screw-ø3x12	12
E	Bolt-Ø4x16	2
F	Cam-15x10	14
G	Screw-Ø4x40	1

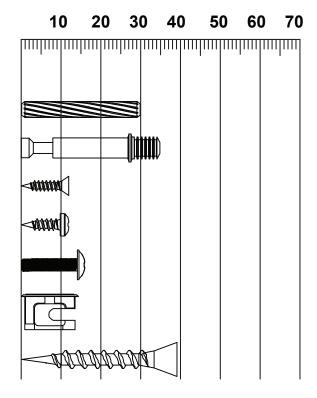

(Not to scale)


Н	Magnetic Catch	1
I	Metal Plate	2
J	Handle	2
K	Hinge	4
L	Shelf Support	4
М	Wall Fixing	1
N	Wall Anchor	1

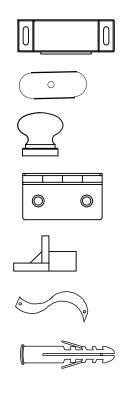


CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product.

If you keep the fittings in a bowl during assembly you will be less likely to lose them!


General Hints and Tips

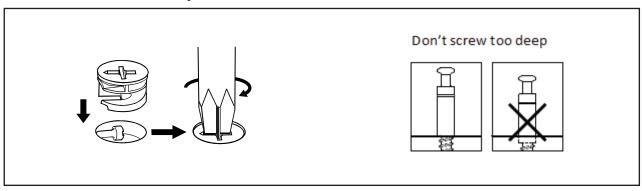


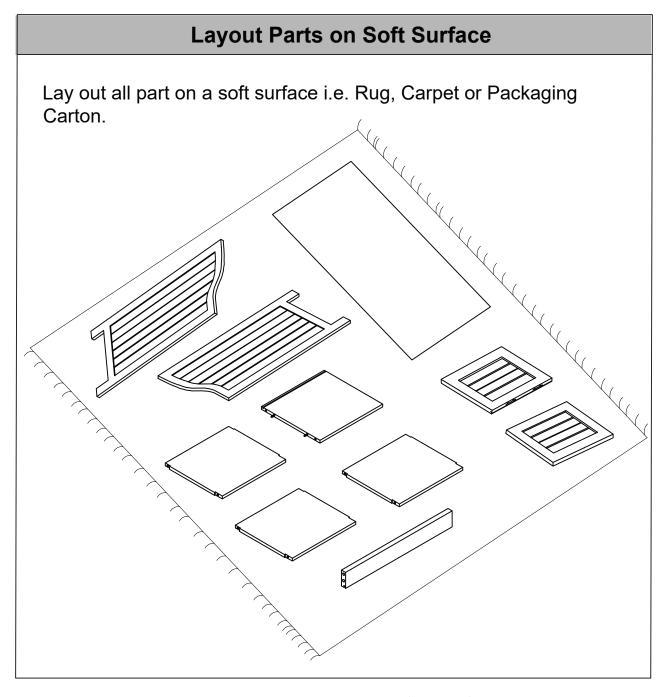


Batch No.: WMI 16211 (PO# 2349)


Page 6 of 12

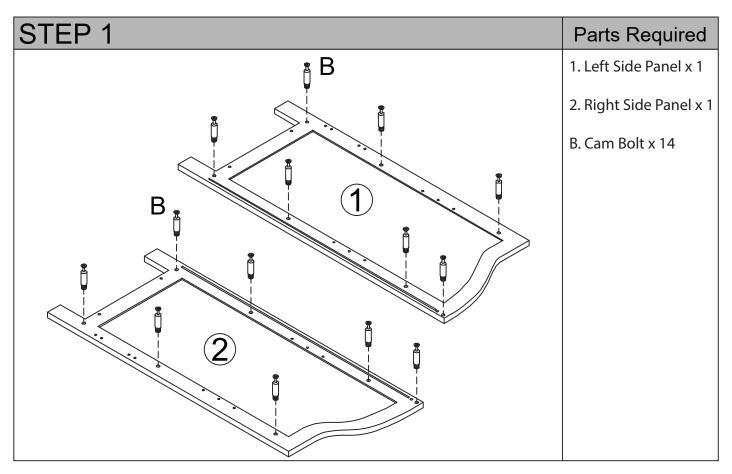

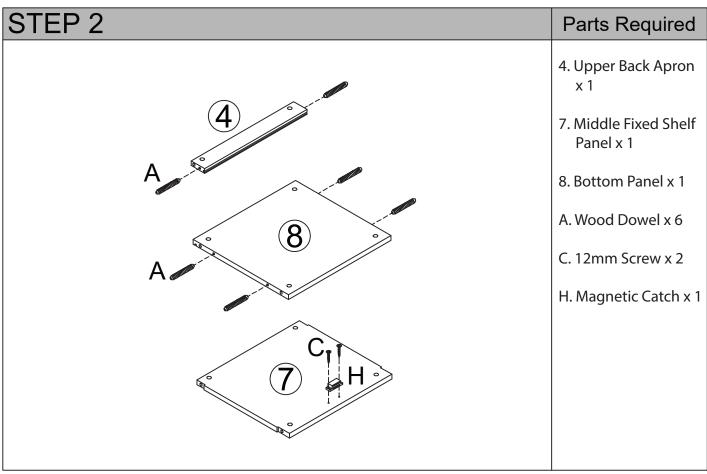



Batch No.: WMI 16211 (PO# 2349) Page 7 of 12

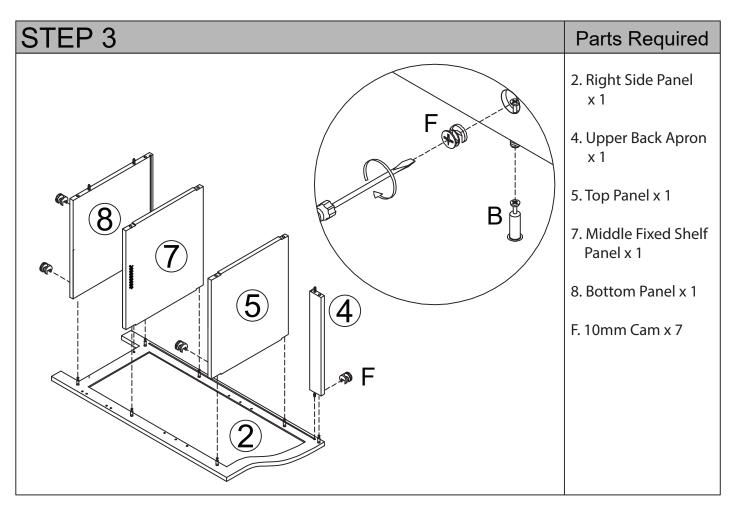

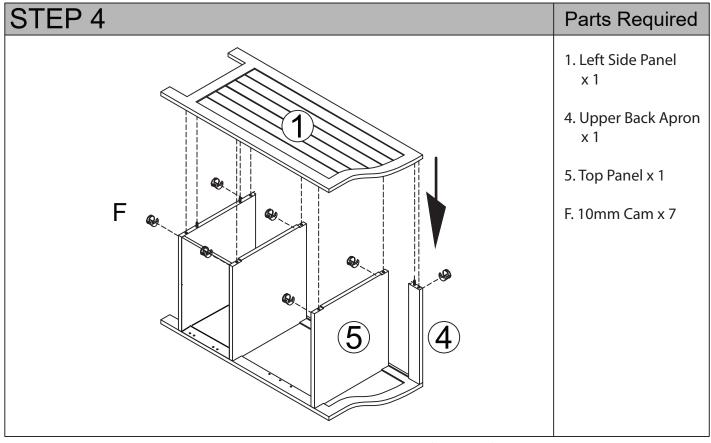


Batch No.: WMI 16211 (PO# 2349) Page 8 of 12

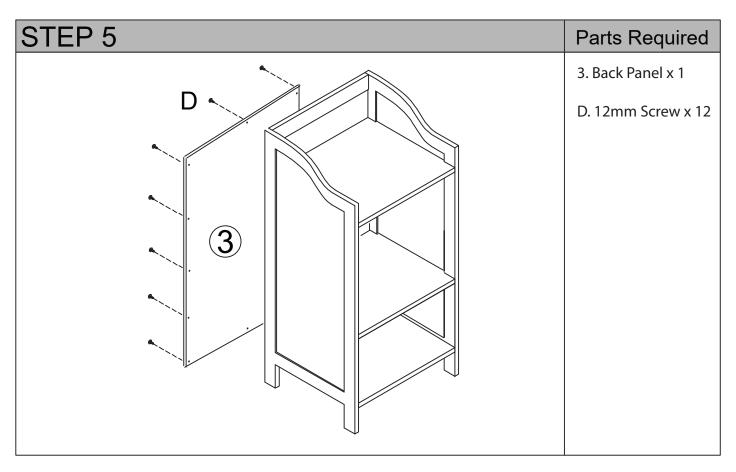


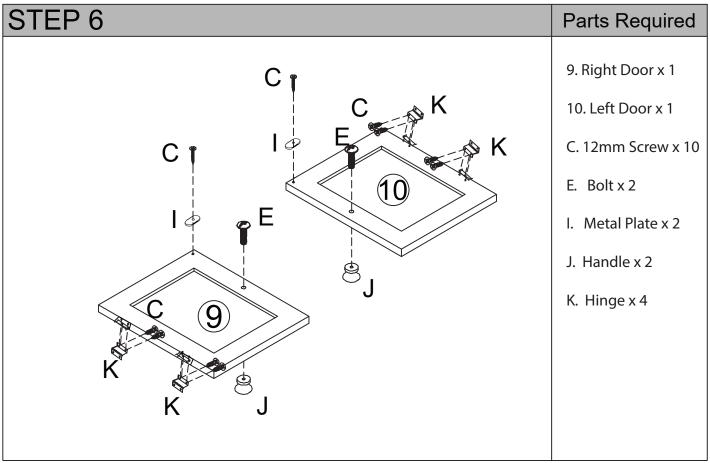

Batch No.: WMI 16211 (PO# 2349)


Page 9 of 12

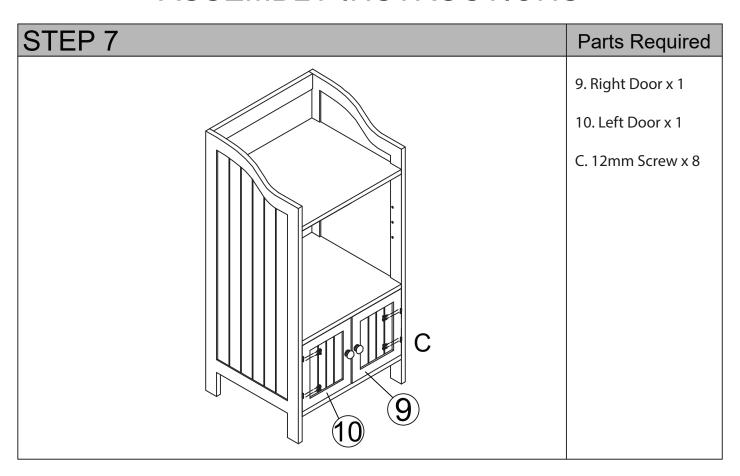

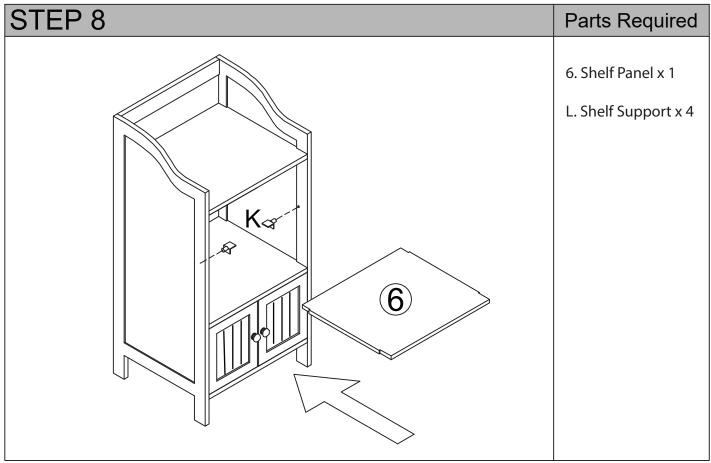

Batch No.: WMI 16211 (PO# 2349)

Page 10 of 12

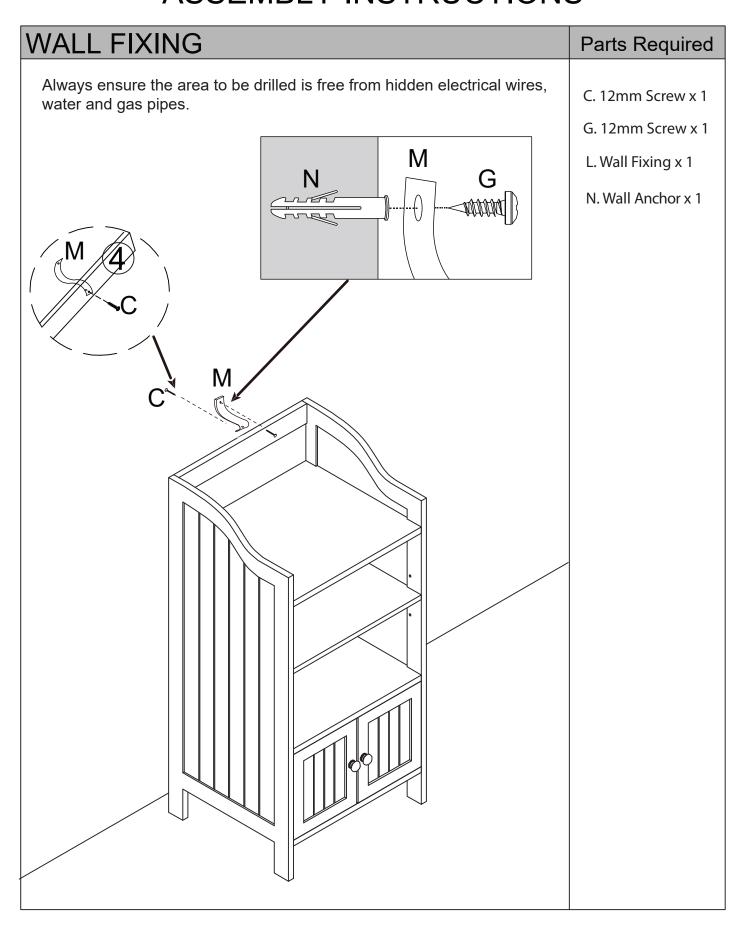


Batch No.: WMI 16211 (PO# 2349)

Page 11 of 12


Complete Assembly

Your COLONIAL 2 DOOR DELUXE CUPBOARD is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage. Also, make sure the connectors are tight and secure.

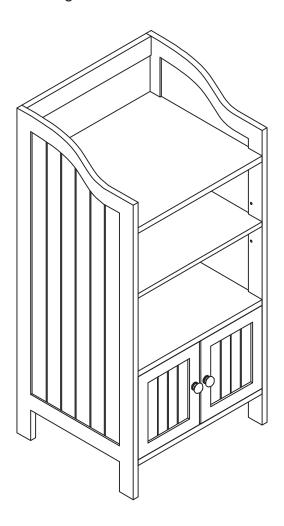

Keep instructions for future reference

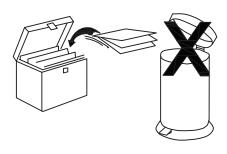

Batch No.: WMI 16211 (PO# 2349)

Page 12 of 12