

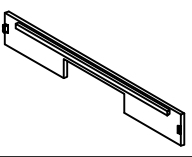

















## ASSEMBLY INSTRUCTIONS


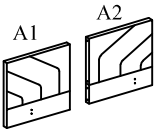















Page 1 of 5

CF 8950-J 4'6"



## PARTS LIST

<b>A</b> HEADBOARD (2 PCS) TOP 	<b>B</b> FOOTBOARD (1 PC) 	<b>C</b> SIDE RAIL (2 PCS) 	<b>D</b> CENTRAL RAIL (1 PC) 1930mm 	<b>E</b> SUPPORT LEG (2 PCS) 265mm 	<b>F</b> SIDE RAIL (4 PCS) SUPPORT 266 x 60 x 15mm 
<b>G</b> LEGS (2 PCS) 70 x 70 x 50(H) 	<b>H</b> FOOTBOARD (1 PC) FRONT PANEL ( WITH LABEL 1) 	<b>I</b> FOOTBOARD (1 PC) BACK PANEL ( WITH LABEL 2) 	<b>J</b> FOOTBOARD & SIDE RAIL SIDE PANEL (6 PCS) ( WITH LABEL 3) 	<b>K</b> FOOTBOARD (1 PC) BOTTOM PANEL ( WITH LABEL 4) 	<b>L</b> SIDE RAIL (2 PCS) FRONT PANEL ( WITH LABEL 5) 
<b>M</b> SIDE RAIL (2 PCS) BACK PANEL ( WITH LABEL 6) 	<b>N</b> SIDE RAIL (2 PCS) BOTTOM PANEL ( WITH LABEL 7) 	<b>O</b> BOTTOM PANEL (7 PCS) BIG SUPPORT ( WITH LABEL 8) 	<b>P</b> BOTTOM PANEL (4 PCS) SMALL SUPPORT ( WITH LABEL 9) 	<b>Q</b> SLAT (13 PCS) 1397mm 	<b>R</b> HEADBOARD (2 PCS) BOTTOM R1 R2 



## HARDWARE LIST

<b>1</b> JCBC M6 X 40mm(2 PCS) 	<b>2</b> JCBB M8 x 16 mm (8 PCS) (PRE-ATTACHED) 	<b>3</b> ALLEN KEY M4 X 65mm (1 PC) 	<b>4</b> ALLEN KEY M5 X 70mm (1 PC) 	<b>5</b> CSK M3.5 x 16mm (60 PCS) 
<b>6</b> CSK M4 x 28mm (8 PCS) 	<b>7</b> CSK M4 x 32mm (65 PCS) 	<b>8</b> CSK M4 x 50mm (28 PCS) 	<b>9</b> ROLLER (14 PCS) 	<b>10</b> WOOD DOWEL 20MM (8 PCS) 
<b>11</b> POWER NAIL 6/8 (24 PCS) 	<b>12</b> SMALL ADJUSTER (2 PCS) 	<b>13</b> JCBC M6 X 50mm (10 PCS) 	<b>14</b> SPRING WASHERS (10 PCS) 	<b>15</b> FLAT WASHERS (10 PCS) 
<b>16</b> METAL STOPPER (6 PCS) 	<b>17</b> U BRACKET (1 PC) 			


Step 1 : Unzip the black non-woven fabric on the back of headboard bottom (R). Tighten the headboard bottom (R1) to headboard bottom (R2) as shown.

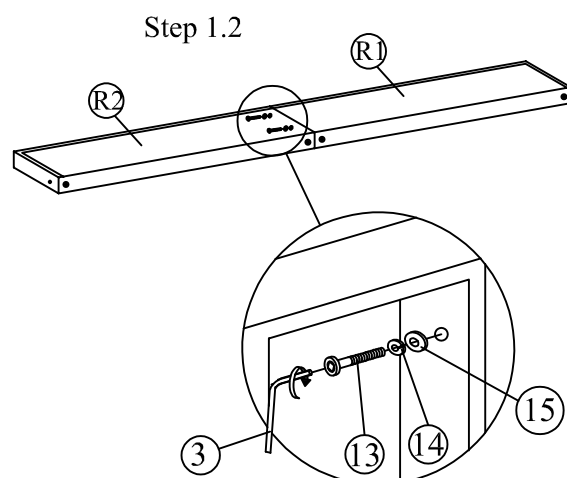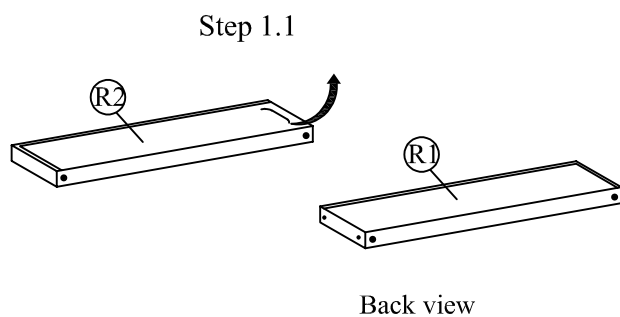


Step 2 : Unzip the black non-woven fabric on the back of headboard bottom (A). Tighten the headboard Upper (A1+A2) as shown.

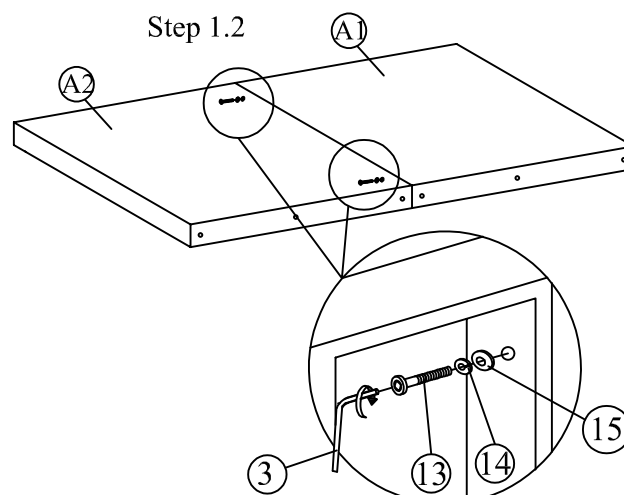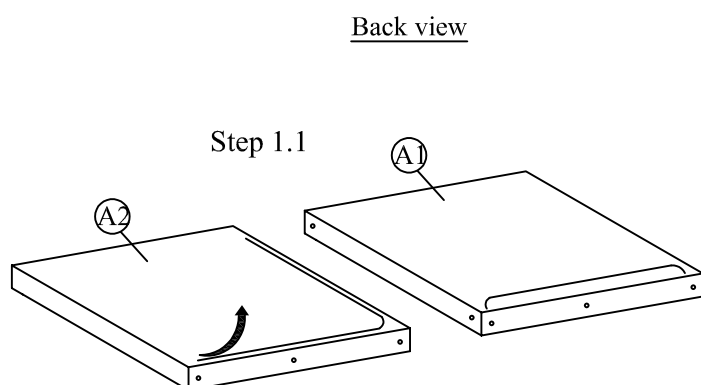


Step 3 : Unzip the black non-woven fabric on the back of headboard bottom (A1+A2). Tighten the headboard Upper (A1+A2) to headboard bottom (R1+R2) as shown.

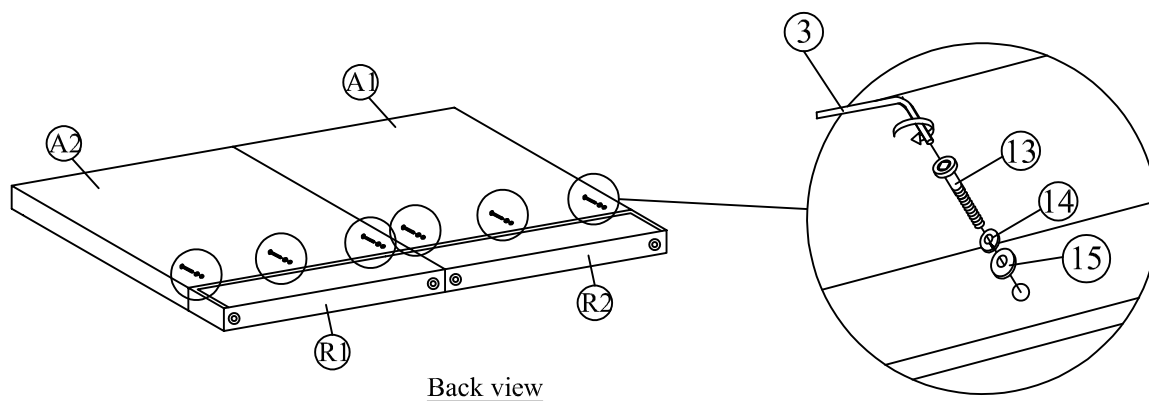


Step 4 : Attach U bracket (17) to headboard (A1+A2) as shown

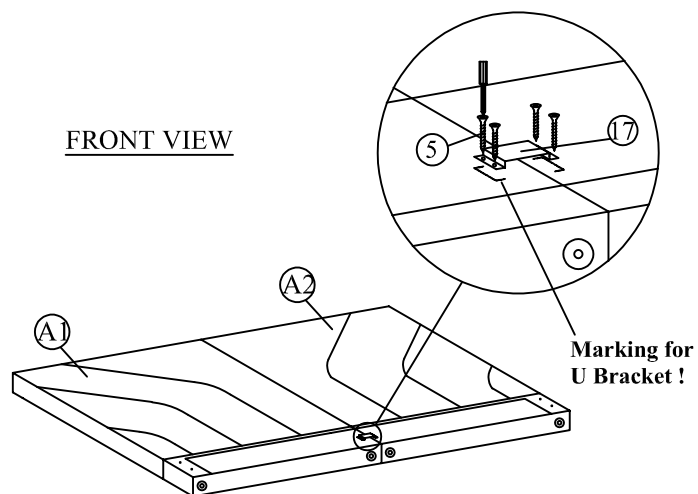


Step 5 : Tighten the legs (G) by using self tapping screws to both headboard (A) and footboard (B) as shown.

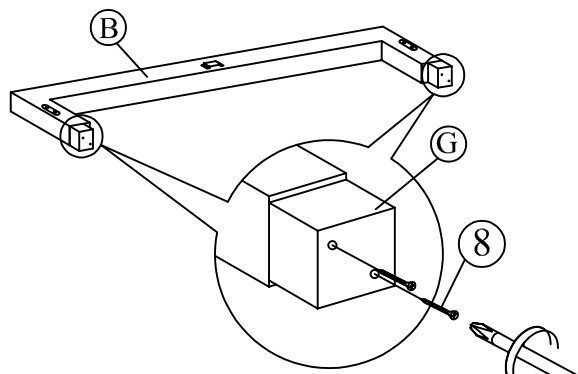


Step 6 : Attach wood dowel (10) to side rail (C). Tighten the side rail support (F) to the side rail (C) with screws (6) using screw driver (not included).

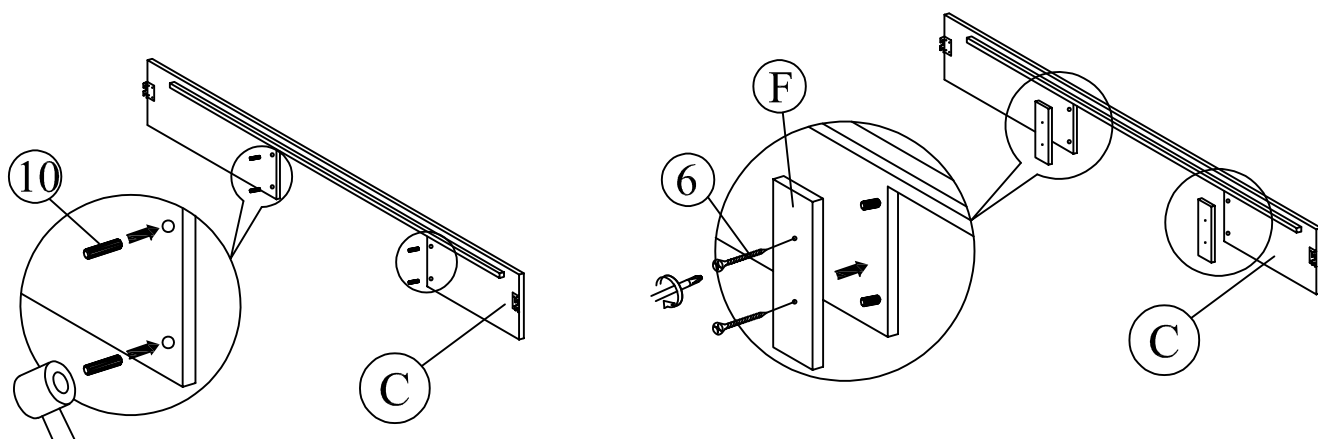


Step 7 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

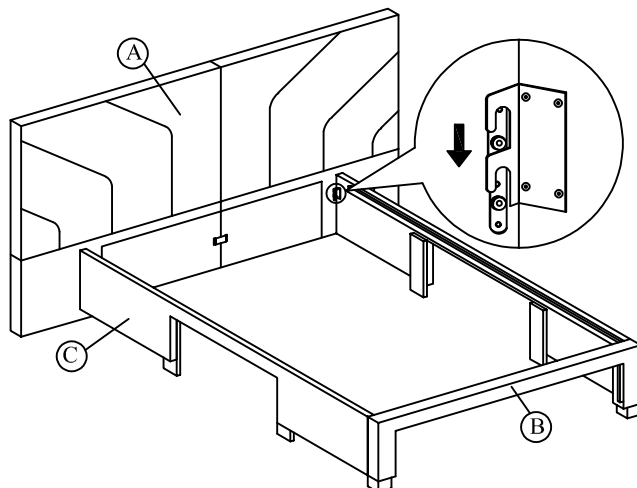


Step 8 : Attach the support legs (E) to the center rail (D) of the bed as shown. Slide the center rail (D) to the headboard (A) and footboard (B).

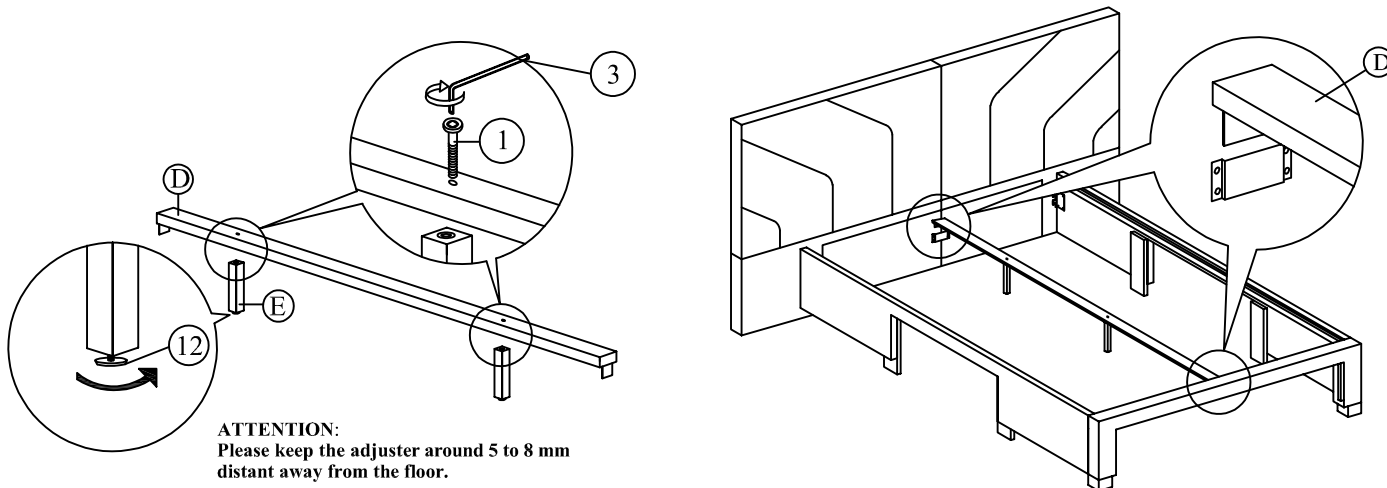


Step 9 : Tighten the footboard side panel (J) to the footboard front panel (H) and footboard back panel (I) with screws (8) using screw driver (not included).

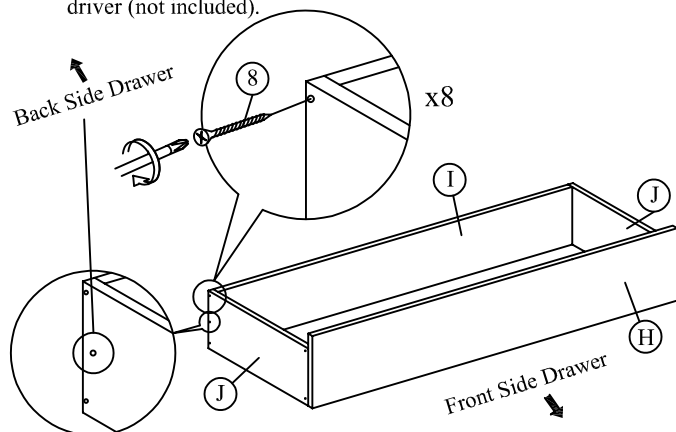


Step 10 : Slide the footboard bottom panel (K) to the set up drawer.

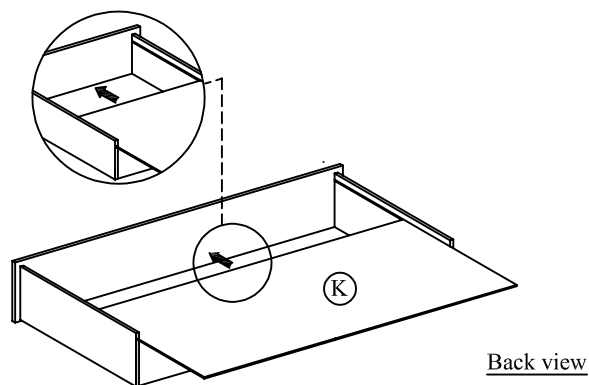


Step 11 : Tighten the bottom panel support (O & P) with screws (7) using screw driver (not included). Attach the bottom panel with Nail (11) using the hammer (not included).

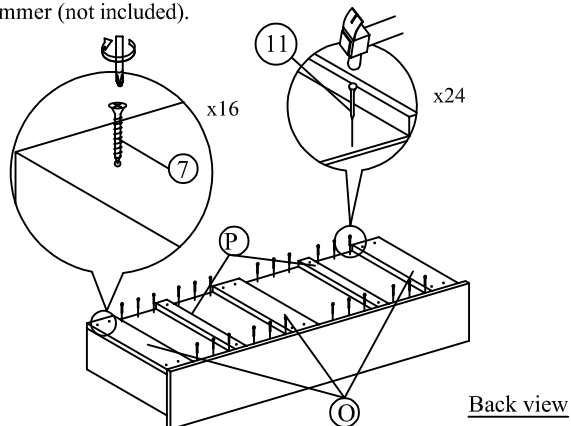


Step 12 : Tighten the roller (9) with screws (5) using screw driver (not included).

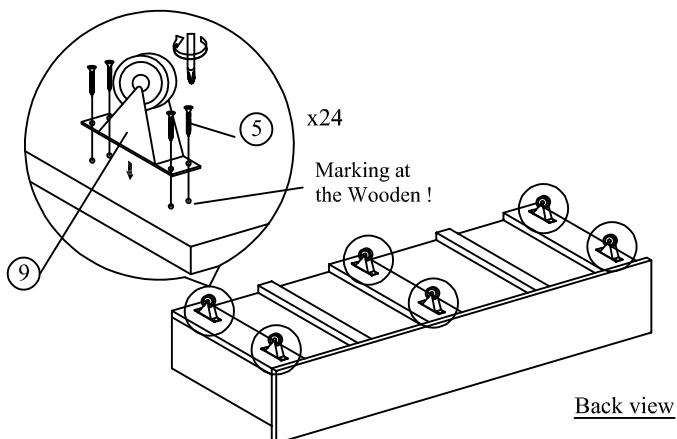


Step 13 : Tighten the side rail side panel (J) to the side rail front panel (L) and side rail back panel (M) with screws (8) using screwdriver (not included).

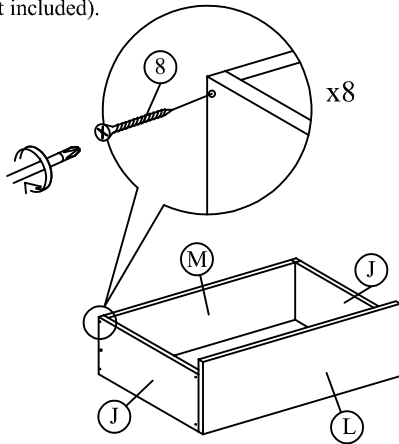


Step 14 : Slide the side rail bottom panel (N) to the set up drawer.

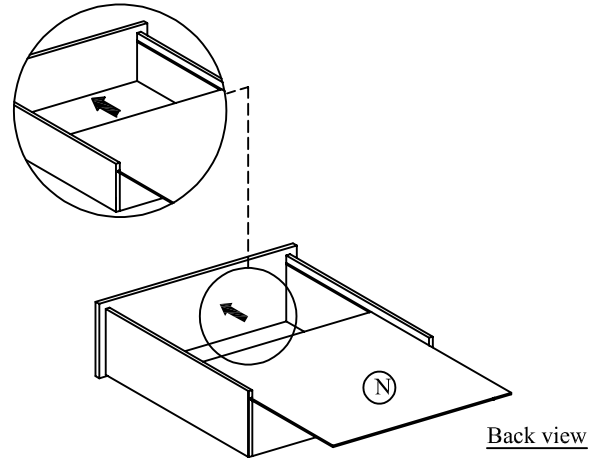

Step 15 : Tighten the bottom panel support (O & P) with screws (7) using screw driver (not included).

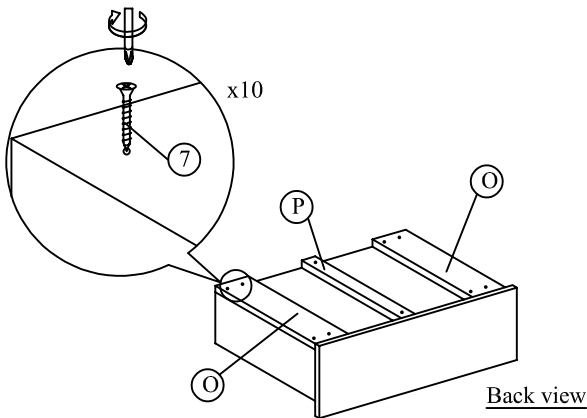

Step 16 : Tighten the roller (9) with screws (5) using screw driver (not included).

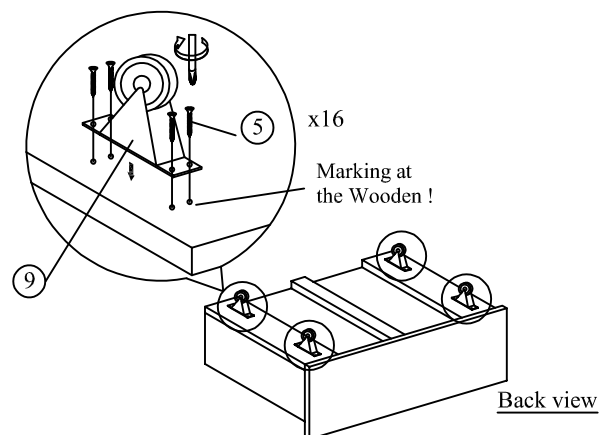

Step 17 : Affix the Slat (Q) to the side rail support wood and the center rail (D). Tighten all the 4 corner.

