



ASSEMBLY INSTRUCTION

Flair Felix Wooden Metal Bed Frame Single

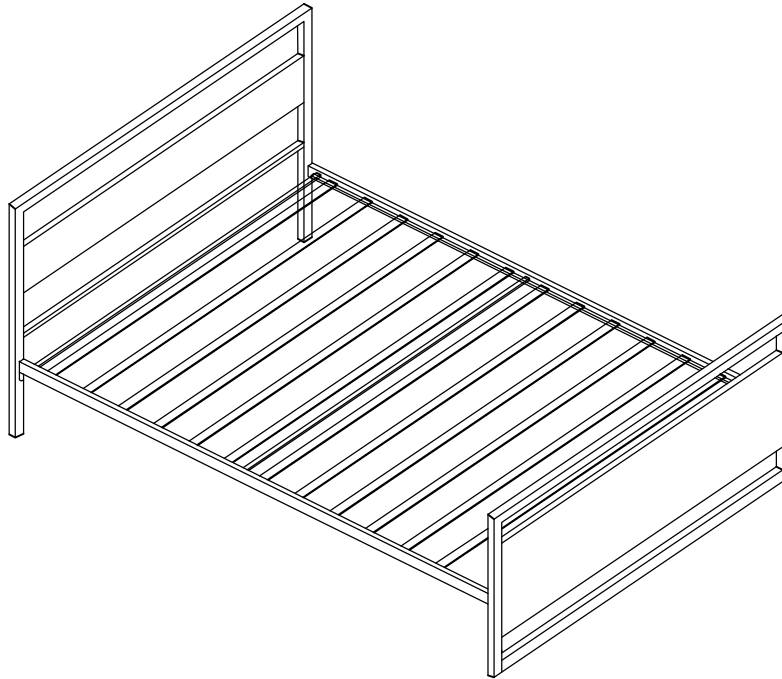


1		1	10		3
2		1	11		4
3		3	12		1
4		1	13		1
5		1	14		1
6		2			
8		12			

A		M8x40mm	8	H		M6	6
B		M8x10mm	24	I			24
C		M6x40mm	6	K			1
D		M6x20mm	24	L			1
E		M8	8				
F		M6	20				
G		M8	4				

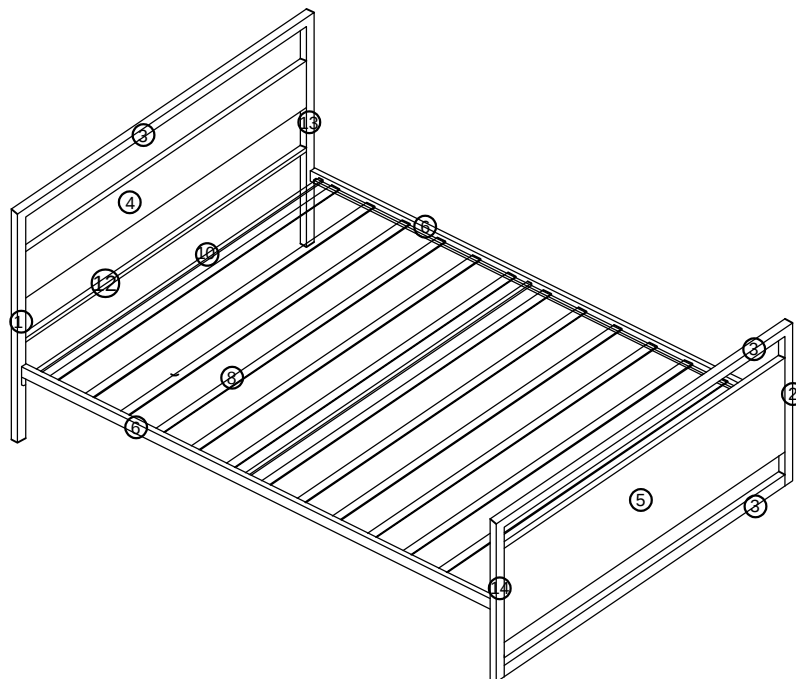


STEP 1

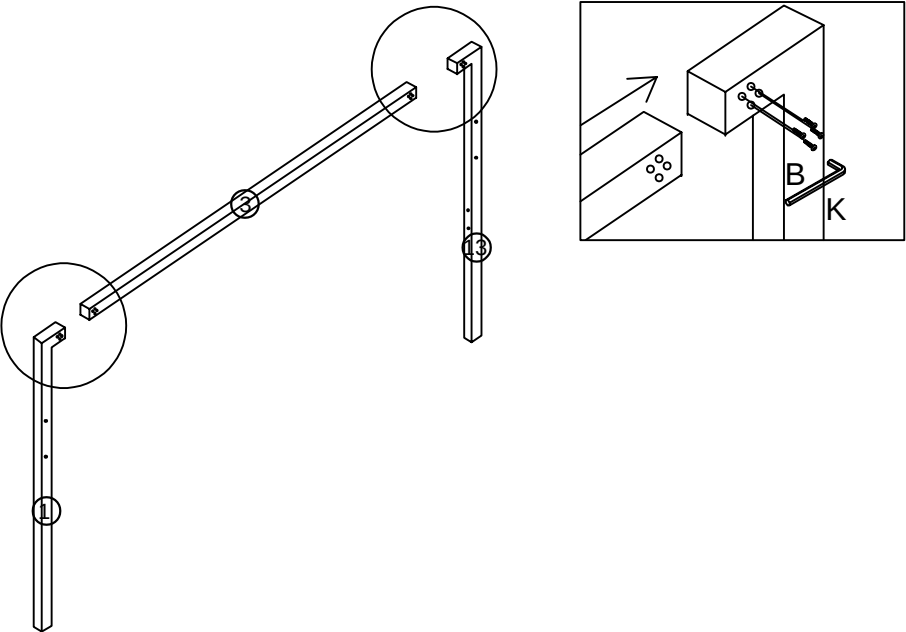



CODE	HARDWARE	QTY
B	 M8x10	8
K		1

STEP 2

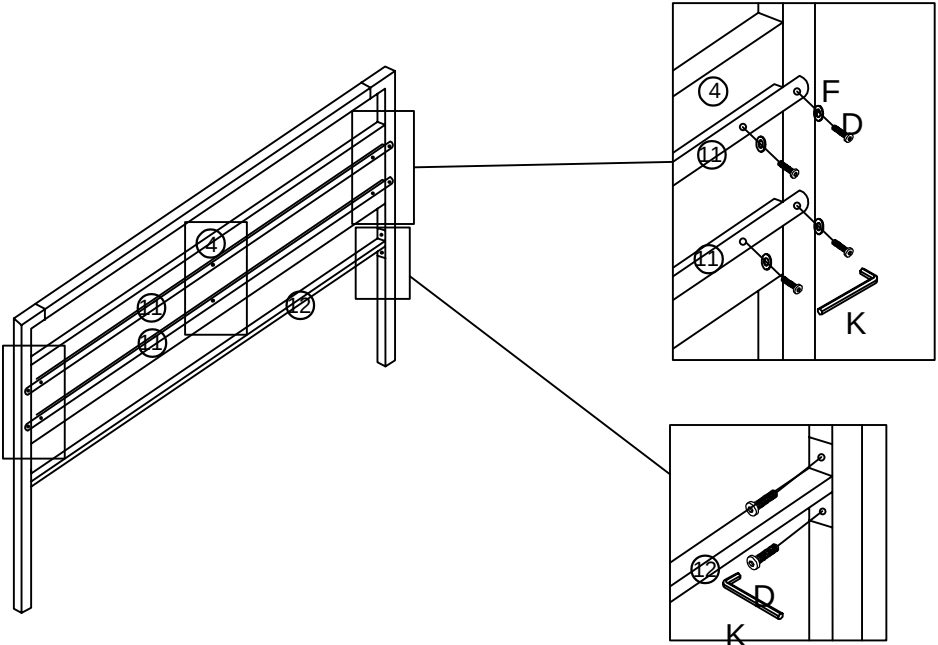



CODE	HARDWARE	QTY
D	 M6x20	14
F	 M6	10
K		1

STEP 3

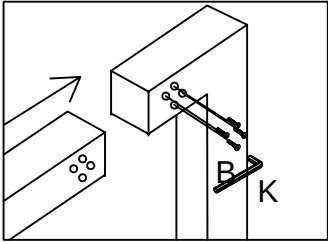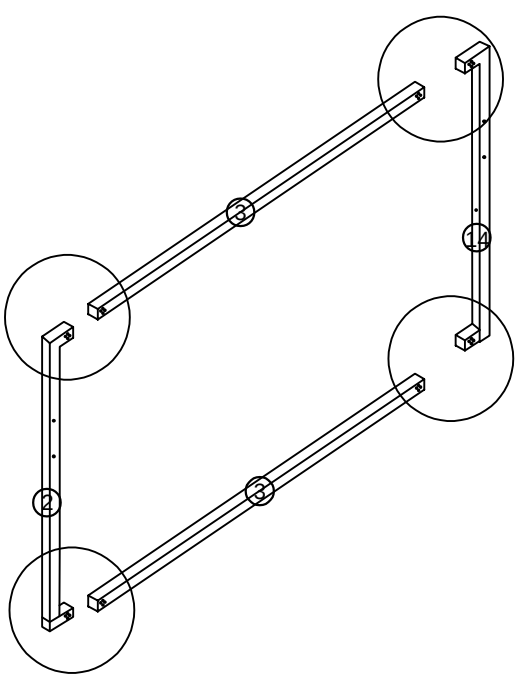


CODE	HARDWARE	QTY
B	 M8x10	16
K		1

STEP 4

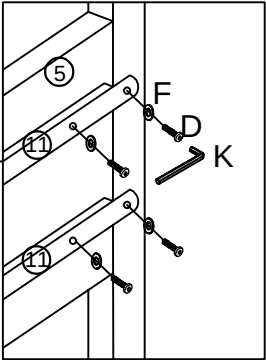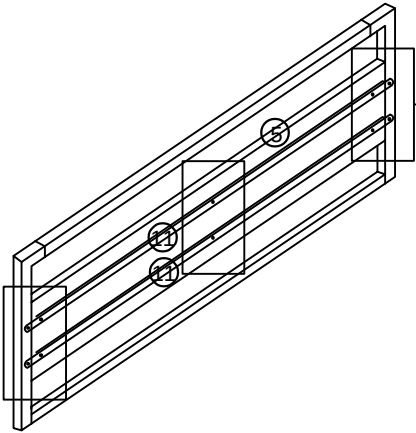


CODE	HARDWARE	QTY
D	 M6x20	10
F	 M6	10
K		1

STEP 5

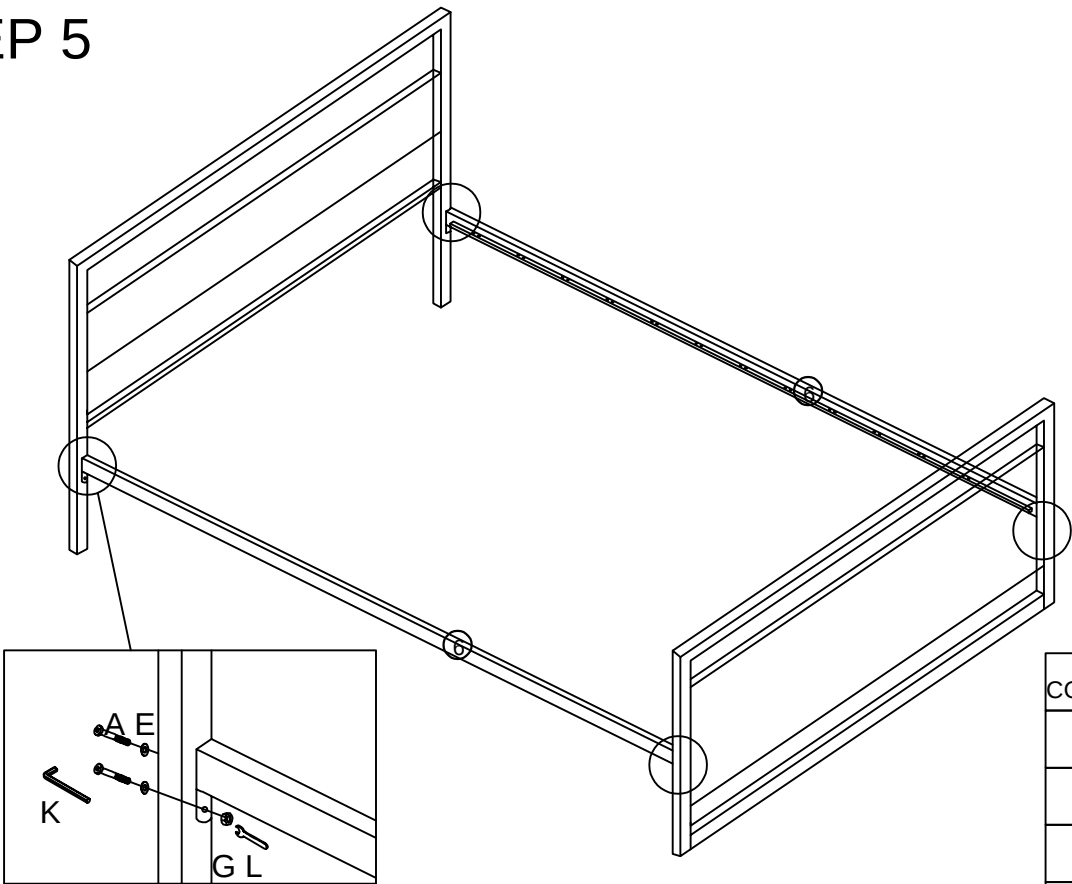


CODE	HARDWARE	QTY
A	 M8x40	8
E	 M8	8
G	 M8	4
K		1
L		1

STEP 6

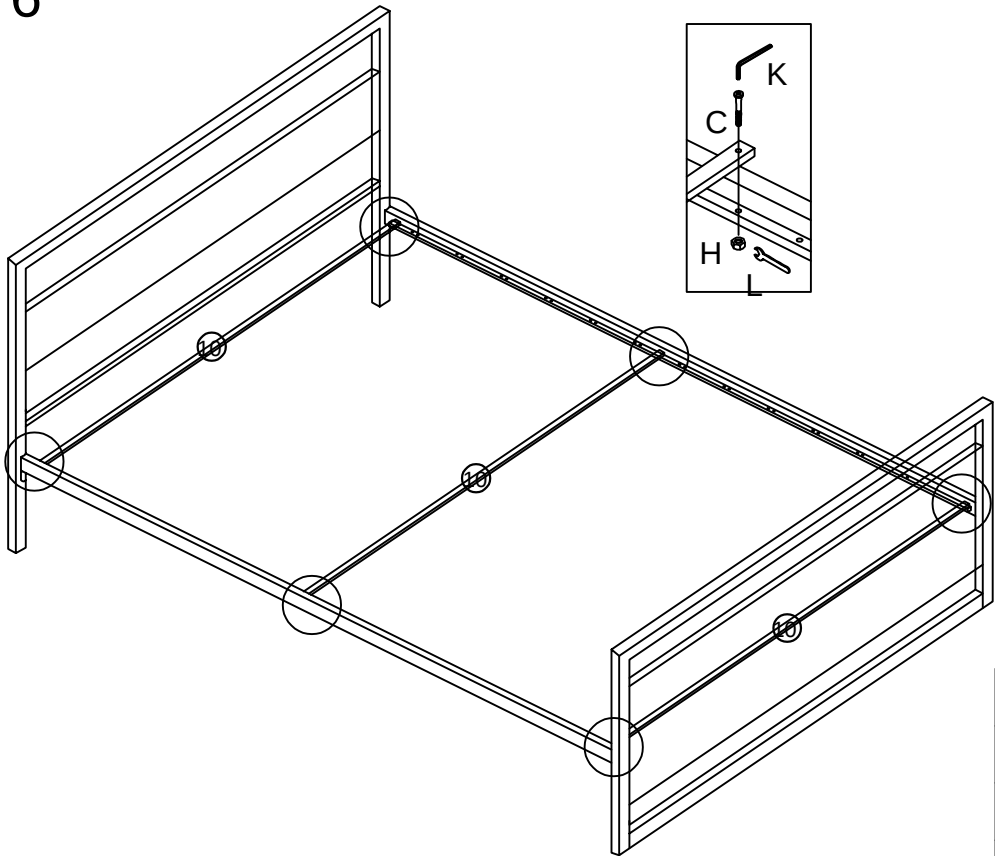

CODE	HARDWARE	QTY
C	 M6x40	6
H	 M6	6
K		1
L		1

STEP 7

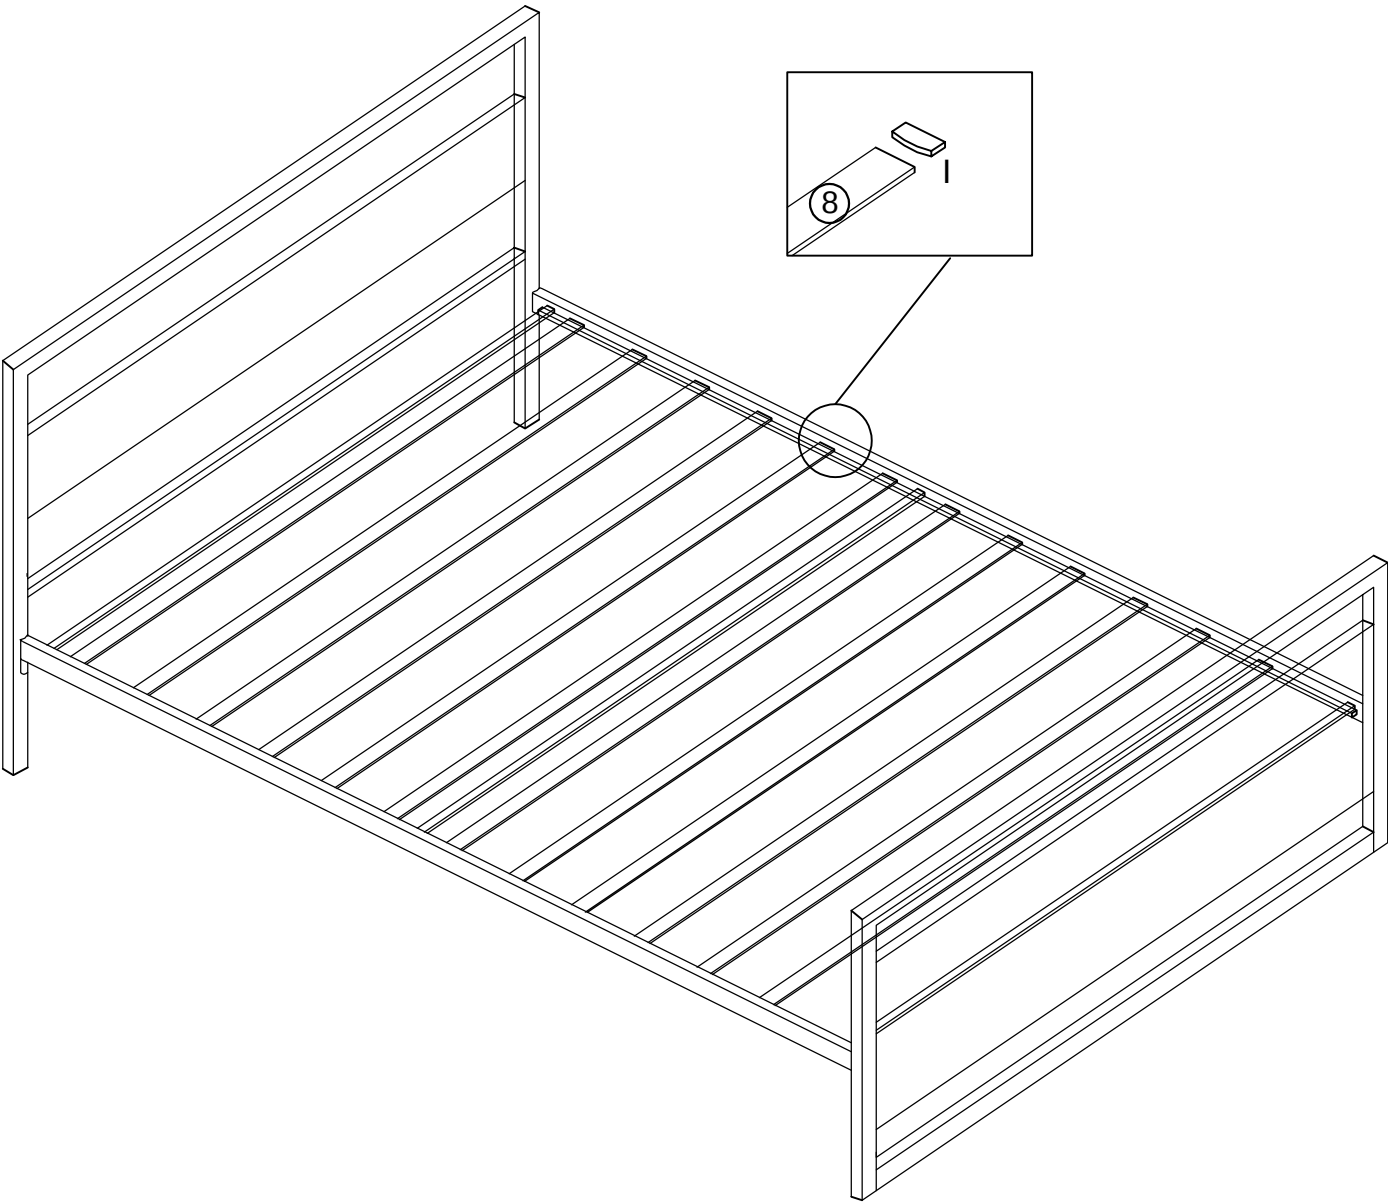

CODE	HARDWARE	QTY
1		24