



ASSEMBLY INSTRUCTION

Flair Rockford Wooden Metal 4 Poster Bed Frame Small Double

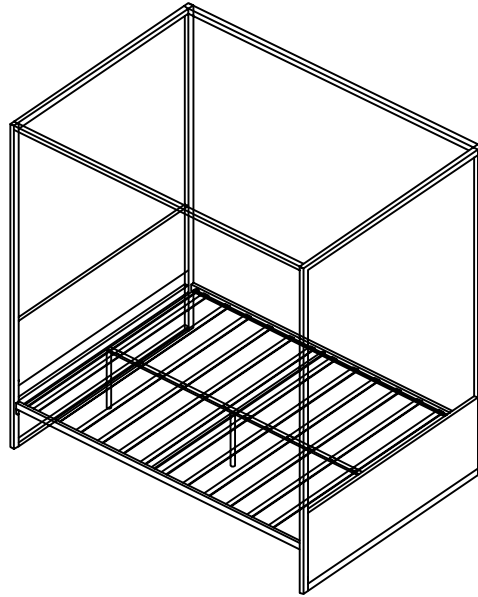


1		2	9		1
2		2	10		2
3		3	11		3
4		1	12		3
5		2	13		1
6		6	14		2
7		1	15		4
8		1			

B		M6x16mm	16	I		24
C		M8x70mm	12	J		12
D		M6x40mm	9	K		1
E		M8x45mm	12	L		1
F		M8	12	M		M4x15mm 14
G		M8	4	N		24
H		M6	6			

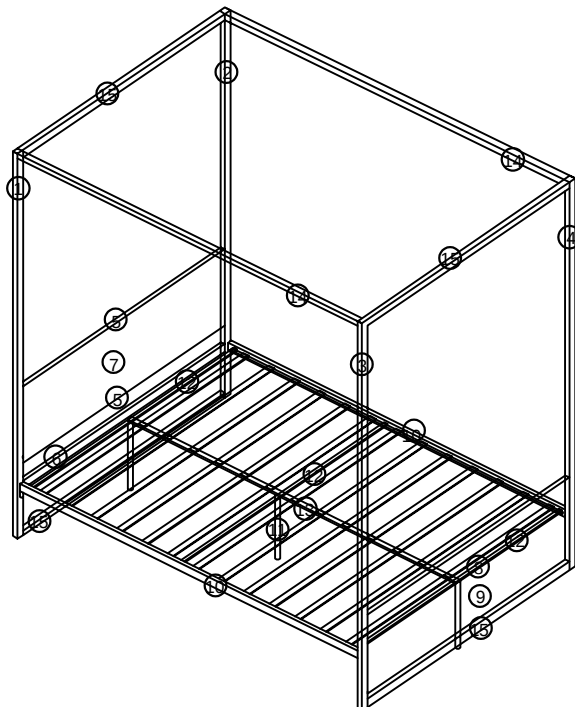


STEP 1

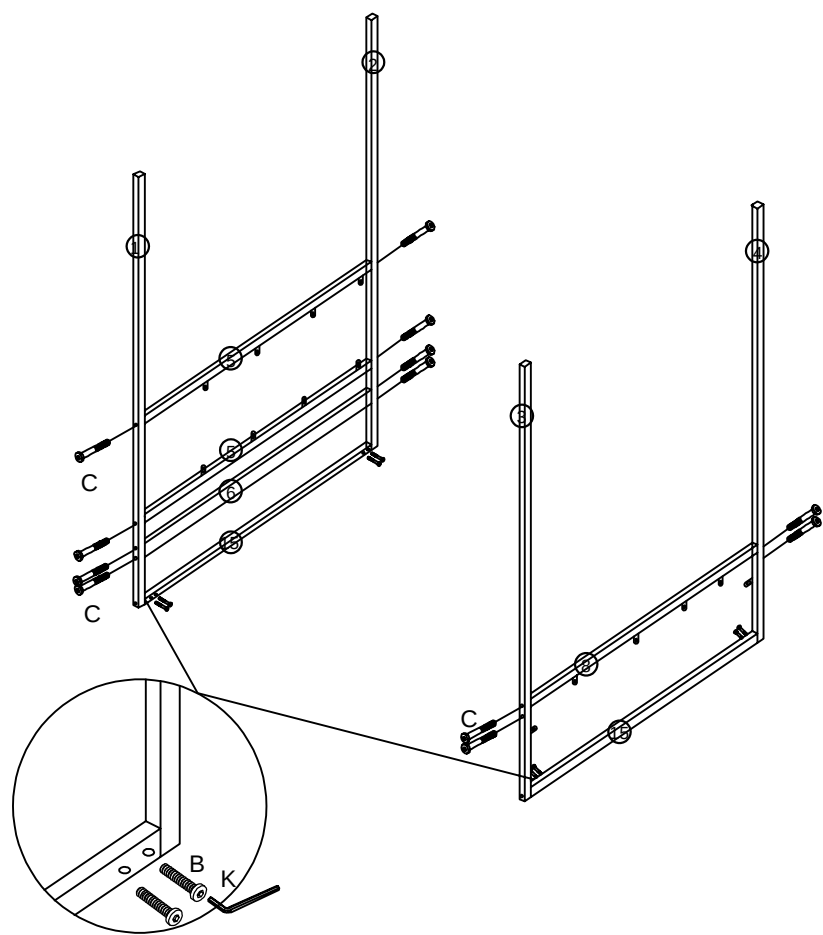


CODE	HARDWARE	QTY
C	 M8x70	12
K		1
B	 M6x16	8

STEP 2

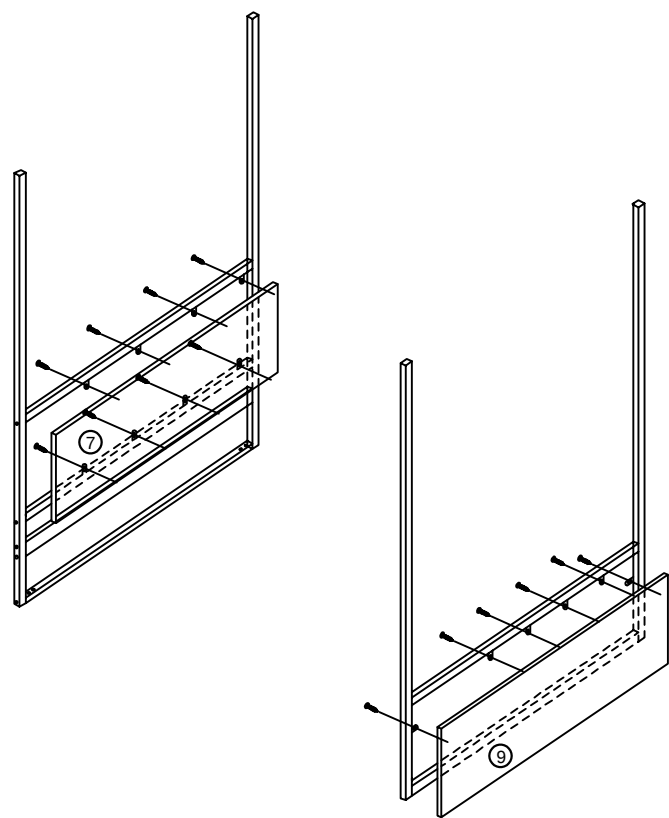


CODE	HARDWARE	QTY
M		14

STEP 3

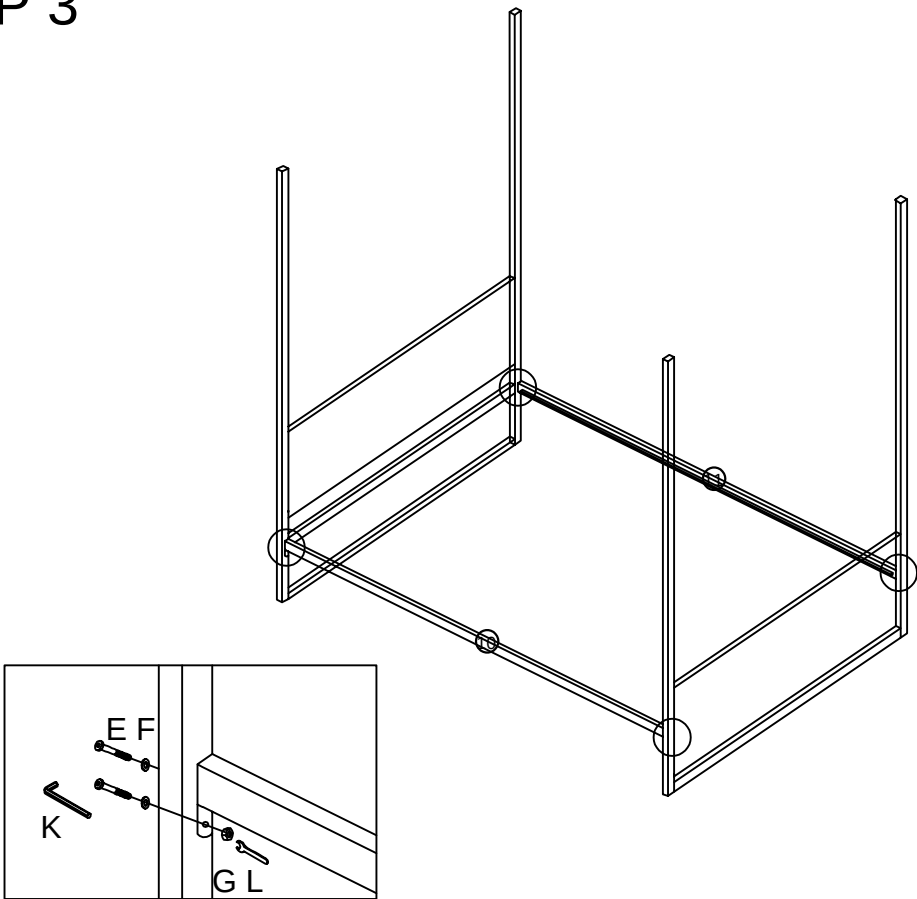


CODE	HARDWARE	QTY
E	 M8x45	8
K		1
F	 M8	8
G	 M8	4
L		1

STEP 4

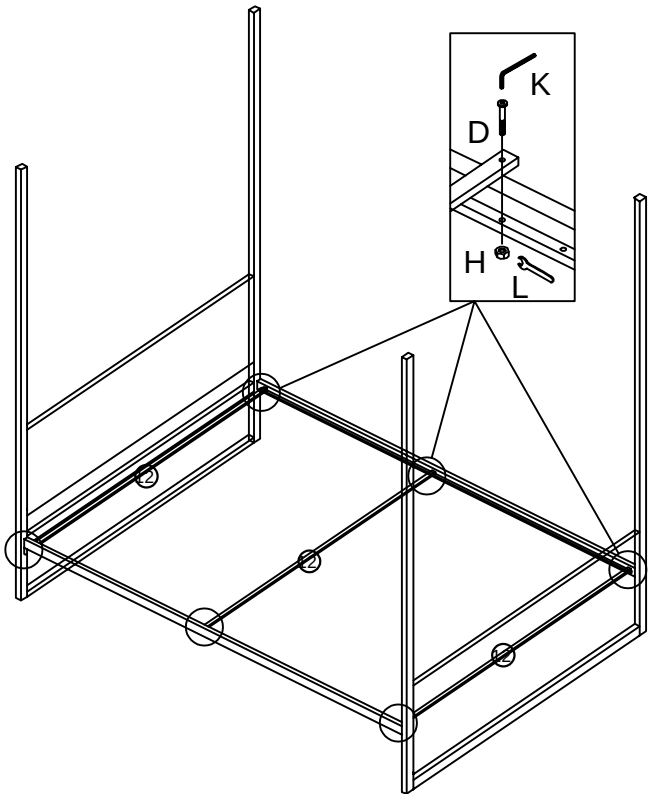



CODE	HARDWARE	QTY
D	 M6x40	6
H	 M6	6
K		1
L		1

STEP 5

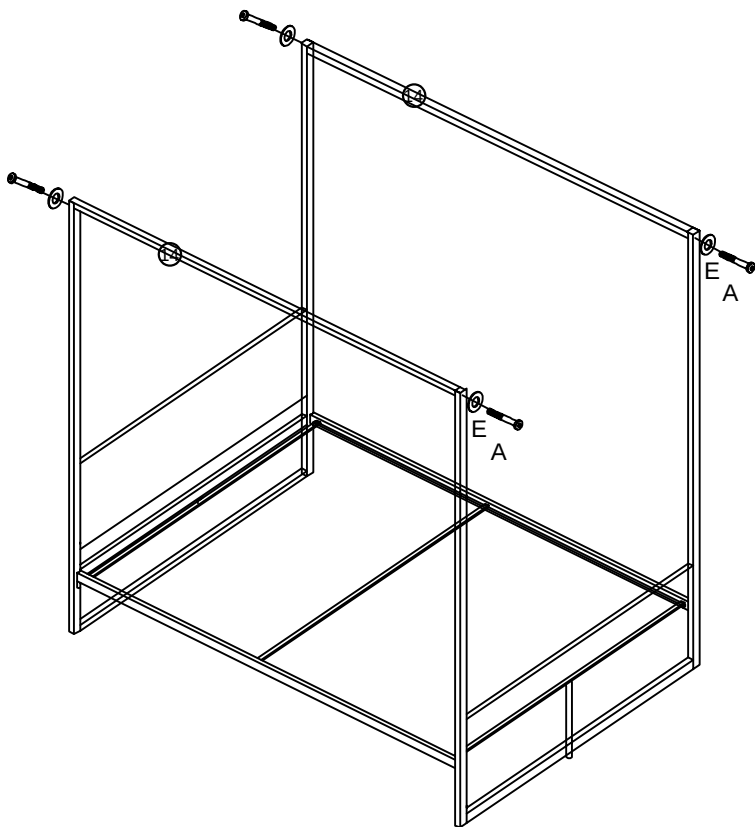



CODE	HARDWARE	QTY
E	 M8x45	4
F	 M8	4
K		1

STEP 6

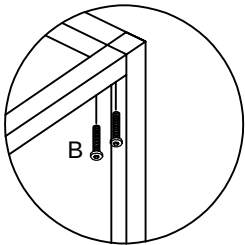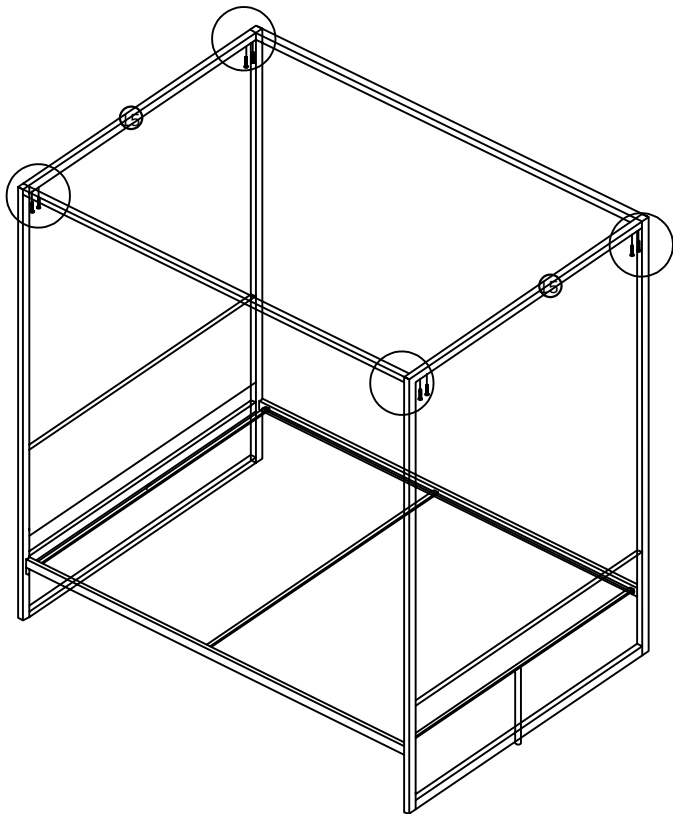




CODE	HARDWARE	QTY
B	 M6x16	8
K		1

STEP 7

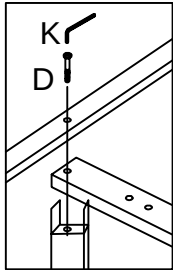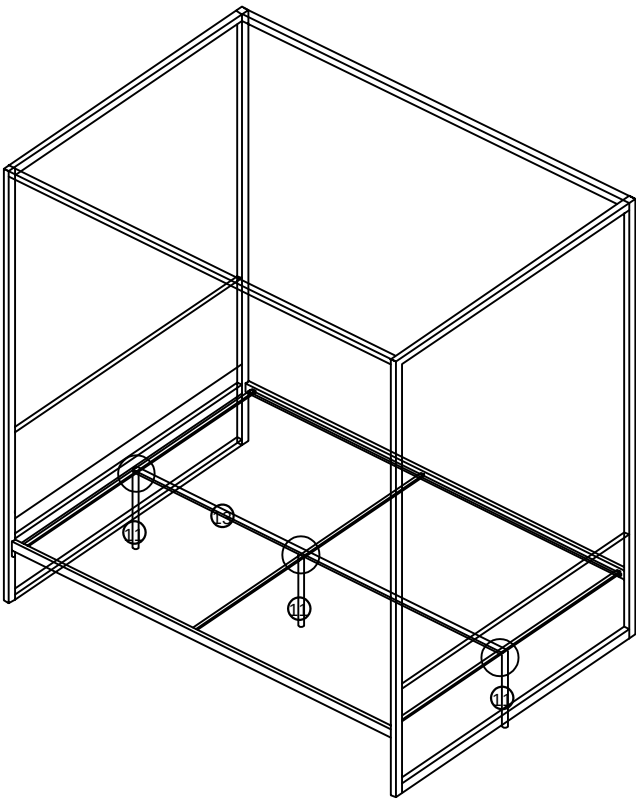

CODE	HARDWARE	QTY
D	 M6x40	3
K		1

STEP 8

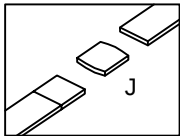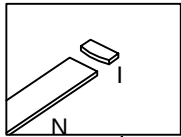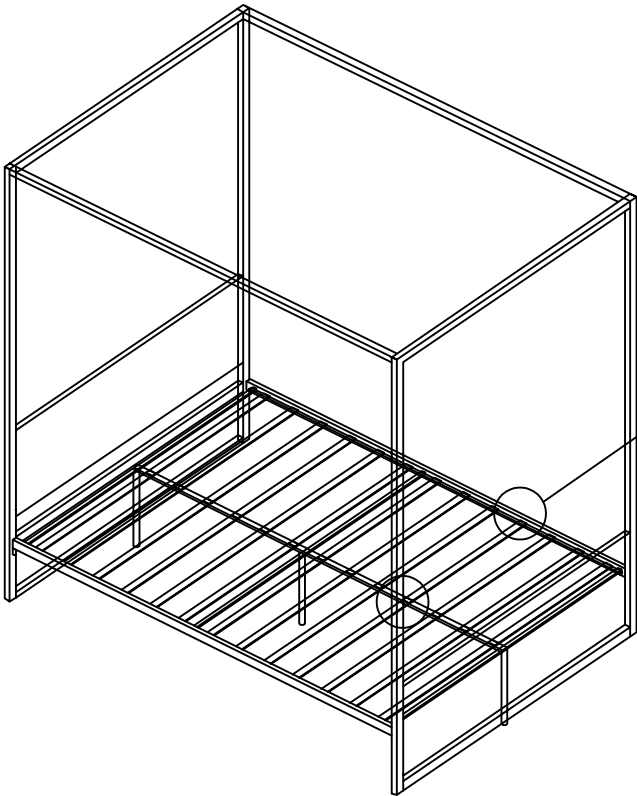

CODE	HARDWARE	QTY
I		24
J		12
N		24