
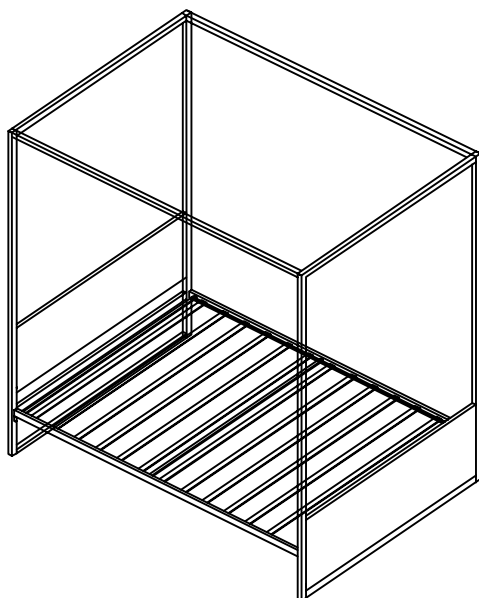




ASSEMBLY INSTRUCTION

Flair Rockford Wooden Metal 4 Poster Bed Frame Single




1		2	9		1
2		2	10		2
3		3	12		3
4		1	14		2
5		2	15		4
6		6			
7		1			
8		1			

B		M6x16mm	16	I			24
C		M8x70mm	12	K			1
D		M6x40mm	6	L			1
E		M8x45mm	12	M		M4x15mm	11
F		M8	12	N			12
G		M8	4				
H		M6	6				

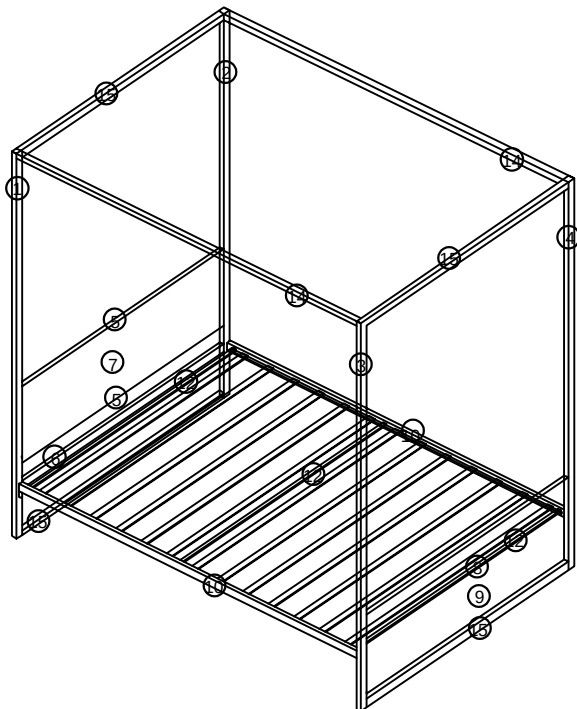


STEP 1

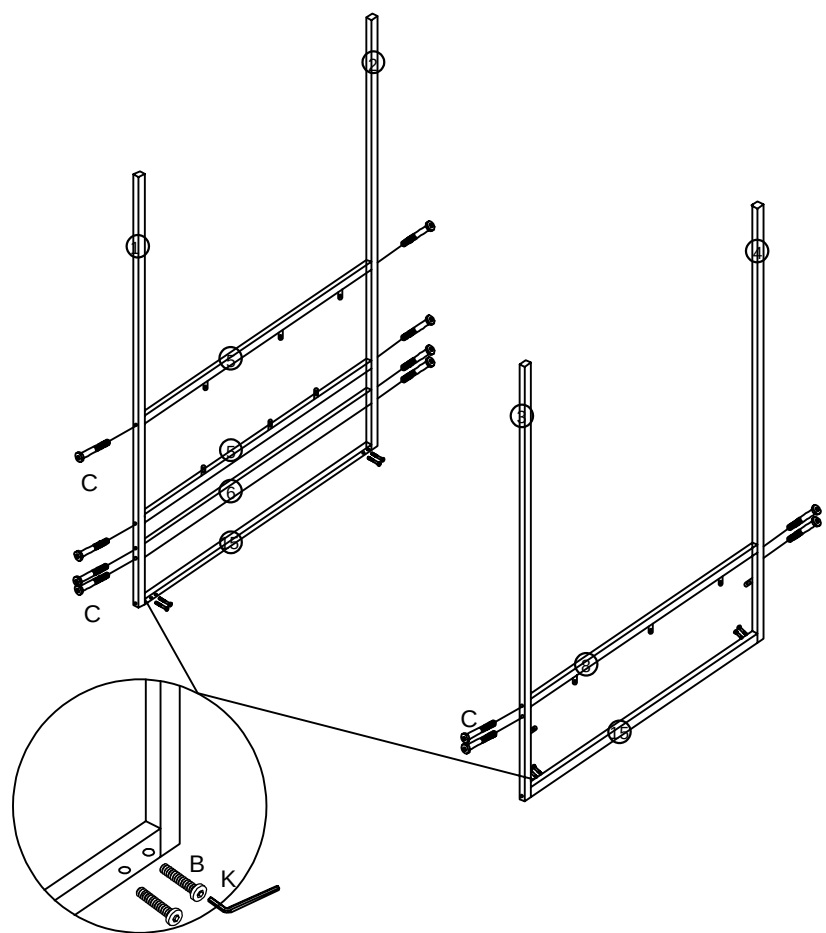


CODE	HARDWARE	QTY
C	 M8x70	12
K		1
B	 M6x16	8

STEP 2

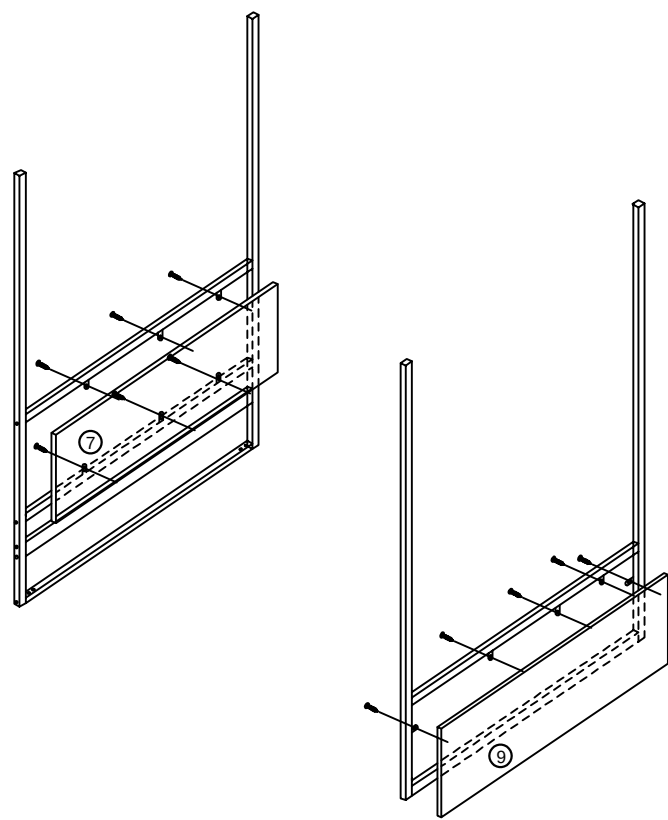


CODE	HARDWARE	QTY
M		11

STEP 3

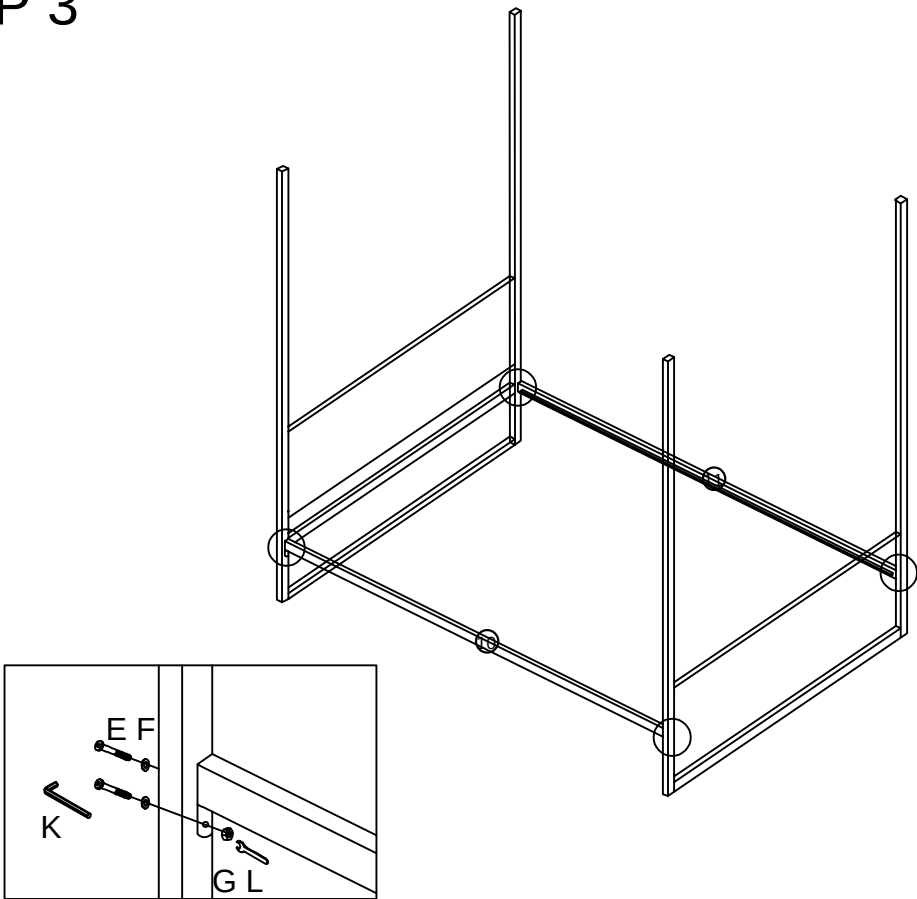


CODE	HARDWARE	QTY
E	 M8x45	8
K		1
F	 M8	8
G	 M8	4
L		1

STEP 4

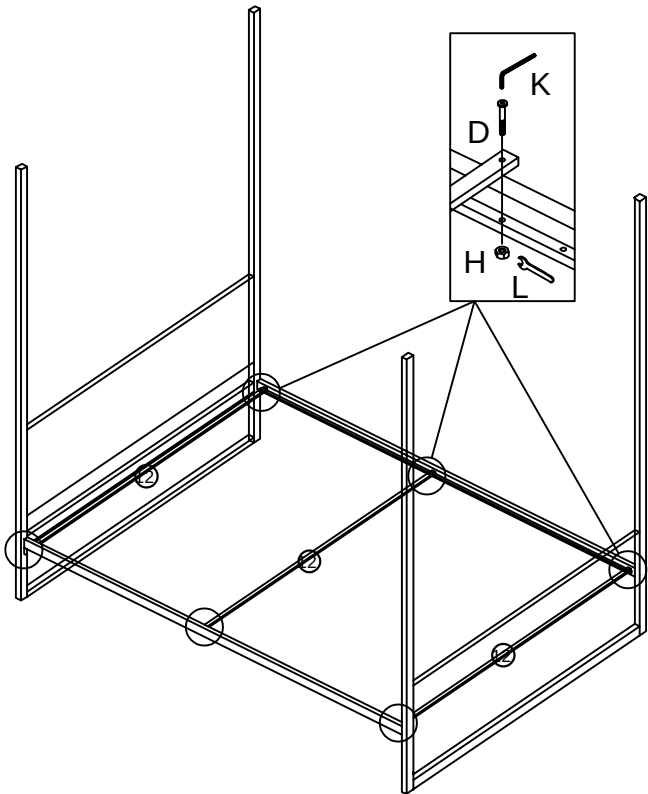



CODE	HARDWARE	QTY
D	 M6x40	6
H	 M6	6
K		1
L		1

STEP 5

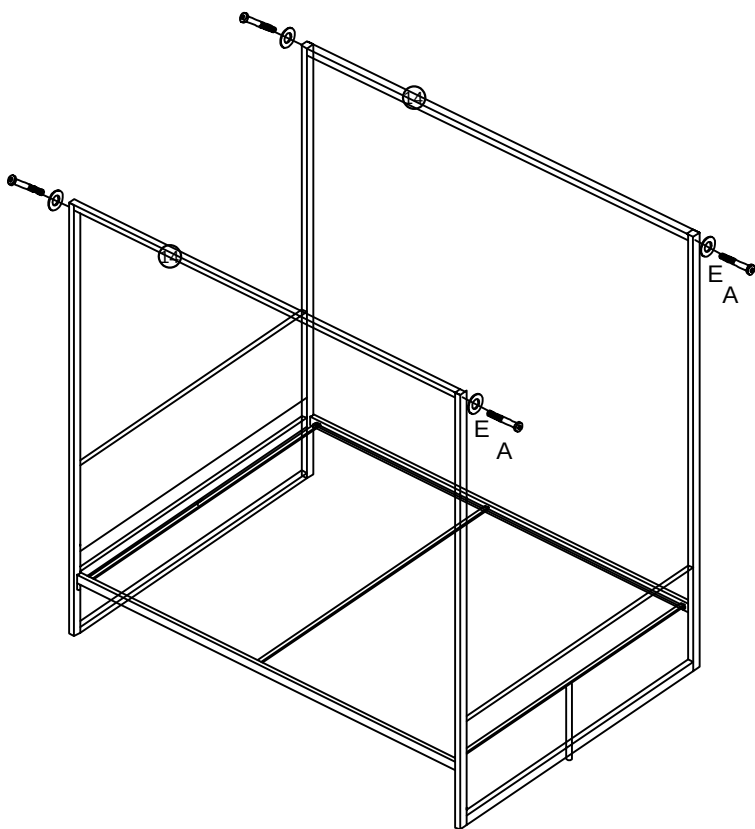


CODE	HARDWARE	QTY
E	 M8x45	4
F	 M8	4
K		1

STEP 6

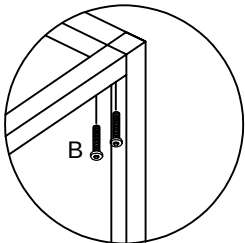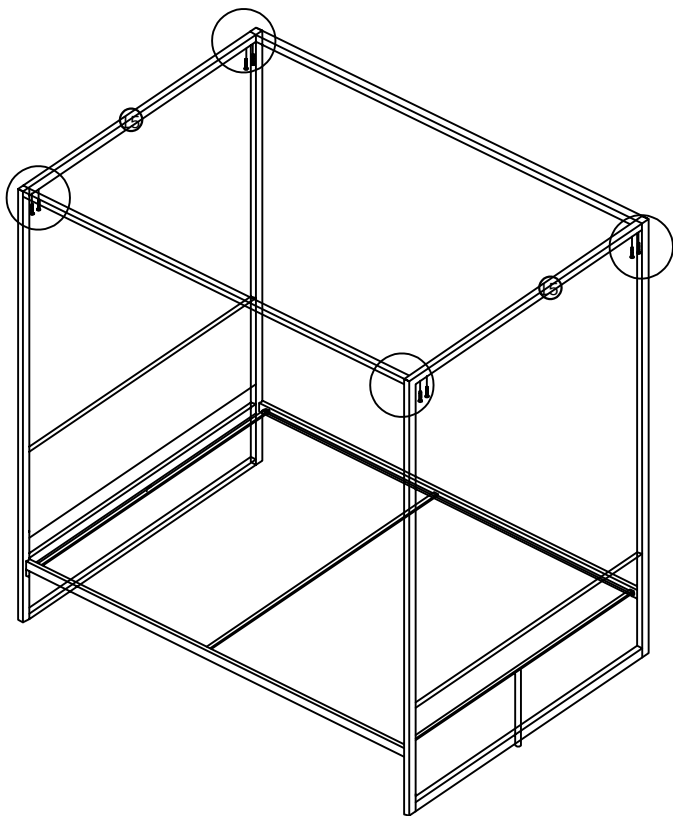

CODE	HARDWARE	QTY
B	 M6x16	8
K		1

STEP 7

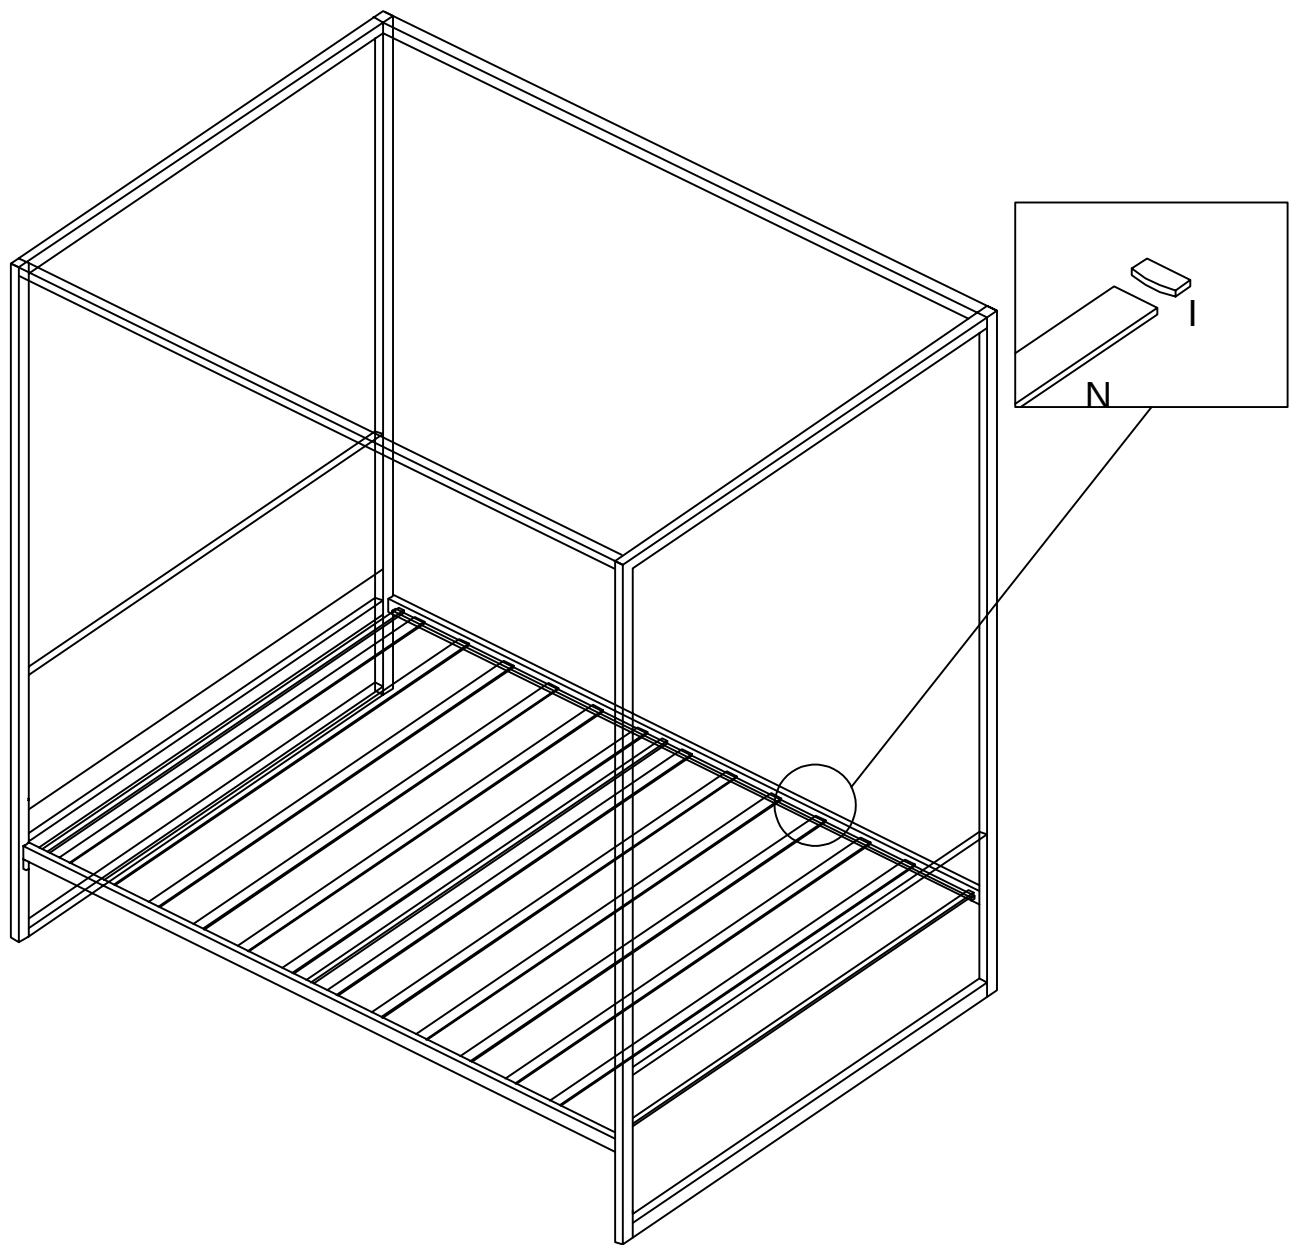

CODE	HARDWARE	QTY
I		24
N		12