


ASSEMBLY INSTRUCTION

Flair Roswell Brass Bed Frame Double




1		1	7		1				
			8		24				
2		1	9		1				
3		2	10		2				
4		2	11		4				
5		2	12		2				
6		2							


A		M8X50mm	8	J			24
B		M6X45mm	4	K			12
C		M6X40mm	4	L			2
D		M6X35mm	8	M			2
E		M6X16mm	4				
F		M8	8				
G		M8	4				
H		M6	4				
I		M6	6				

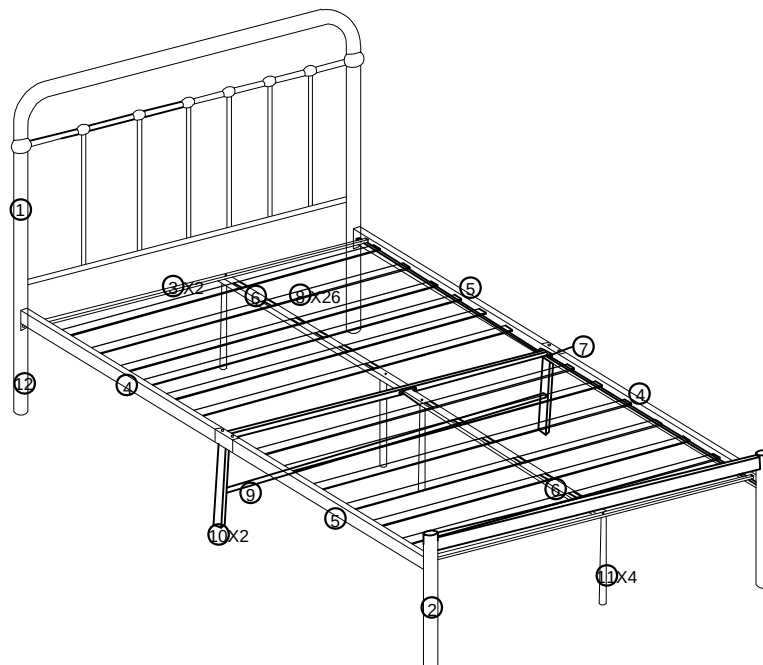

STEP 1

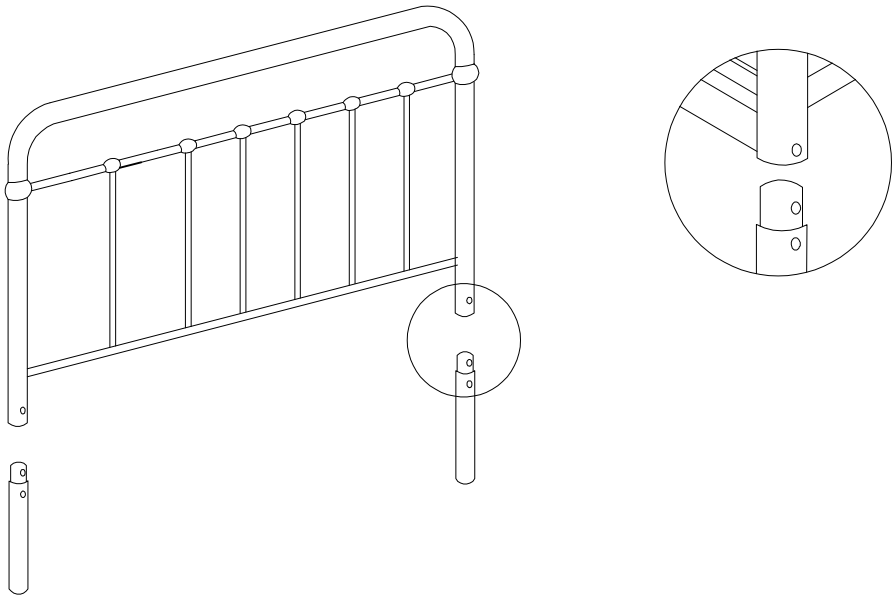


STEP 2

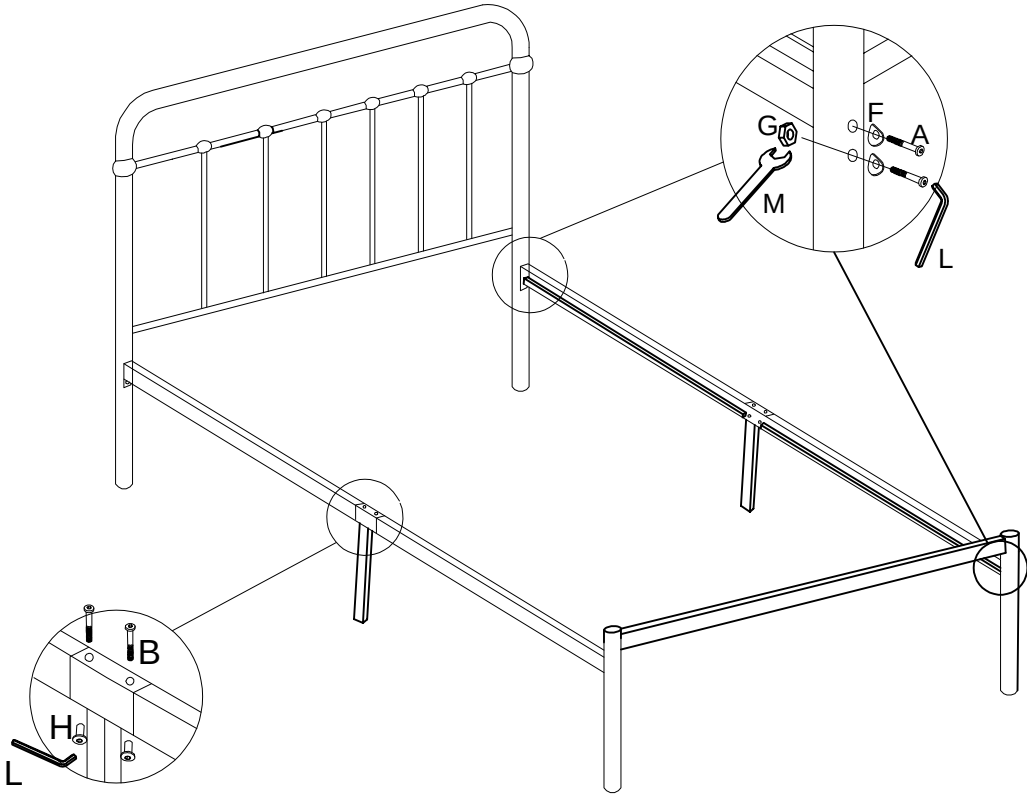


CODE	HARDWARE	QTY
A	 M8X50	8
B	 M6X45	4
F	 M8	8
G	 M8	4
H	 M6	4
L		1
M		1

STEP 3

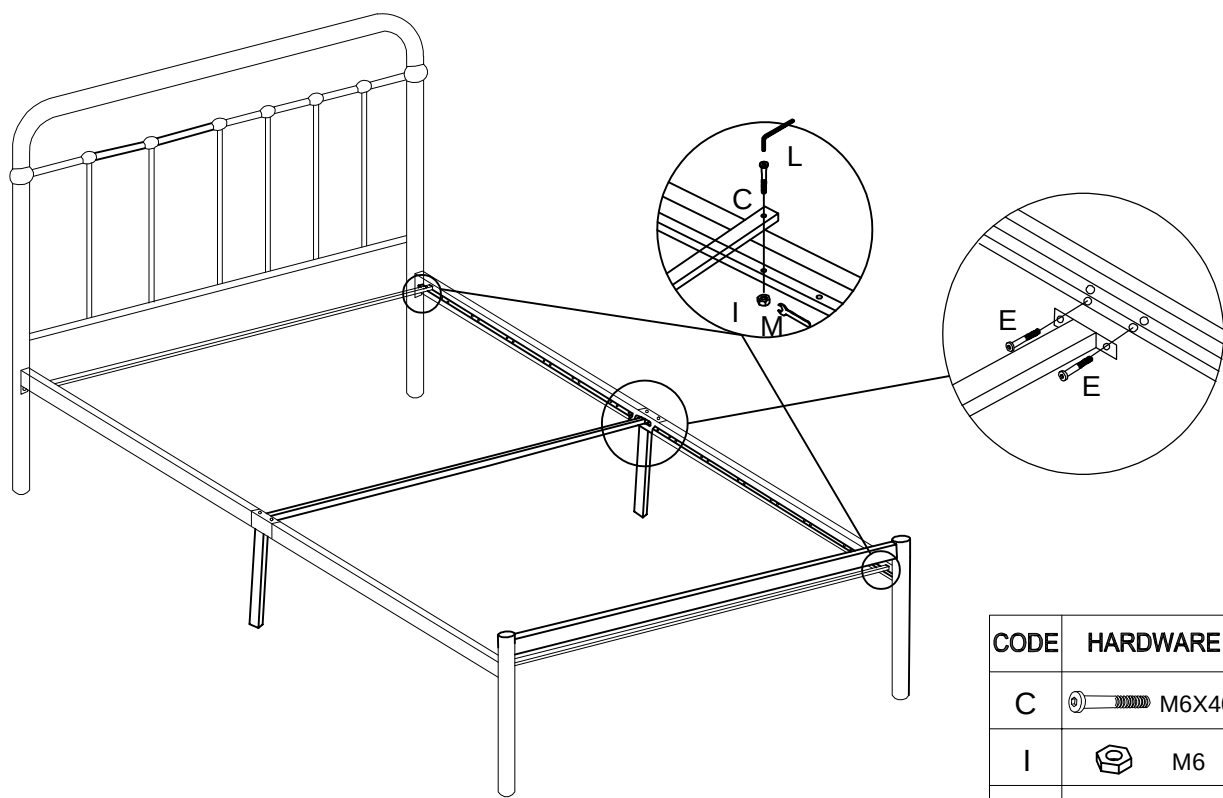


CODE	HARDWARE	QTY
C	 M6X40	4
I	 M6	4
E	 M6X16	4
L		1

STEP 4

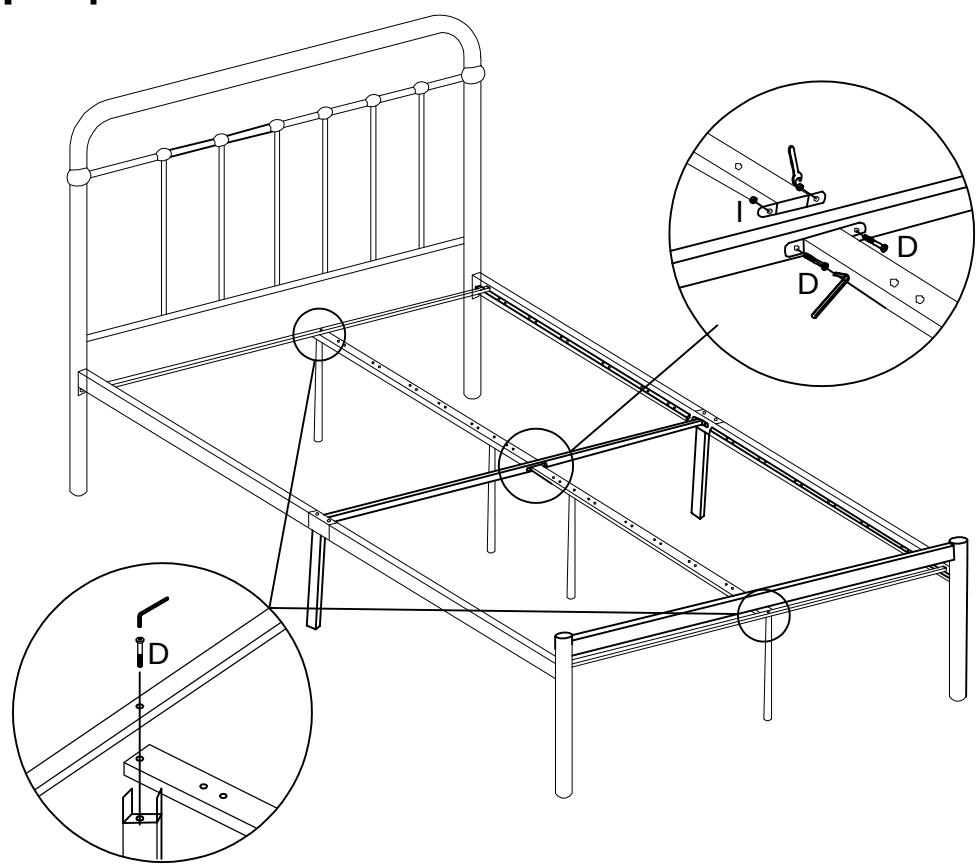


CODE	HARDWARE	QTY
D	 M6X35mm	6
I	 M6	2
L		1
M		1

STEP 5

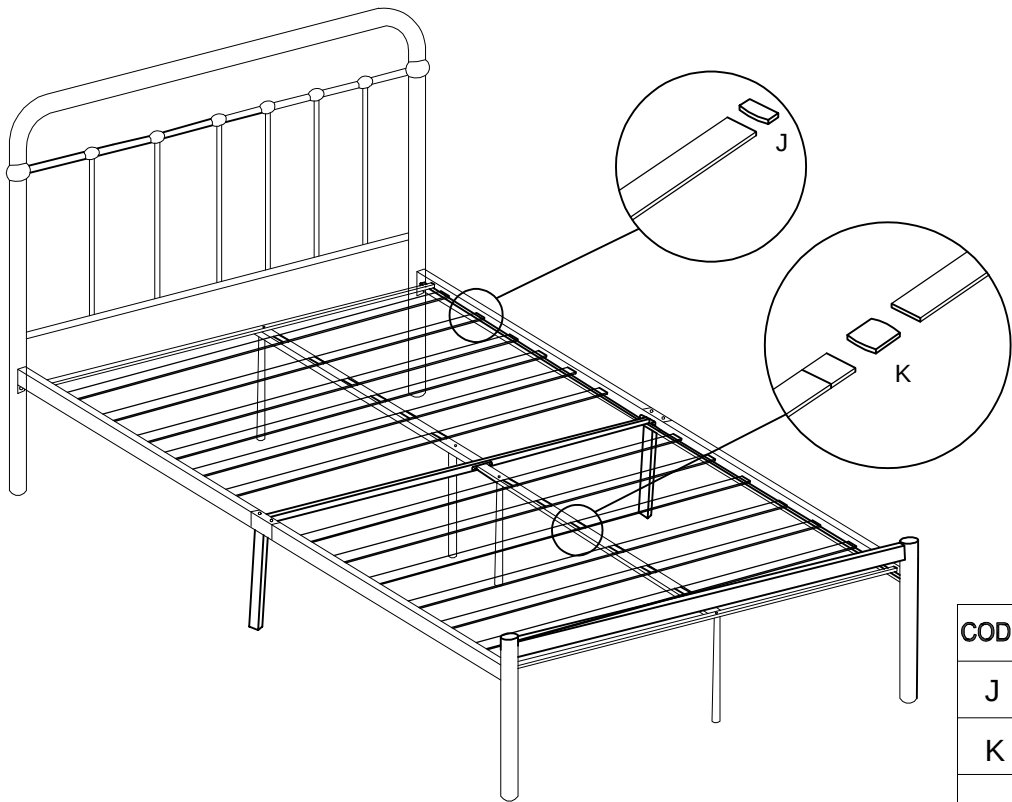

CODE	HARDWARE	QTY
J		24
K		12

STEP 6

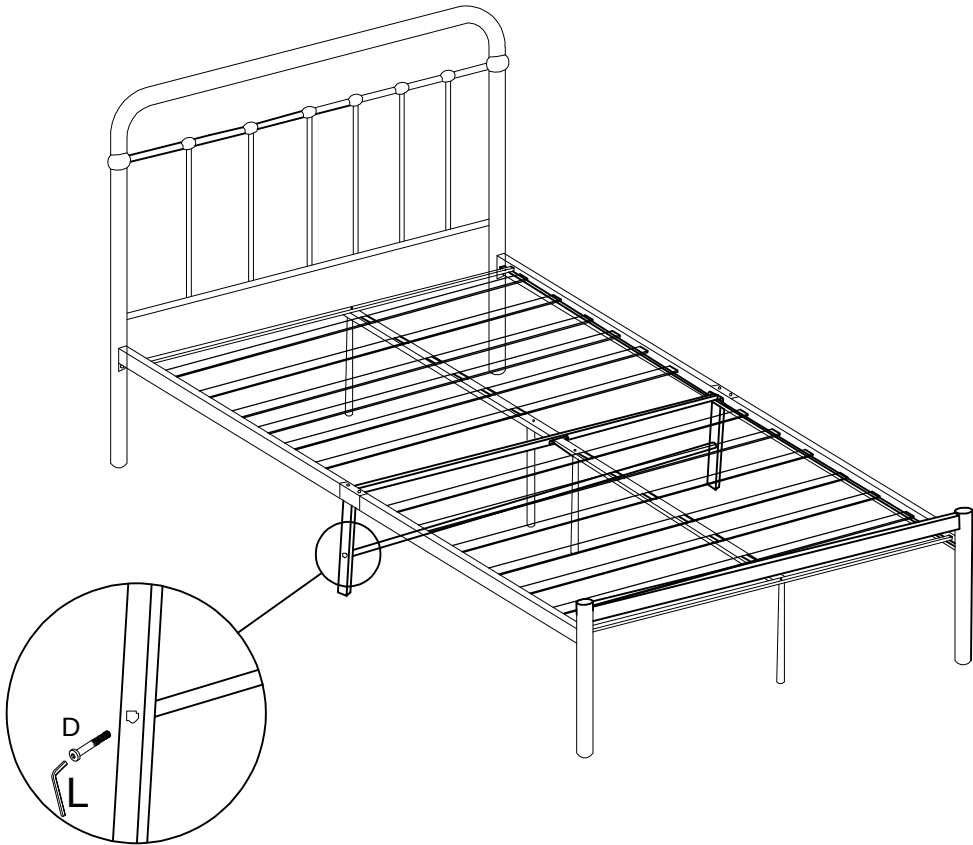

CODE	HARDWARE	QTY
D	 M6X35	2
L		1