


# ASSEMBLY INSTRUCTION

## AURORA DAYBED (POP-UP TRUNDLE)

### IMPORTANT


Please inspect all items carefully before assembling.  
If for any reason you need to return this item,  
you must return in its original packaging.  
Assembled item(s) cannot be returned.

Minimum no. of people  
recommended to  
assemble this product:

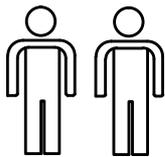


60 mins

Approximate time to  
assemble this product

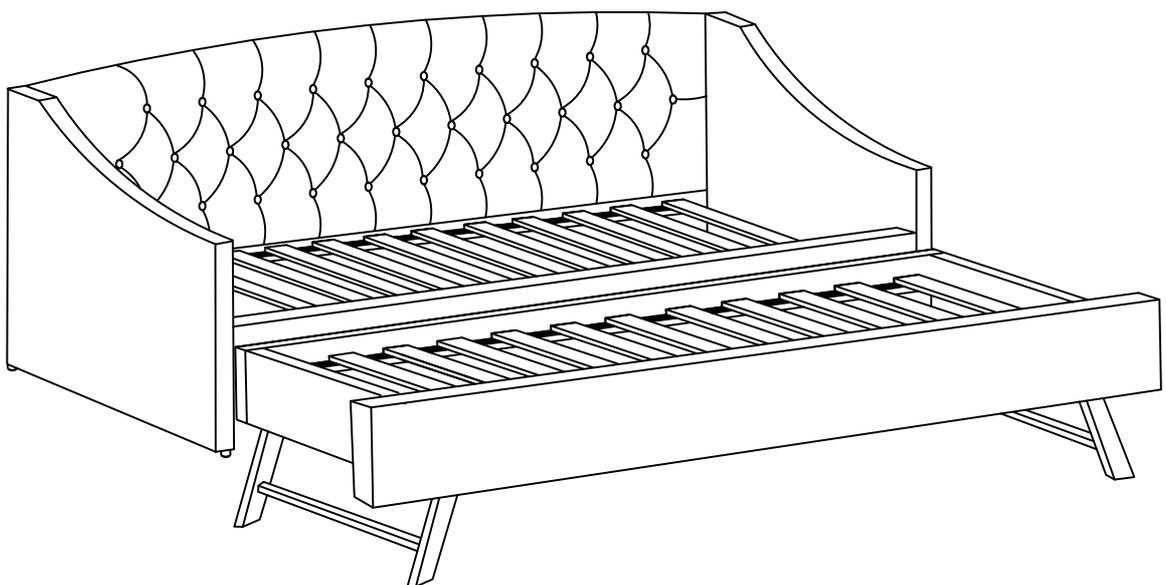

# Parts

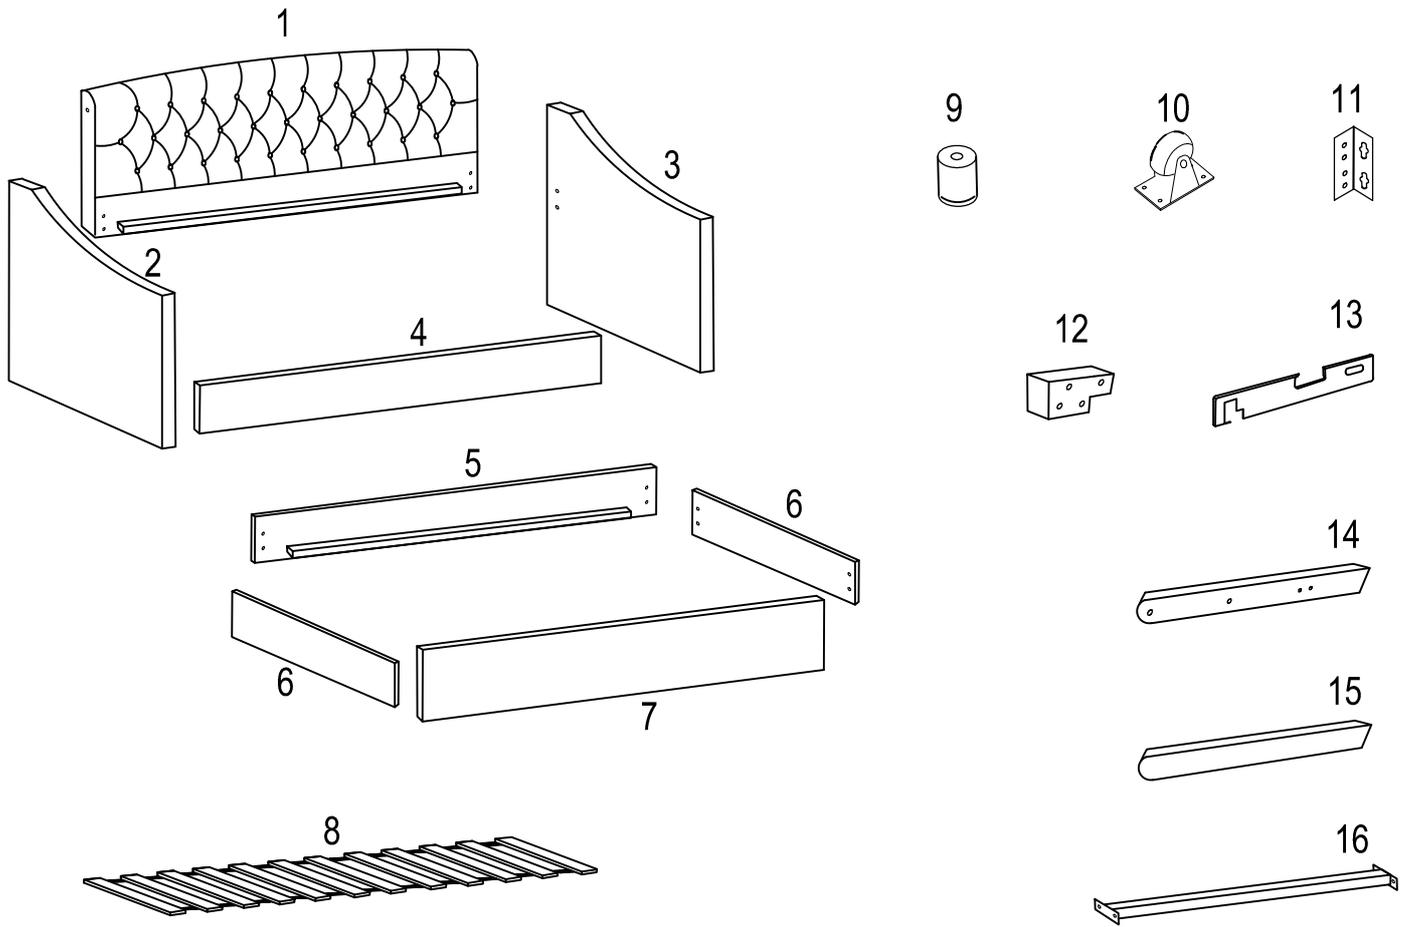

Ref.	Description	Qty
1	Backrest Panel	1
2	Armrest (Left)	1
3	Armrest (Right)	1
4	Upper Side Rail	1
5	Bottom Back Panel	1
6	Bottom Side Panels	2
7	Bottom Front Panel	1
8	Flat Slat	22
9	Feet	4
10	Wheels	4
11	Connection Plate	8
12	Wooden Block	4
13	Safety Lock	4
14	Metal Side Bar (L)	2
15	Metal Side Bar (R)	2
16	Metal Horizontal Bar	2

# Fittings


Ref.	Description		Qty
A	Bolt (M8x20mm)		20
B	Bolt (M8x35mm)		32
C	Bolt (M8x55mm)		6
D	Bolt (M8x75mm)		8
E	Washer (M8x20mm)		6
F	Screw (M4x20mm)		16
G	Screw (M4x35mm)		16
H	Allen Key M5		1

---

## Additional Tools Required




## General Hints


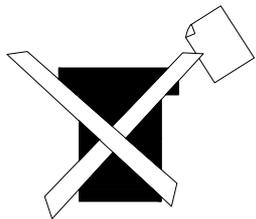


Please retain your assembly instruction and tools provided for future use.  
Periodically check that all bolts are still tight.

# Step 1

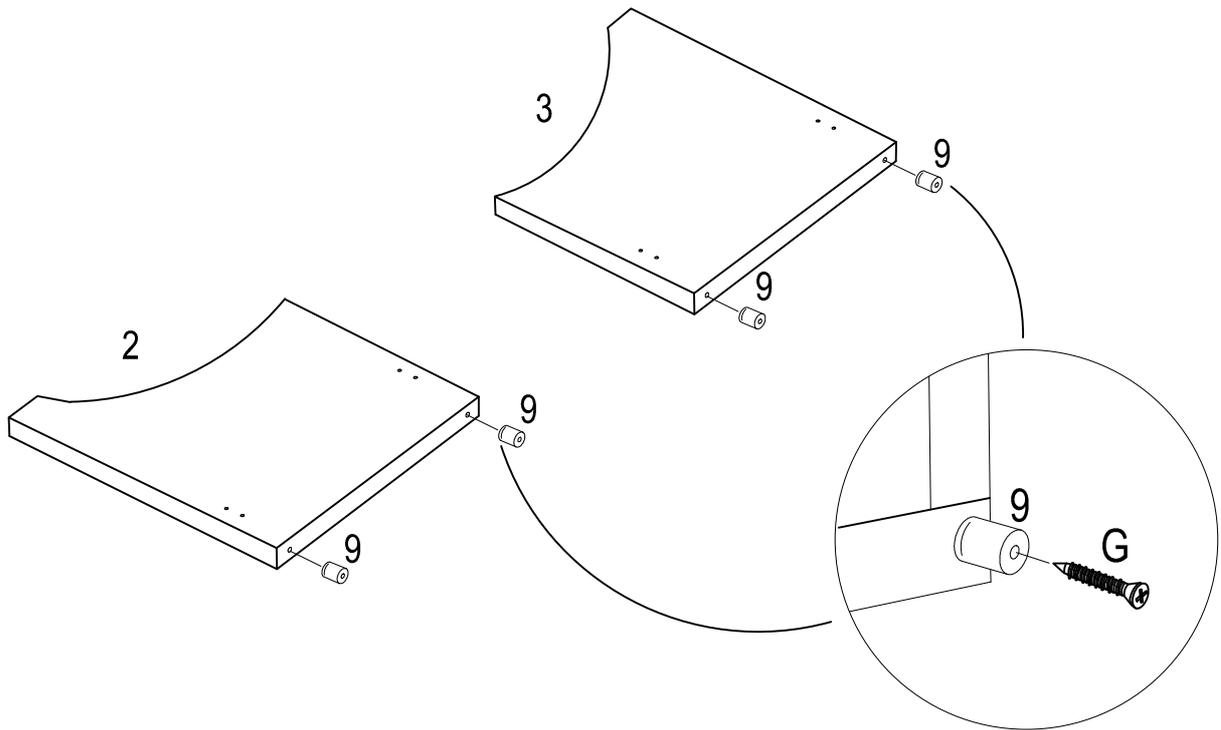


# Step 2

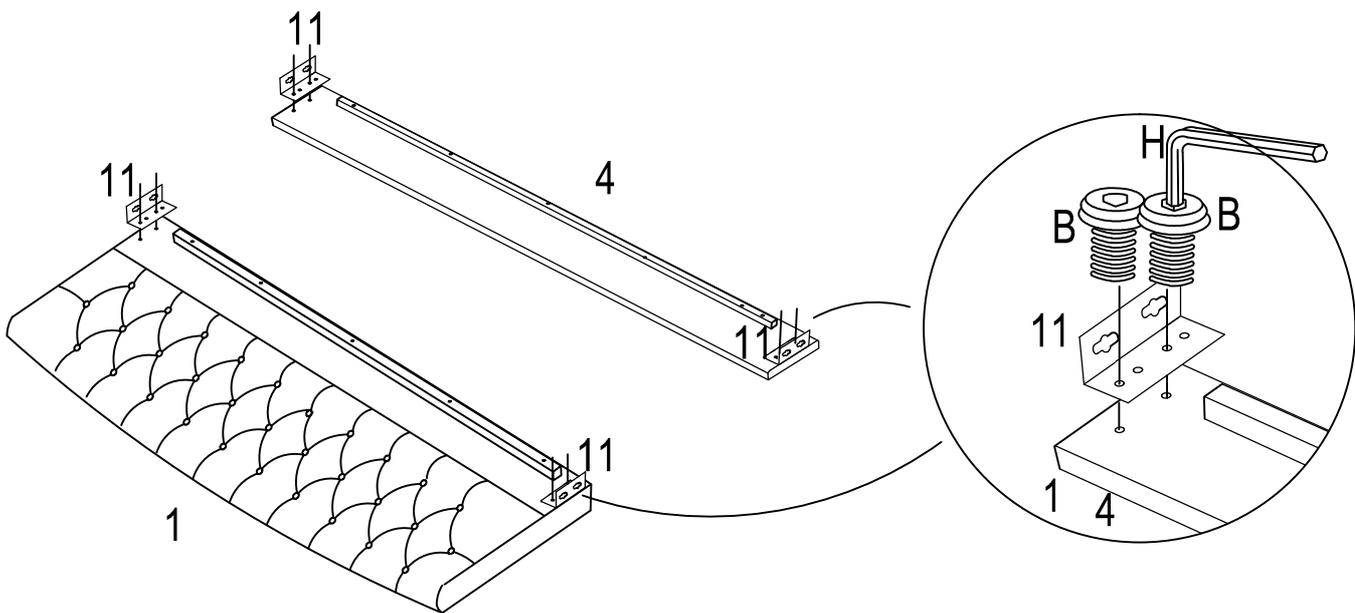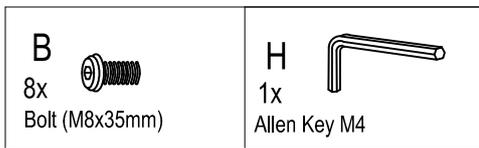


# Step 3

<p><b>B</b> 8x Bolt (M8x35mm)</p> 	<p><b>H</b> 1x Allen Key M4</p> 
---	--

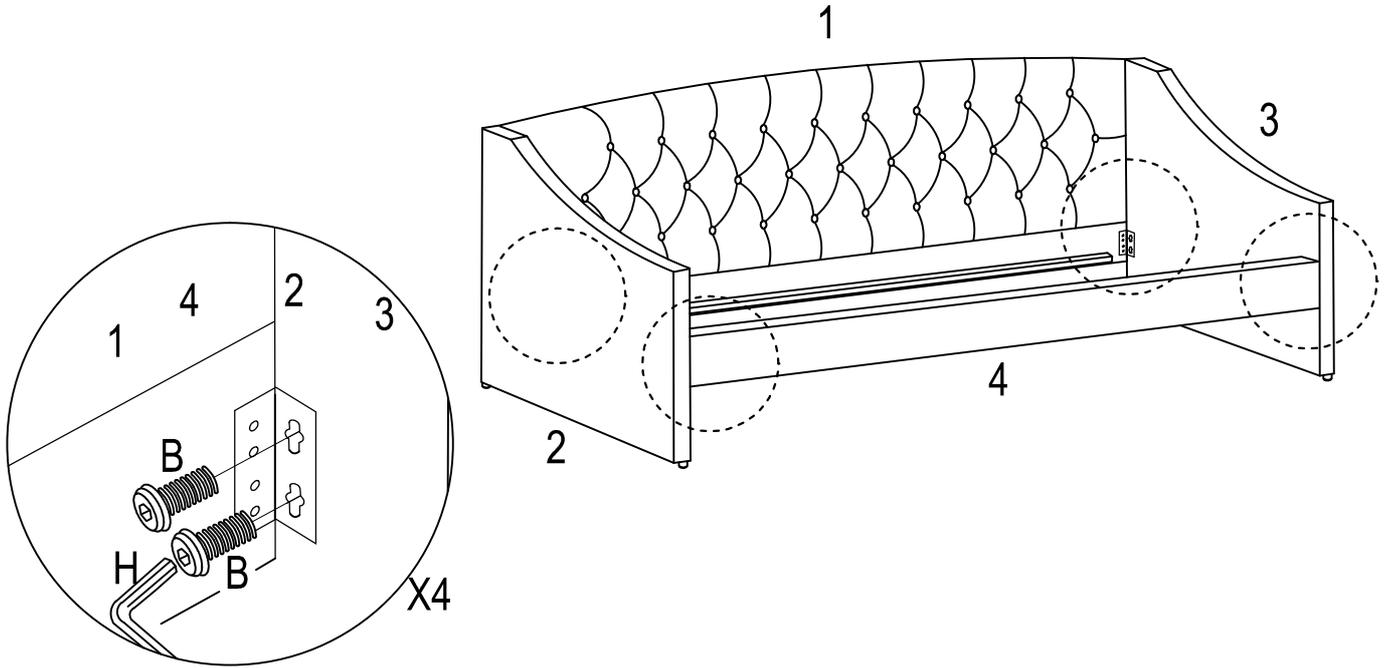



# Step 4

<p><b>C</b> 2x Bolt (M8x55mm)</p> 	<p><b>E</b> 2x Washer (M8x20mm)</p> 	<p><b>H</b> 1x Allen Key M5</p> 
---	---	---

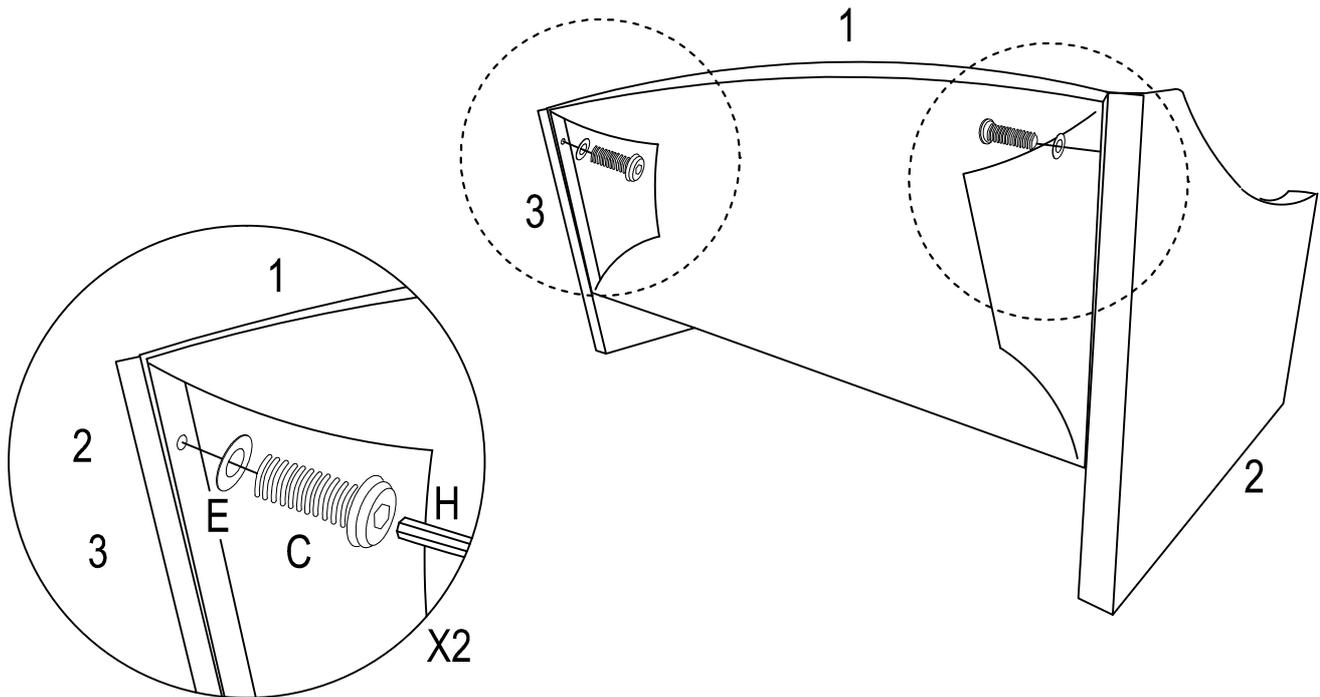



# Step 5

<b>A</b> 4x Bolt (M8x20mm)	<b>B</b> 4x Bolt (M8x35mm)	<b>H</b> 1x Allen Key M5
----------------------------------	----------------------------------	--------------------------------

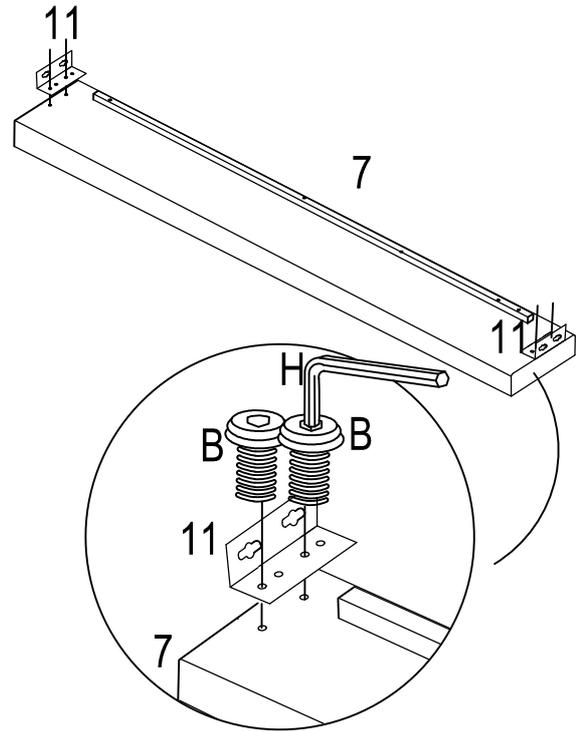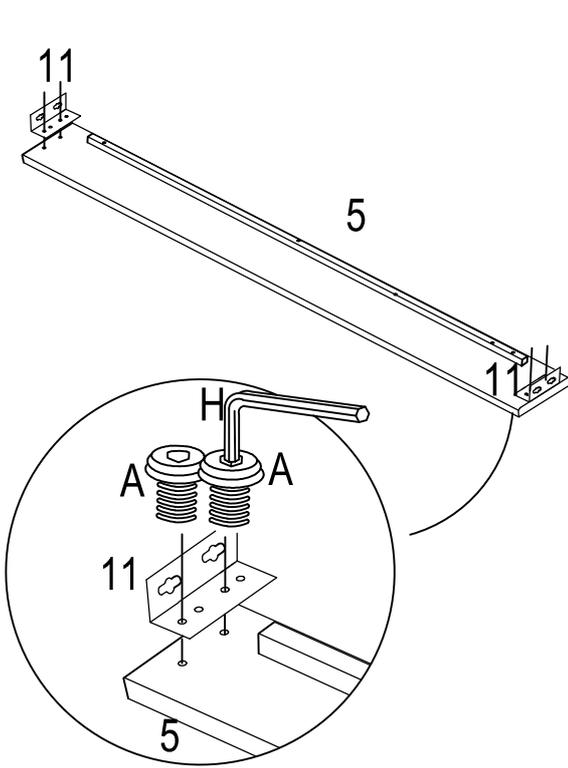



# Step 6

<b>A</b> 8x Bolt (M8x20mm)	<b>H</b> 1x Allen Key M4
----------------------------------	--------------------------------

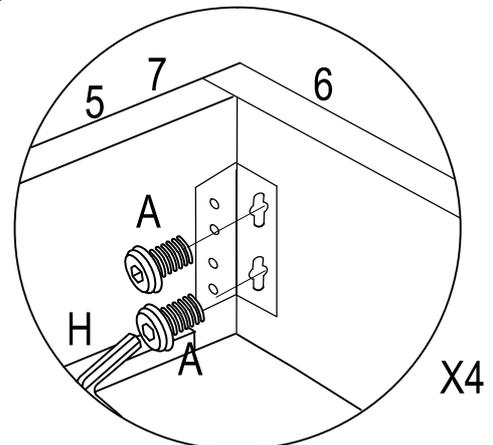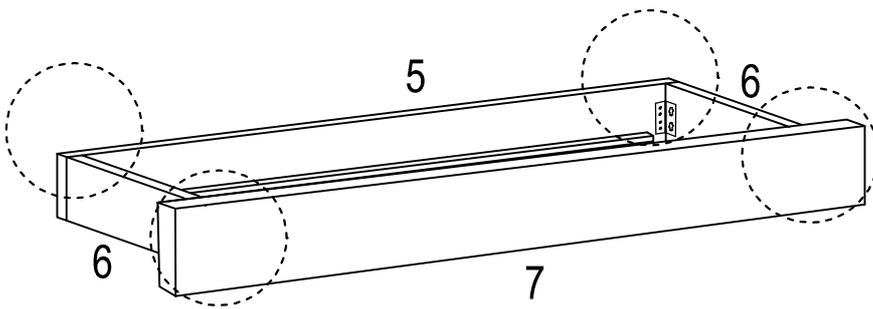



# Step 7

<b>D</b> 8x Bolt (M8x75mm)		<b>H</b> 1x Allen Key M4	
----------------------------------	--	--------------------------------	--

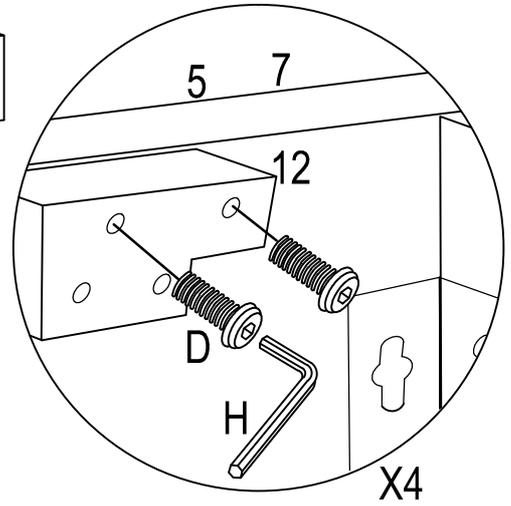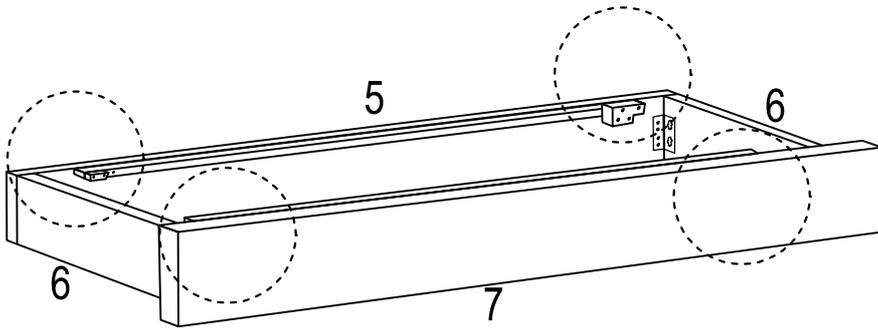



# Step 8

<b>F</b> 16x Screw (M4x20mm)	
------------------------------------	--

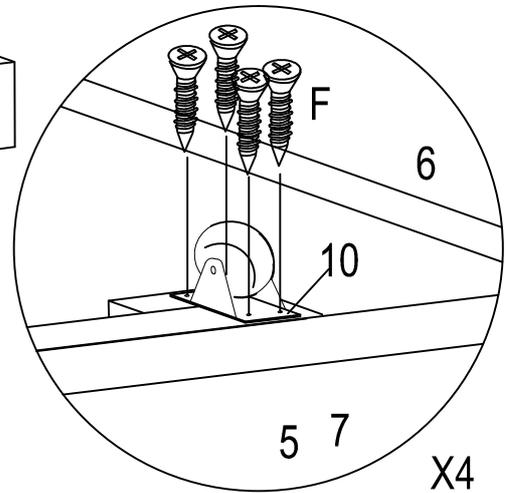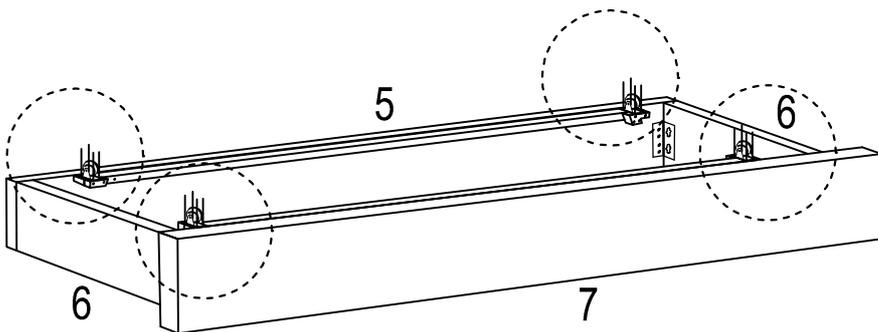



# Step 9

<b>C</b> 4x Bolt (M8x55mm)	<b>E</b> 4x Washer (M8x20mm)	<b>H</b> 1x Allen Key M5
----------------------------------	------------------------------------	--------------------------------

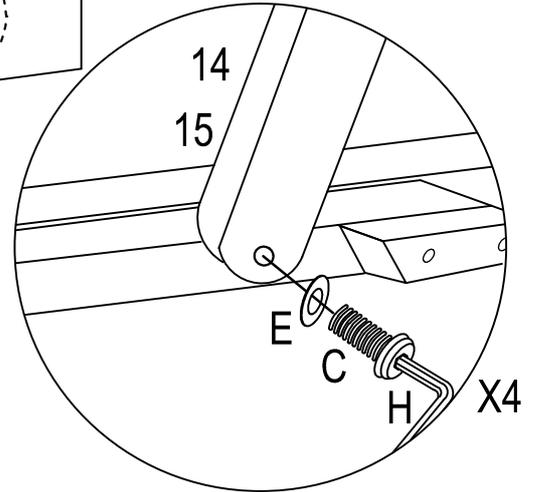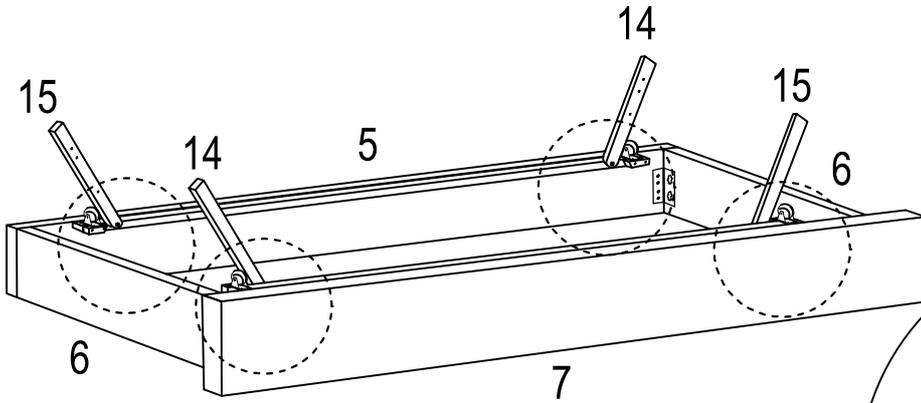


# Step 10

<b>A</b> 8x Bolt (M8x20mm)	<b>H</b> 1x Allen Key M4
----------------------------------	--------------------------------

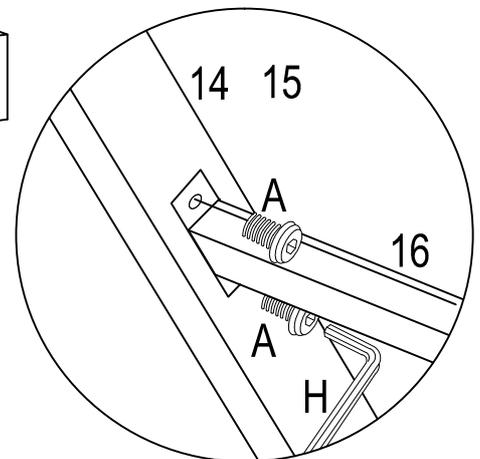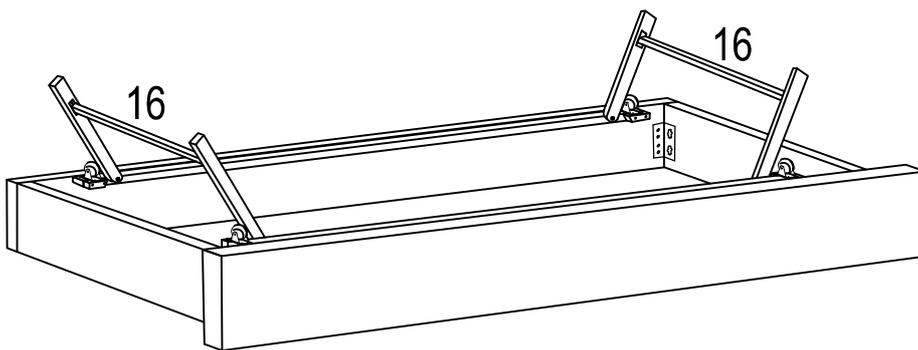


# Step 11


<b>B</b> 12x Bolt (M8x35mm)		<b>H</b> 1x Allen Key M5	
-----------------------------------	--	--------------------------------	--

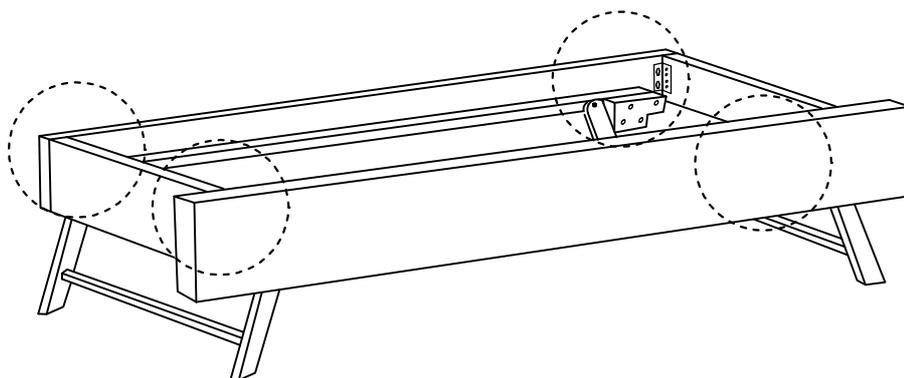

11 - 1

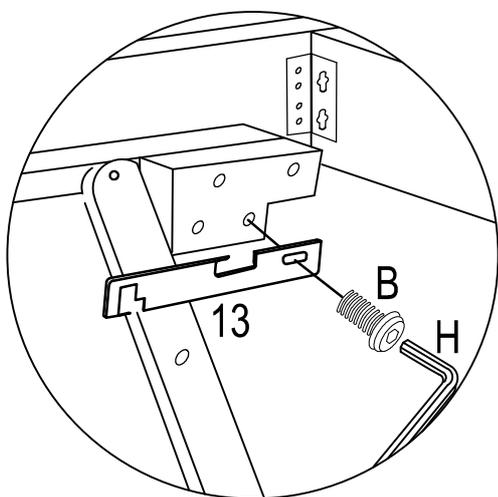


11 - 2

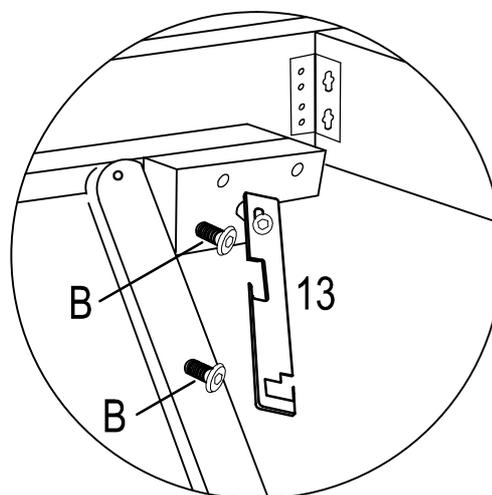


11 - 3

The safety lock is locked


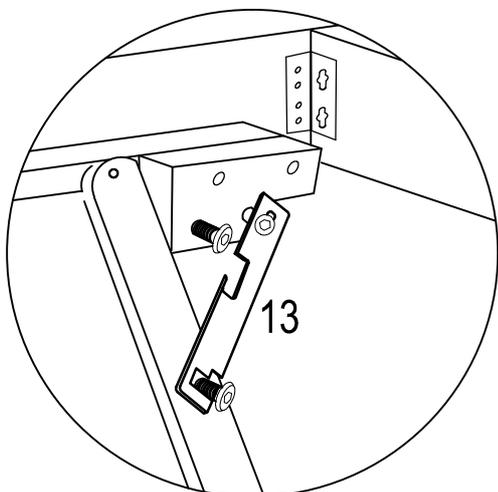


11 - 4

The safety lock is unlock

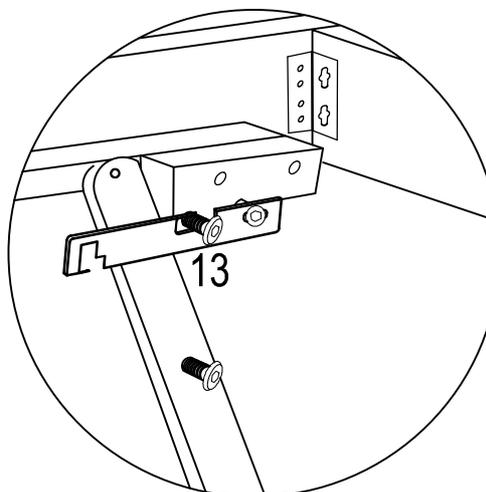

# Step 12

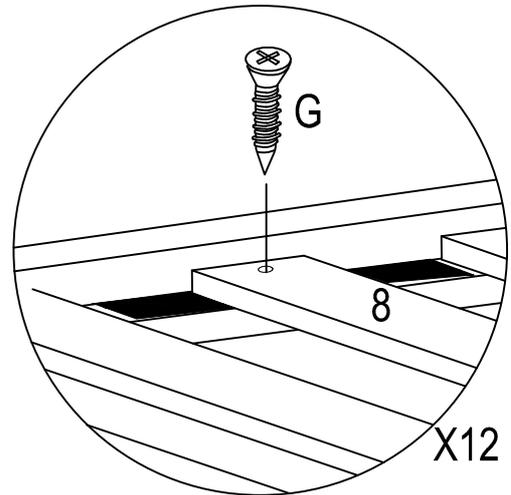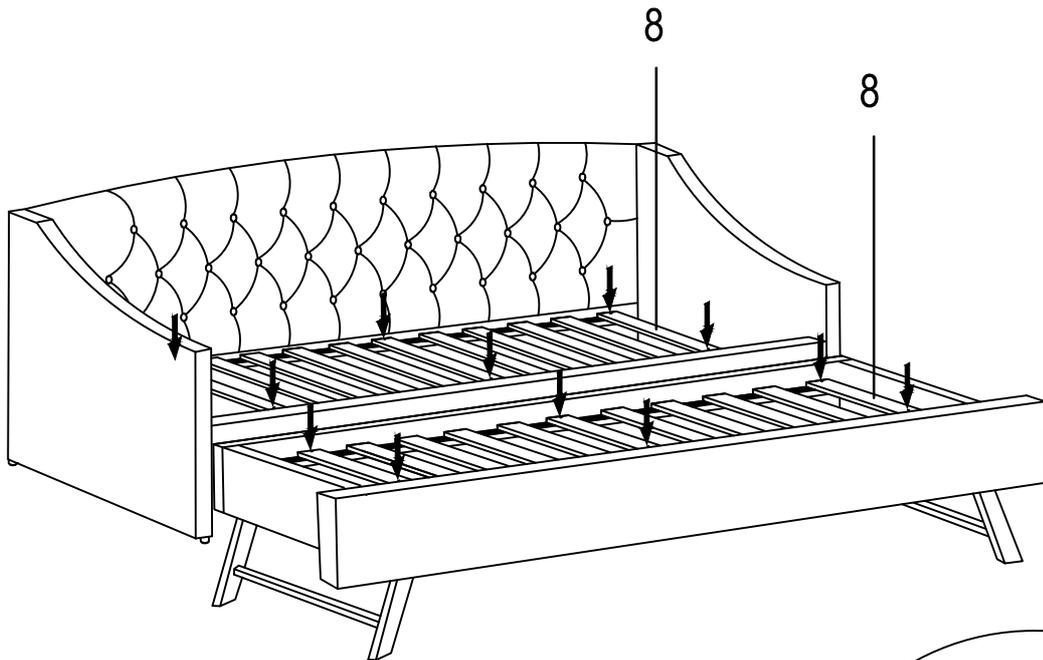

- Complete -