


## ASSEMBLY INSTRUCTION


MODEL : CF 9369 (5')

Step 1 : Install the legs (D) to footboard (C) and headboard (A).

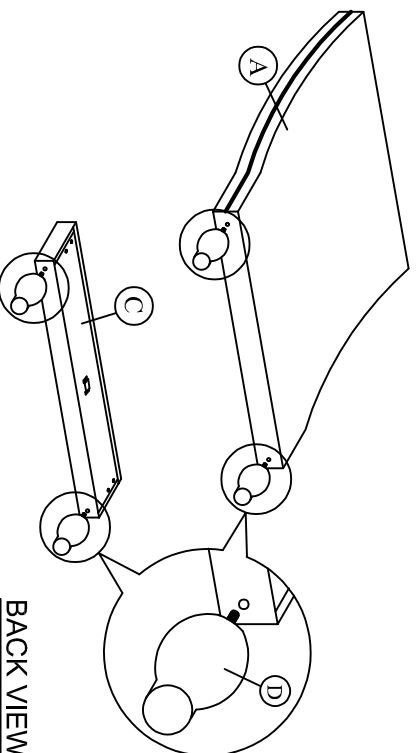


BACK VIEW

Step 2 : Attached side rail (C) to headboard (A) and footboard (B) and tightened the screws (H) and flat washers (M) to the headboard (A) and footboard (B).

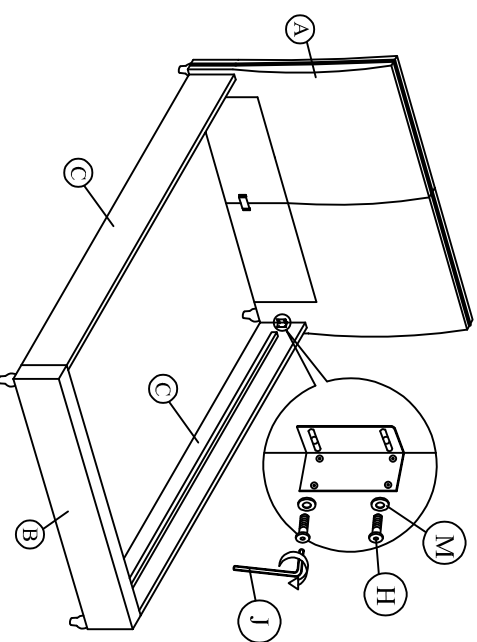


Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

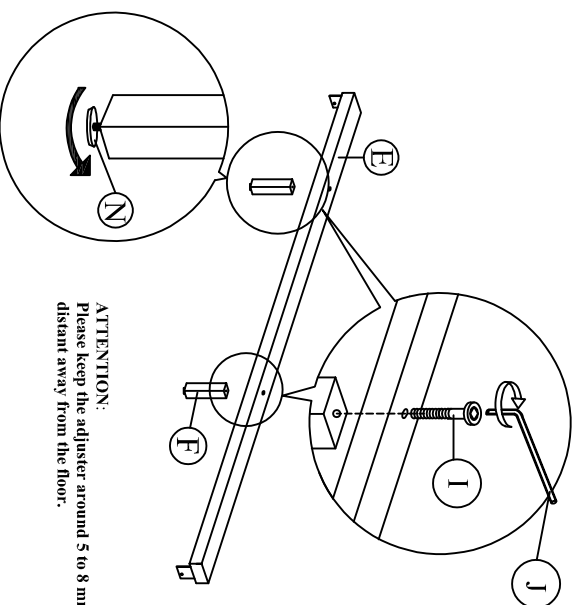

ATTENTION:  
Please keep the adjuster around 5 to 8 mm  
distant away from the floor.

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (C). Tighten screws (K) using screw driver (not included) to the headboard (A) and footboard (C).

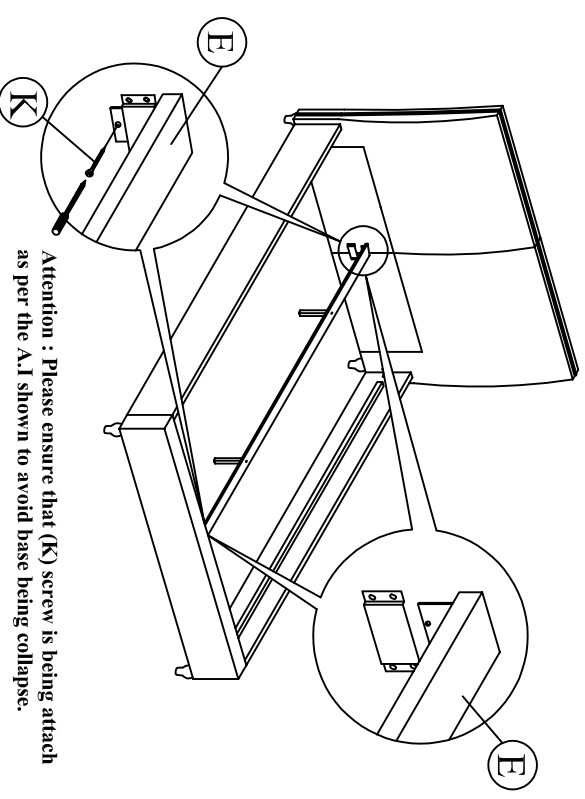

Attention : Please ensure that (K) screw is being attach  
as per the A.I shown to avoid base being collapse.

A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	Legs 60 x 110(H)	4 pcs
E	Center Rail 2040mm	1 pc
F	Support Leg 195mm	2 pcs
G	14 Pes Slat 1537mm	1 pc
H	JCBC M6 X 30	8 pcs
I	JCBC M6 X 40	2 pcs
J	M4 x 65mm	1 pc
K	CSK M4 x 25mm	2 pcs
L	CSK M4 x 32mm	31 pcs
M	Spring Washer	8 pcs
N	Small Adjuster	2 pcs

Step 5 : Affix the Slat (G) to the side rail support wood and the center rail (E).

