














Before you begin, please read and follow carefully the assembly instruction steps.


Read instruction carefully. See furniture Parts List and Hardware List for guidance. Be sure you have all parts before you start assembling. Place and assemble furniture on a clean flat soft surface, such as carpet, rug or carton to prevent being scratched.

## Reminder :

Please ensure that all surface and edges with colours / laminations are facing forward / outward.

HARDWARE LIST			QTY
A2		Screw m3.5 x 14mm	52
A7		Screw m4 x 30mm	4
A17		Crosshead Screw 6.3 x 40mm	126
D6		Wood Dowel 8 x 25mm	8
F2		Mini Fix 15mm	14
H6		Handle 128mm (Silver)	2
L1		Leg Pin	8
N1		Allen Key	1

N2		Nail	8
R1		L Bracket	5
R2		Single Plastic Cap	20
W1		Plate Caster Wheel	6
Y		Crosshead Cover	62

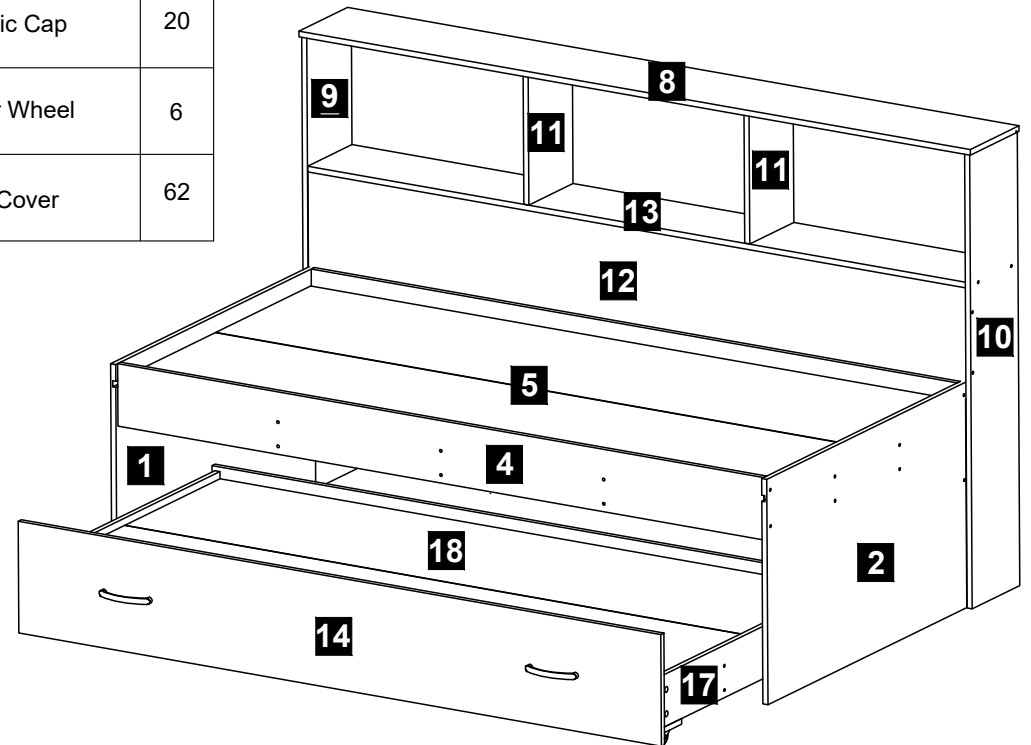

## CAUTION


MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.



USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.


### STEP 1

Firstly, assemble panel no. **15** & **16** together using 6.3 x 40mm Crosshead Screw (**A17**).

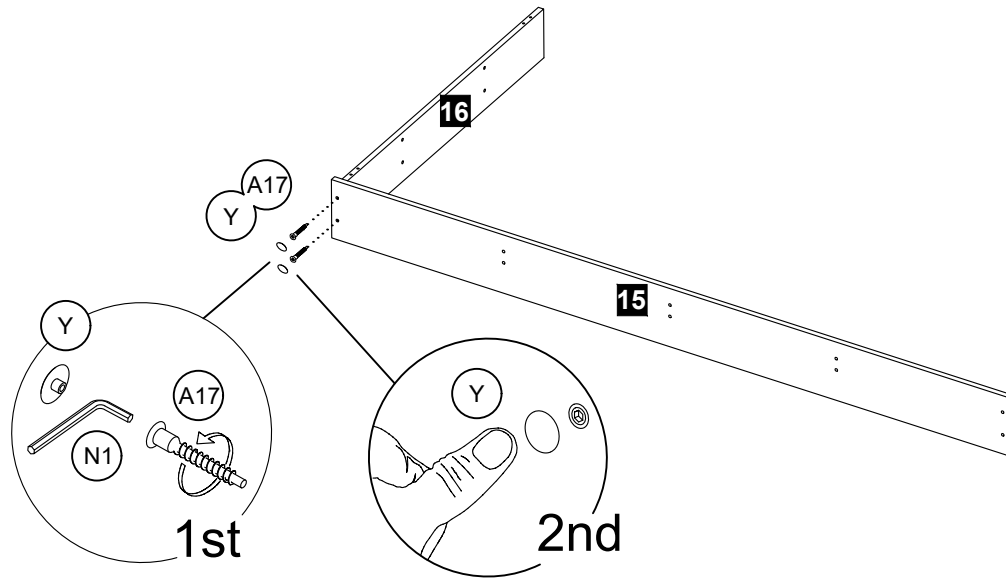


### STEP 2

Then, assemble panel no. **20** & **21** together using 6.3 x 40mm Crosshead Screw (**A17**).

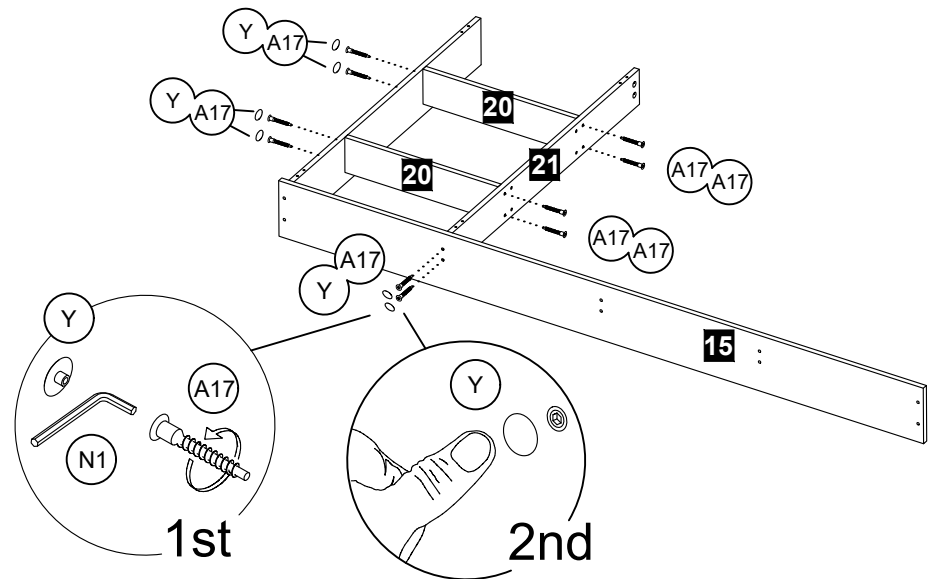


### STEP 3

Assemble panel no. **20** & **21** together using 6.3 x 40mm Crosshead Screw (**A17**).

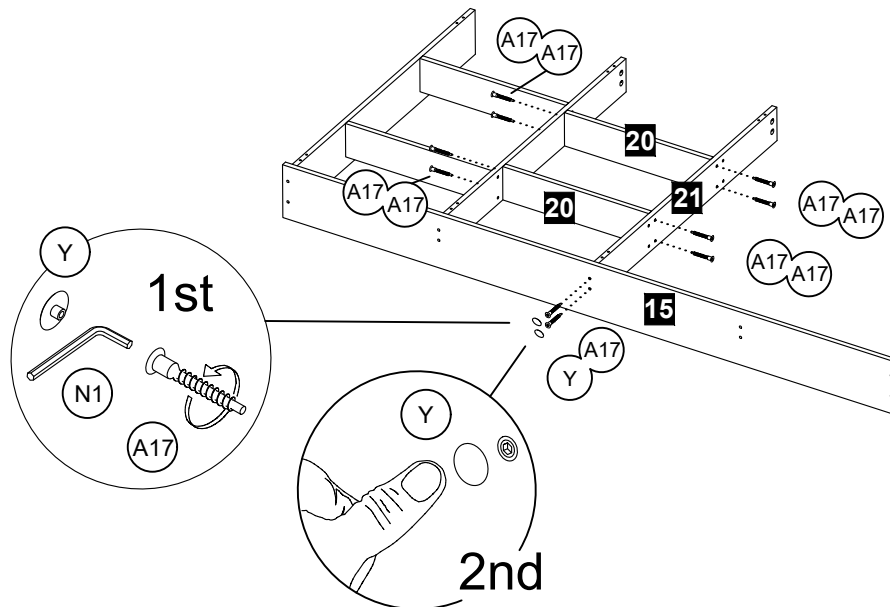


### STEP 4


Assemble panel no. **20** & **21** together using 6.3 x 40mm Crosshead Screw (**A17**).

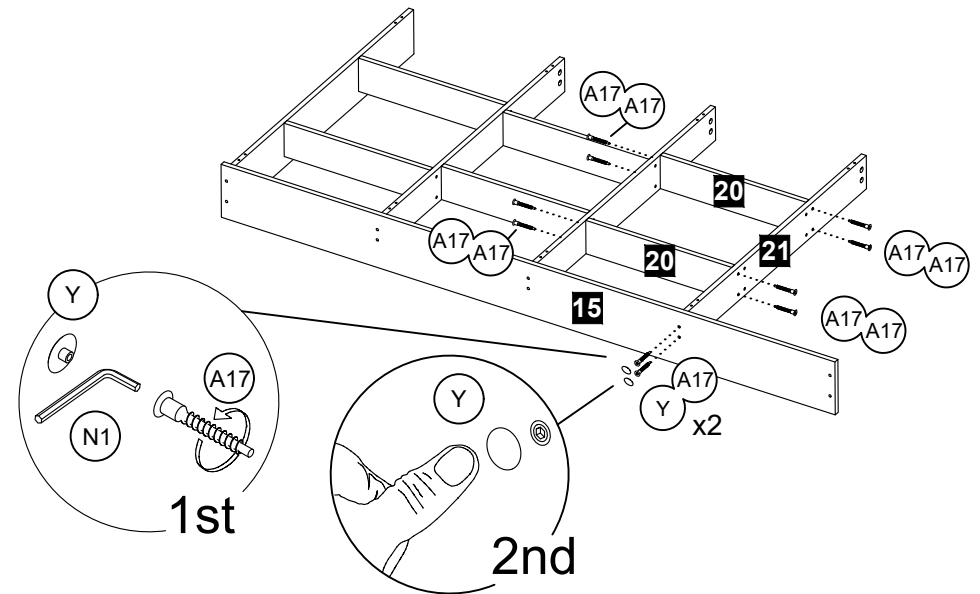


**STEP 5** Assemble panel no. **17** & **20** together using 6.3 x 40mm Crosshead Screw (**A17**).

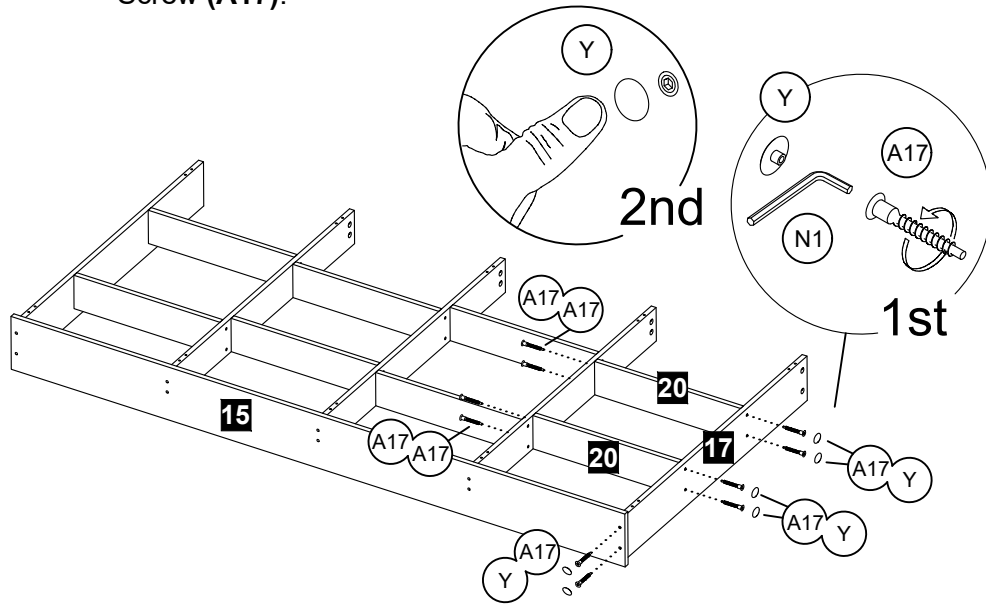


**STEP 6** Assemble panel no. **14** using Mini Fix 15mm (**F2**).

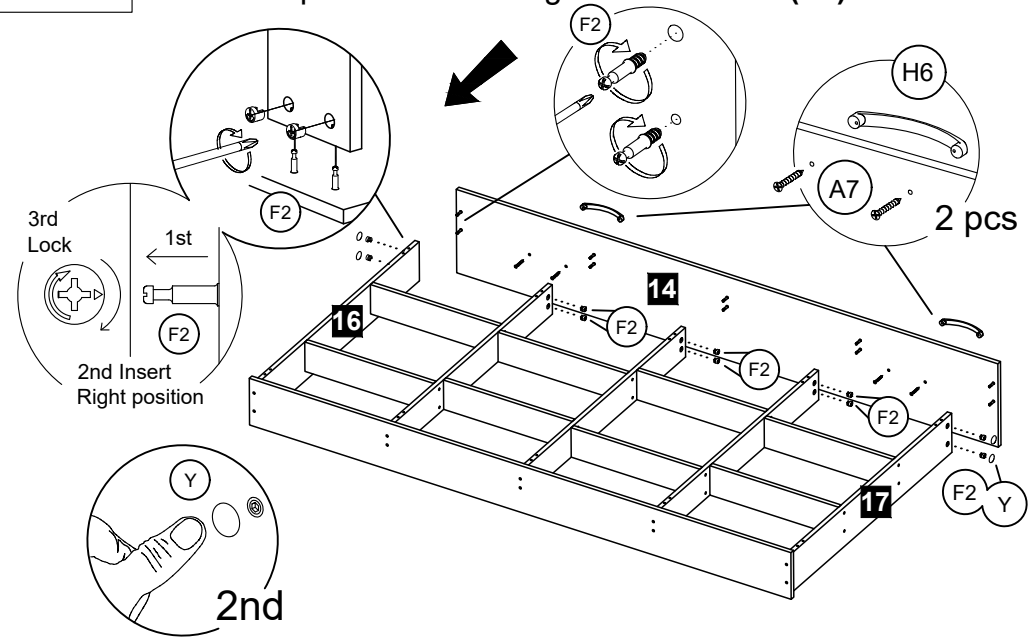

**STEP 7** Assemble panel no. **19** at panel no. **16**, **17** & **21** using 6.3 x 40mm Crosshead Screw (**A17**).

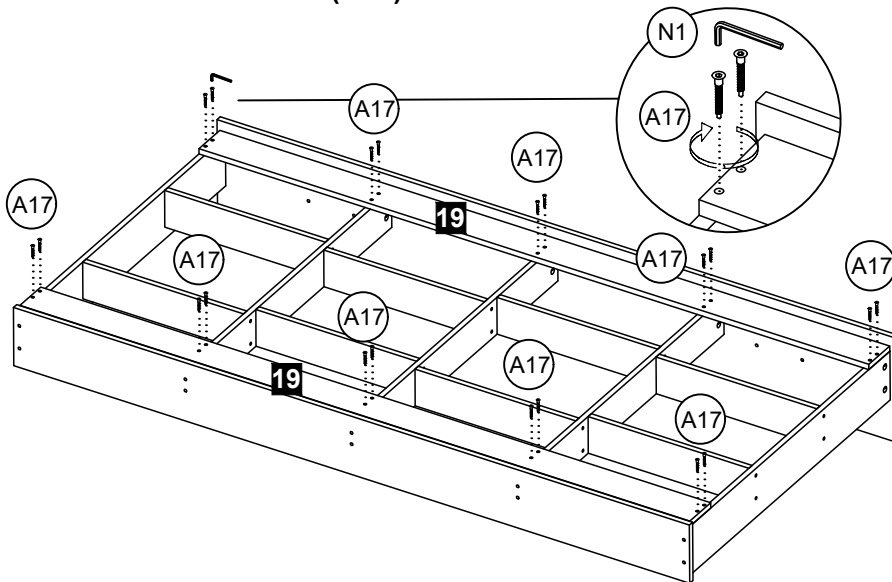


**STEP 8** Screw the Plate Caster Wheel (**W1**) and L Bracket (**R1**) at 2 pcs panel no. **19** with using screw m3.5 x 14mm (**A2**).

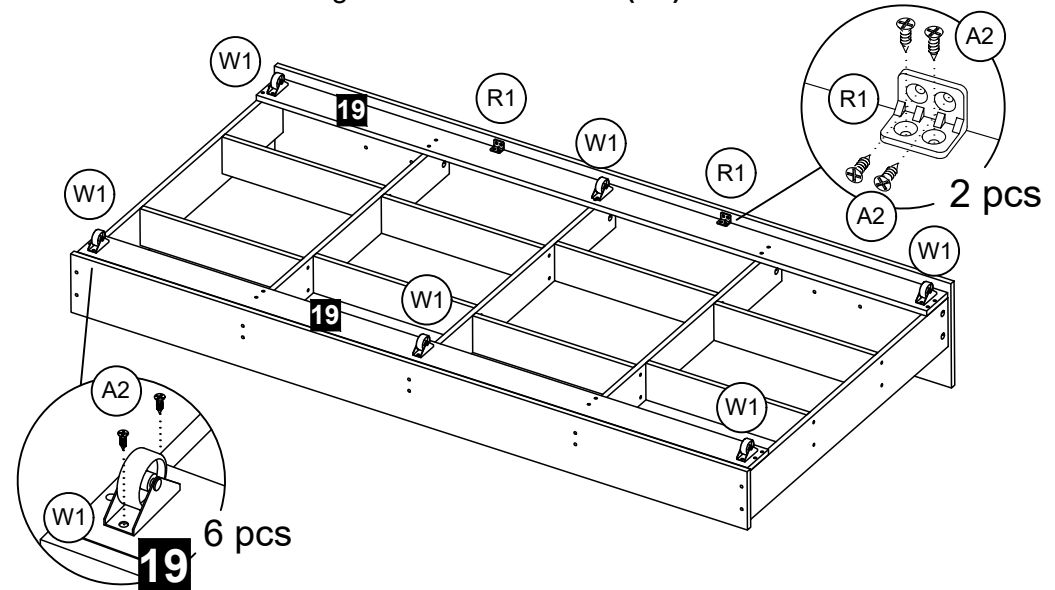


### STEP 9

Put the 2 pcs of bed base panel no. **18** on top of bed.

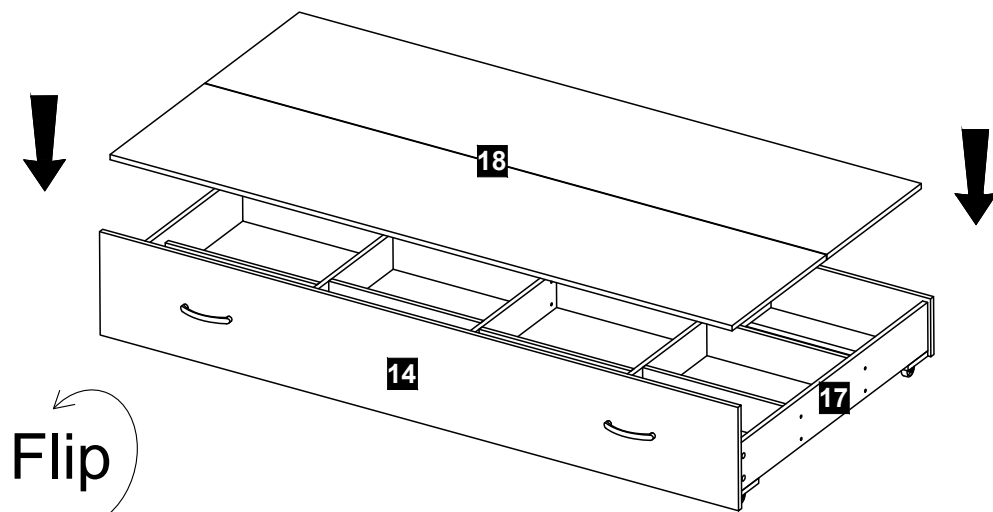


### STEP 10

Bed drawer completed.

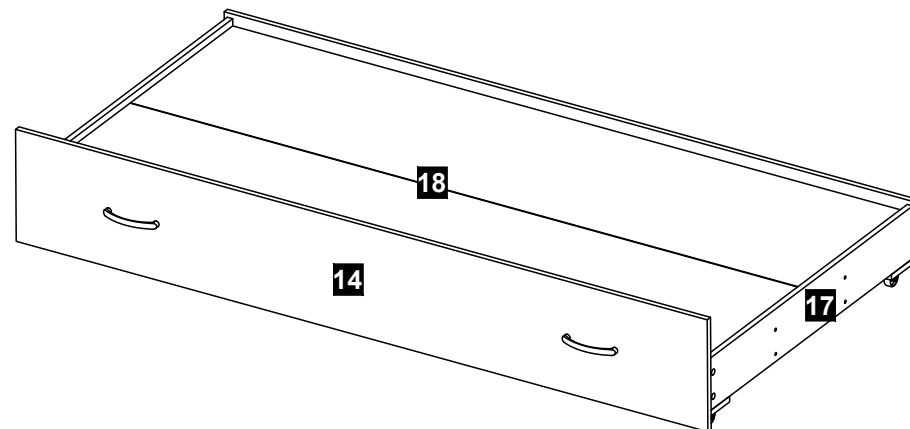


### STEP 11

Use Allen Key (**N1**) to tighten the 6.3 x 40mm Crosshead Screw (**A17**) and button the screw head with Crosshead Cover (**Y**).

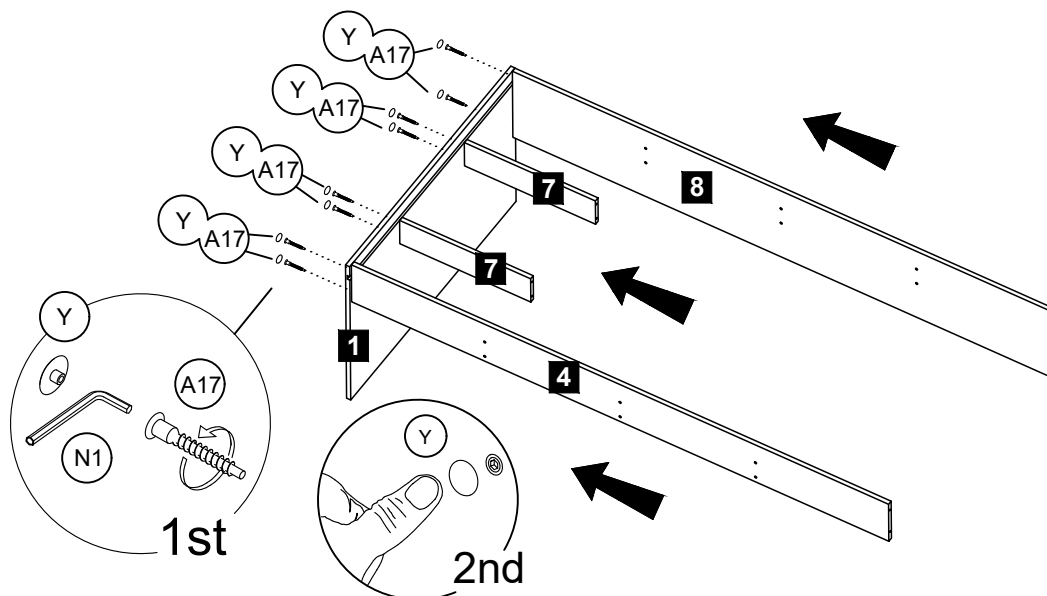


### STEP 12


Use Allen Key (**N1**) to tighten the 6.3 x 40mm Crosshead Screw (**A17**) and button the screw head with Crosshead Cover (**Y**) except crosshead screw at panel no. **6**.

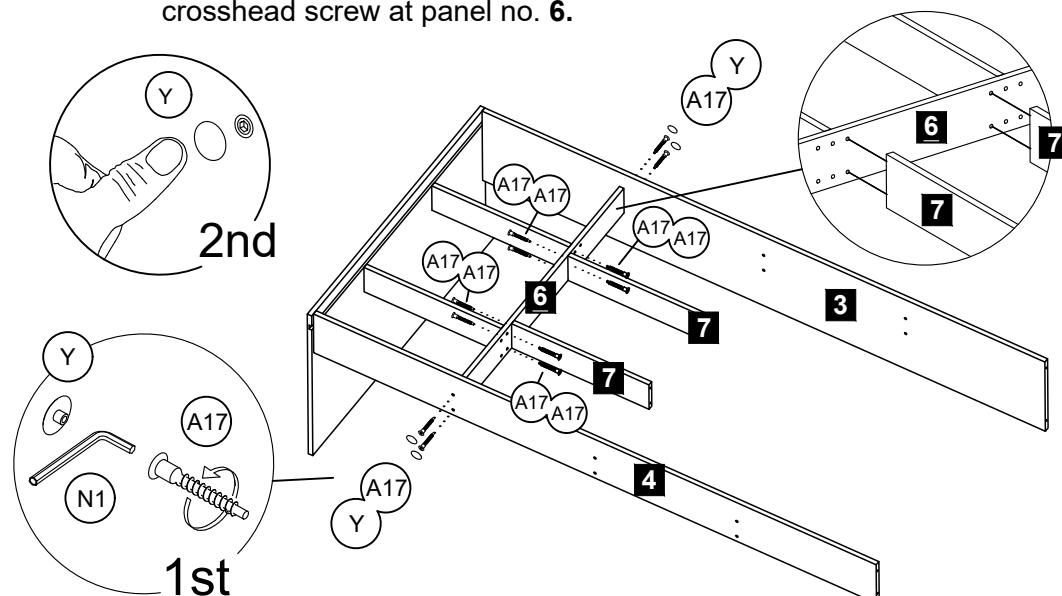


**STEP 13** Use Allen Key (N1) to tighten the 6.3 x 40mm Crosshead Screw (A17) and button the screw head with Crosshead Cover (Y) except crosshead screw at panel no. 6.

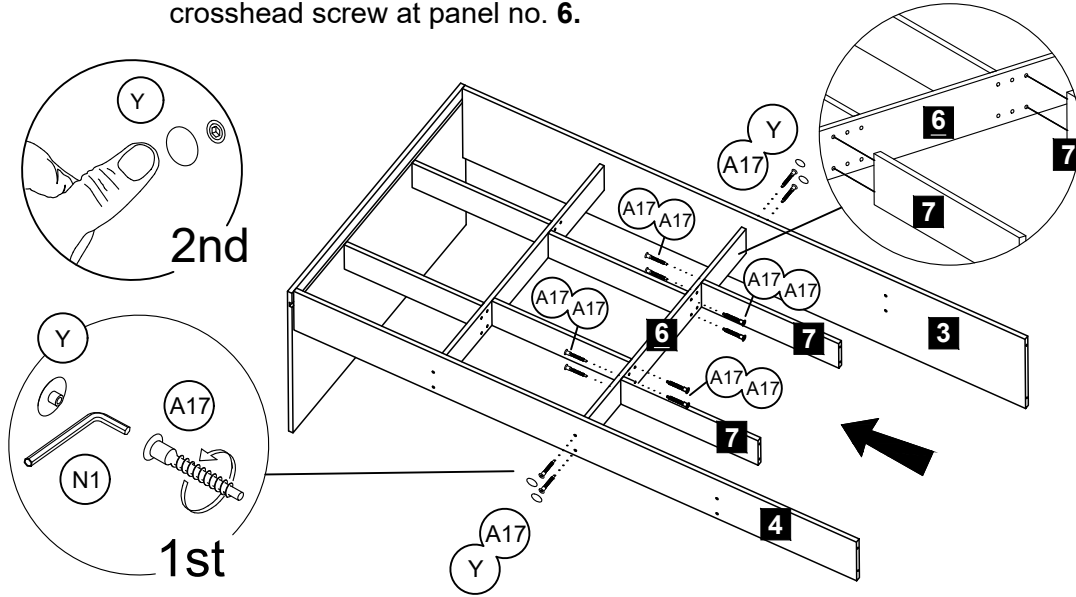


**STEP 14** Use Allen Key (N1) to tighten the 6.3 x 40mm Crosshead Screw (A17) and button the screw head with Crosshead Cover (Y) except crosshead screw at panel no. 6.

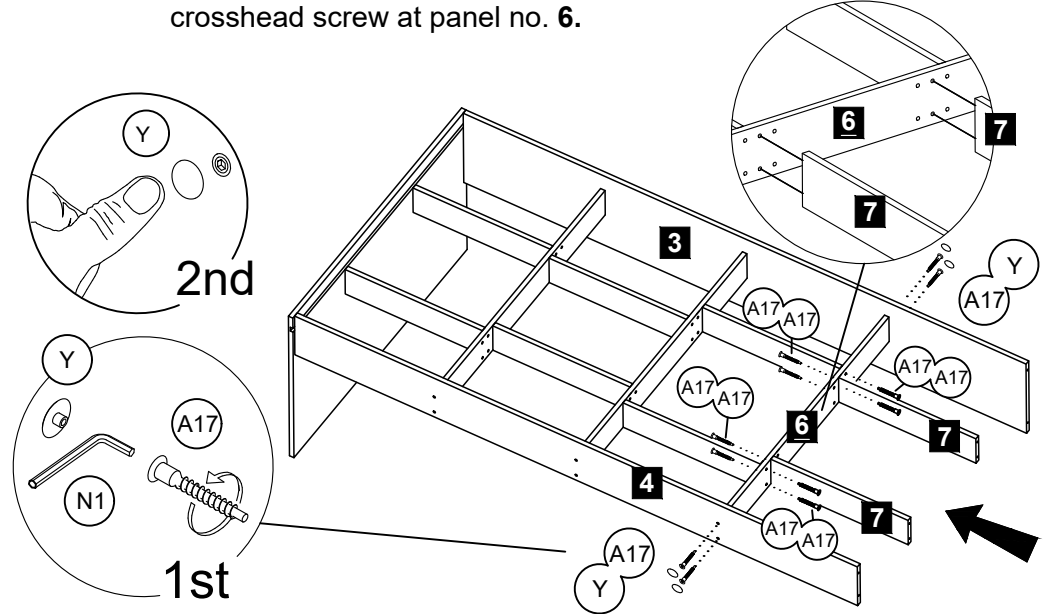


**STEP 15** Slide the base panel no. 5 until the groove.

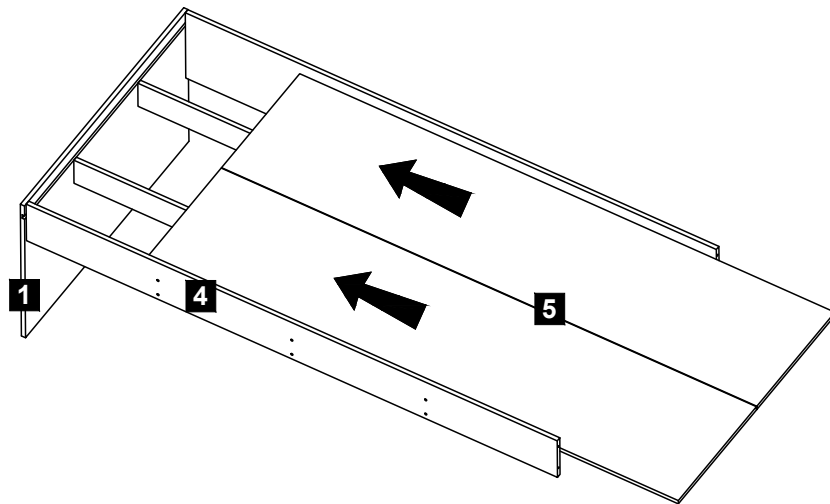


**STEP 16** Use Allen Key (N1) to tighten the 6.3 x 40mm Crosshead Screw (A17) & button a screw head with Crosshead Cover (Y). Attach 4 Leg Pin (L1) at panel no. 1 & 2.

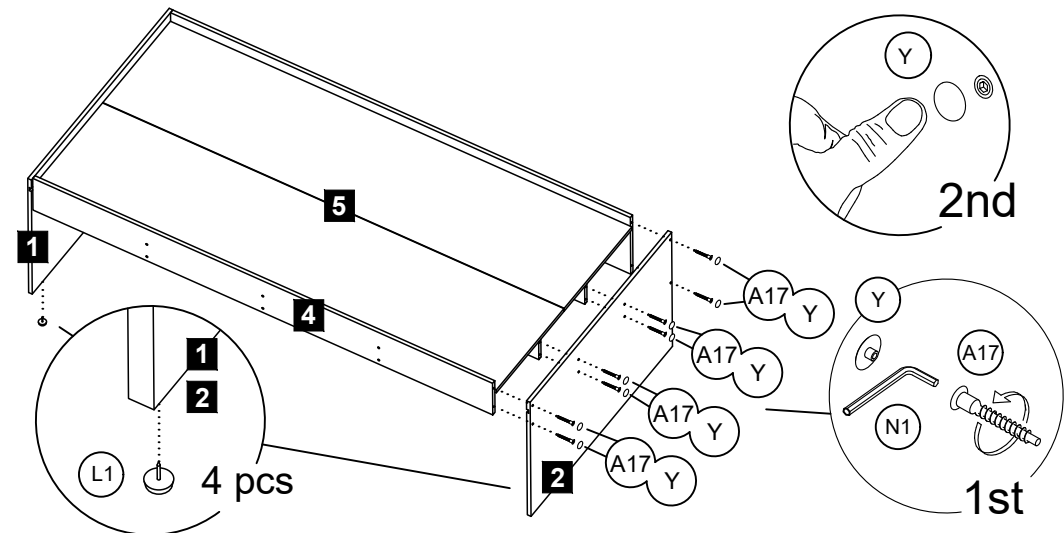


### STEP 17 Bed frame completed.

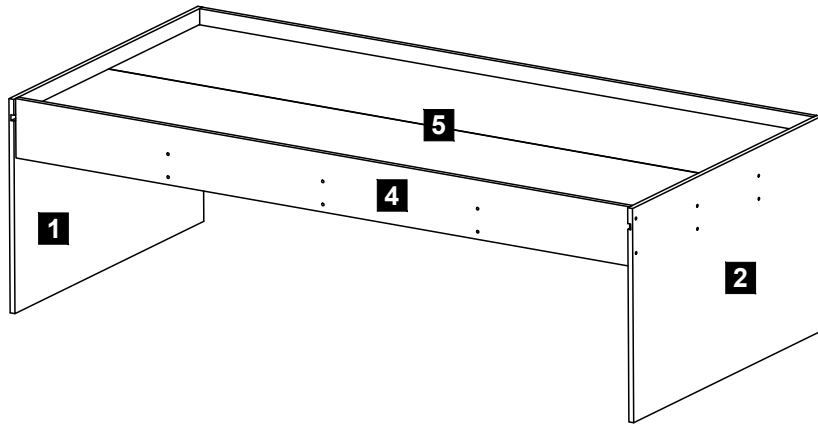


### STEP 18 Assemble panel no. 9, 10, 12 & 13 together using 6.3 x 40mm Crosshead Screw (A17).

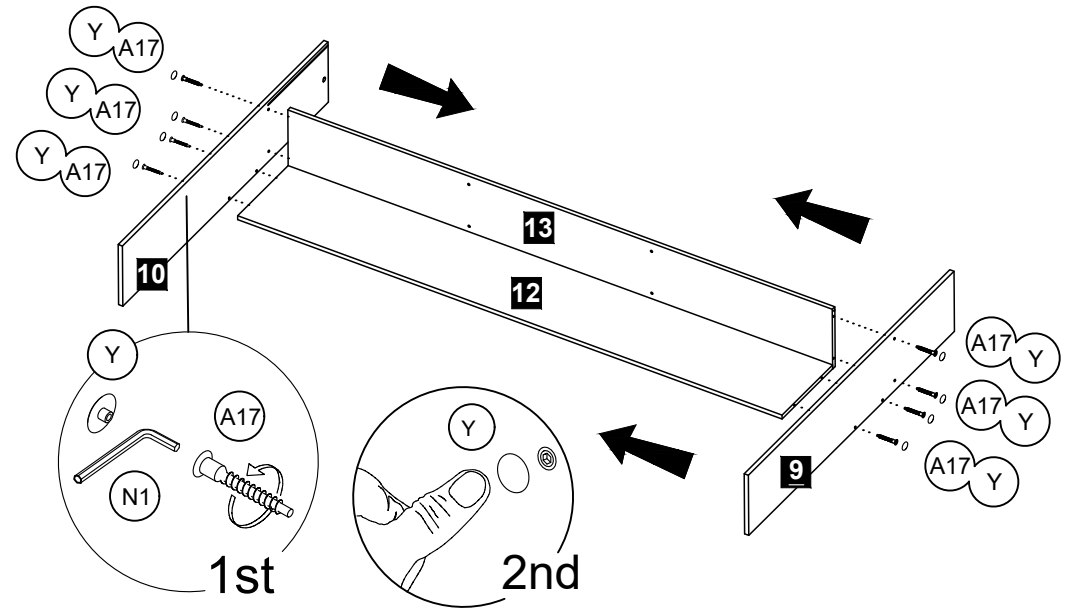


### STEP 19 Assemble panel no. 11 using 6.3 x 40mm Crosshead Screw (A17). Insert Wood Dowel (D6) in panel no. 9, 10 & 11.

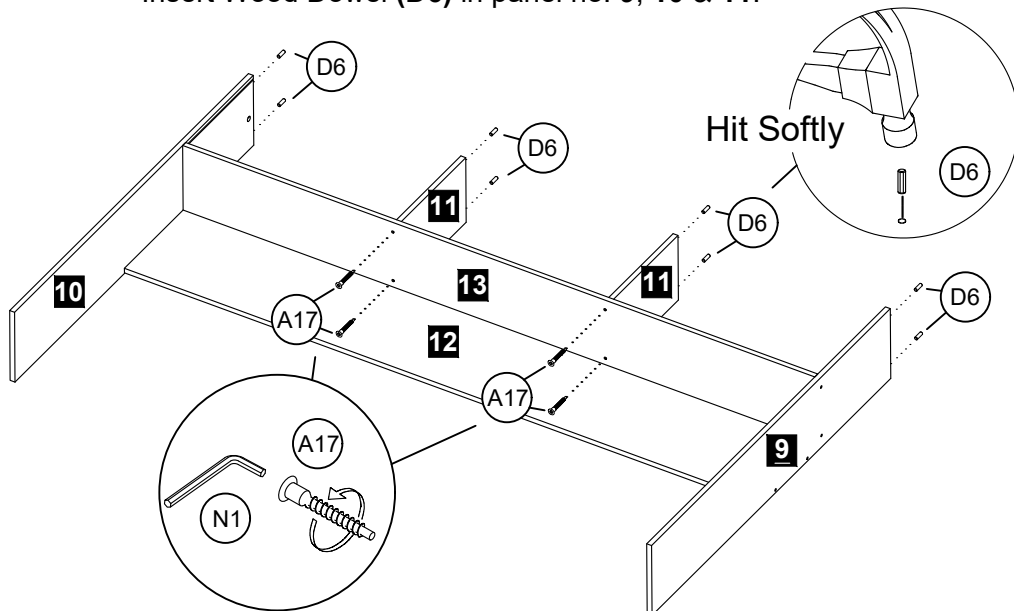


### STEP 20 Slide the panel no. 22 until the groove.

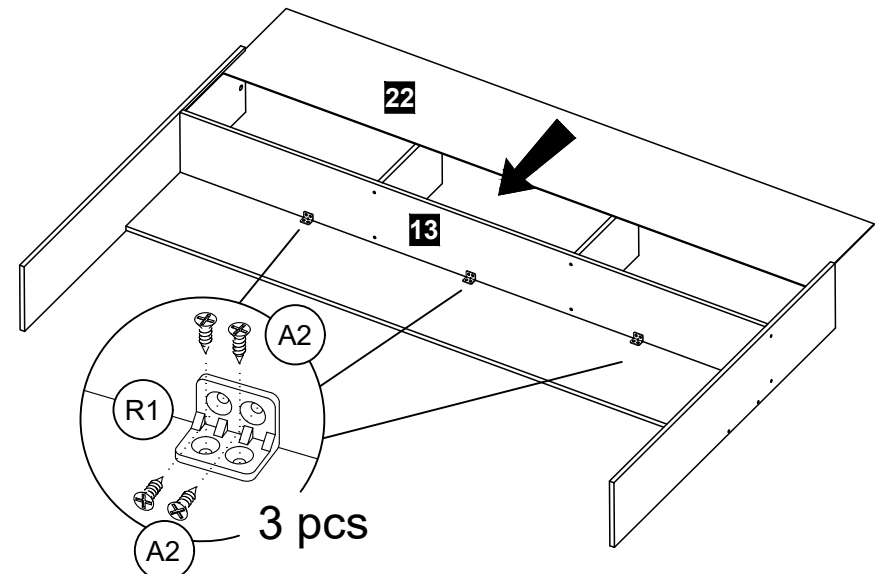


**STEP 21** Assemble panel no. **8** using Mini Fix 15mm (**F2**) and Wood Dowel (**D6**). Button the mini fix head with Crosshead Cover (**Y**).

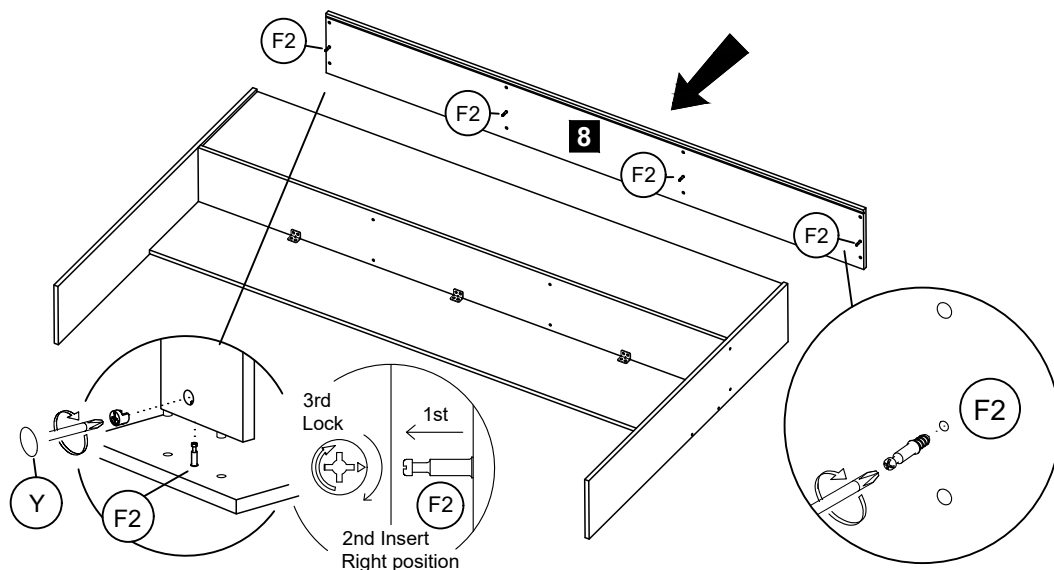

**STEP 22** Then nail the back panel no. **22** between panel no. **11**. Attach the Leg Pin (**L1**).

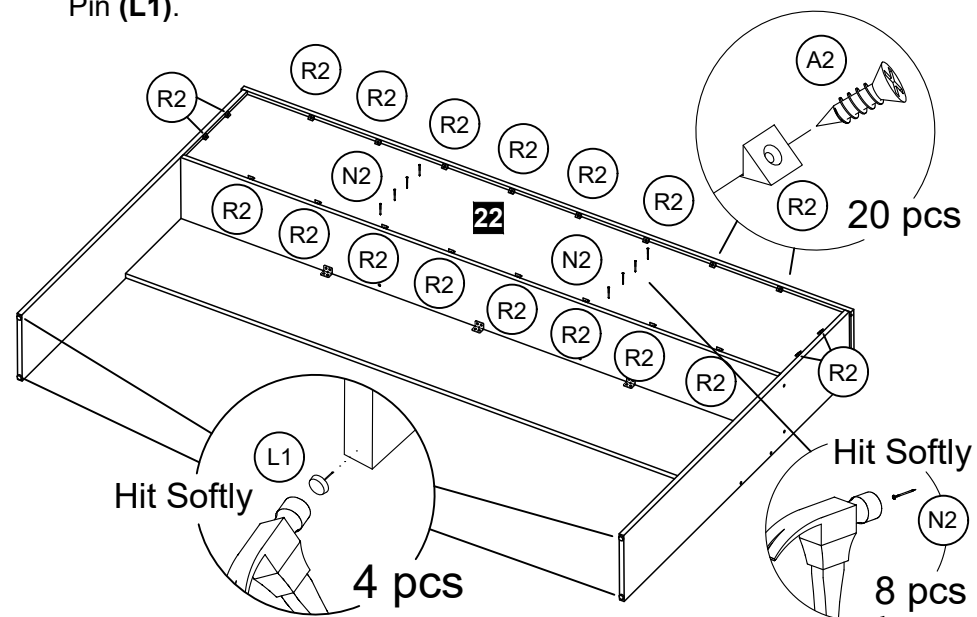

**STEP 23** Headboard completed.

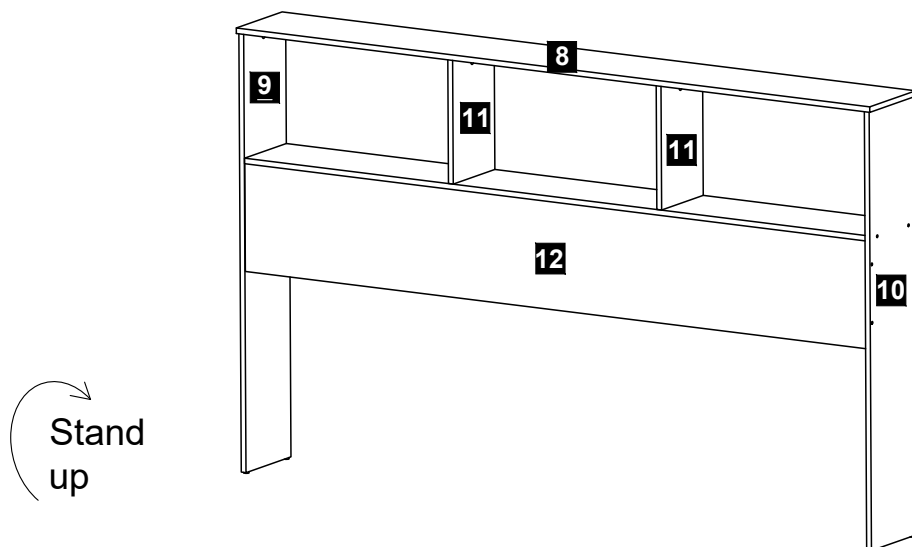

**COMPLETE**

Attach the 3 parts together.

