













MODEL :METAL POST / SPRUNG WOOD BED BASE


SIZE :SMALL DOUBLE / DOUBLE / QUEEN / KING SINGLE / KING BED

ASSEMBLY INSTRUCTION


Part List							Hardware									
HEAD BOARD	FOOT BOARD	SIDE RAIL	CROSS RAIL	CENTRE RAIL	SUPPORT LEG	SPRUNG WOOD	WOOD CAP	WOOD CAP	M6 X 45mm	M6 X 40mm	M6 X 25mm	M6 HEX NUT	SPANNER	ALLEN KEY M4	METAL CAP	FINIAL
																
1 pcs	1 pcs	2 pcs	3 HOLE 3 pcs	1 pcs	3 pcs	24 pcs	24 pcs	12 pcs	3 pcs	11 pcs	8 pcs	14 pcs	1 pcs	1 pcs	4 pcs	21 pcs

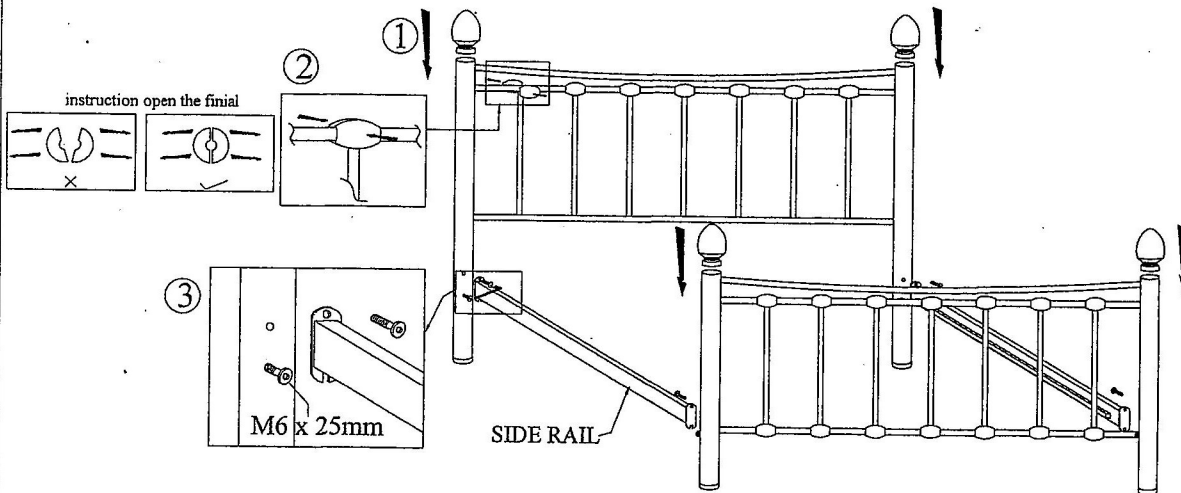


Step 1

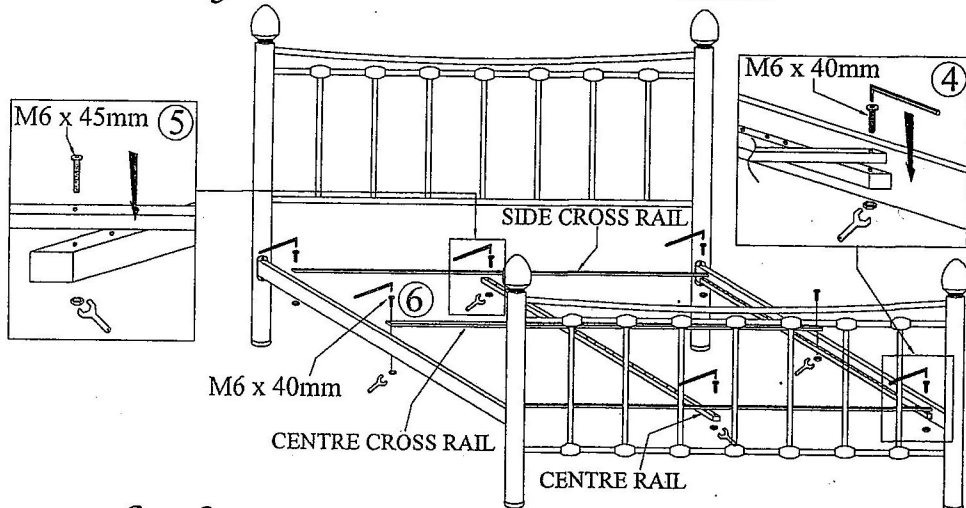

Step 2

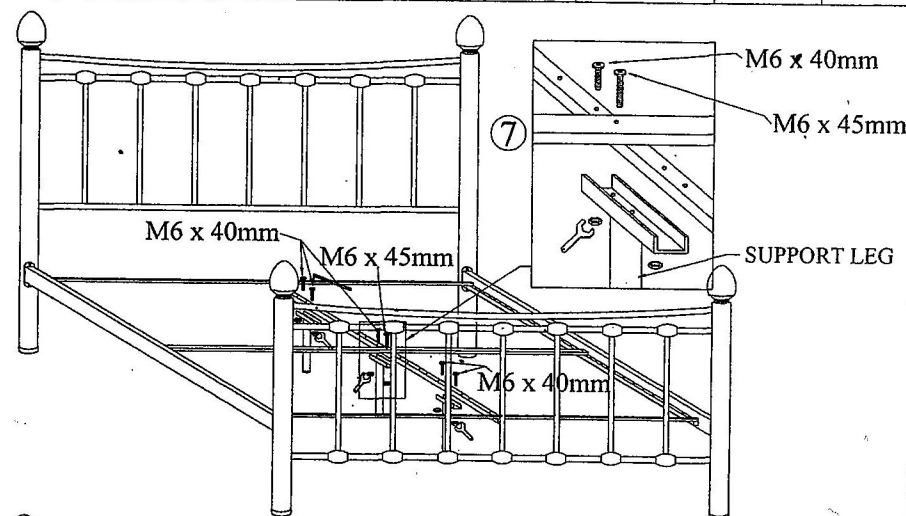

Step 3

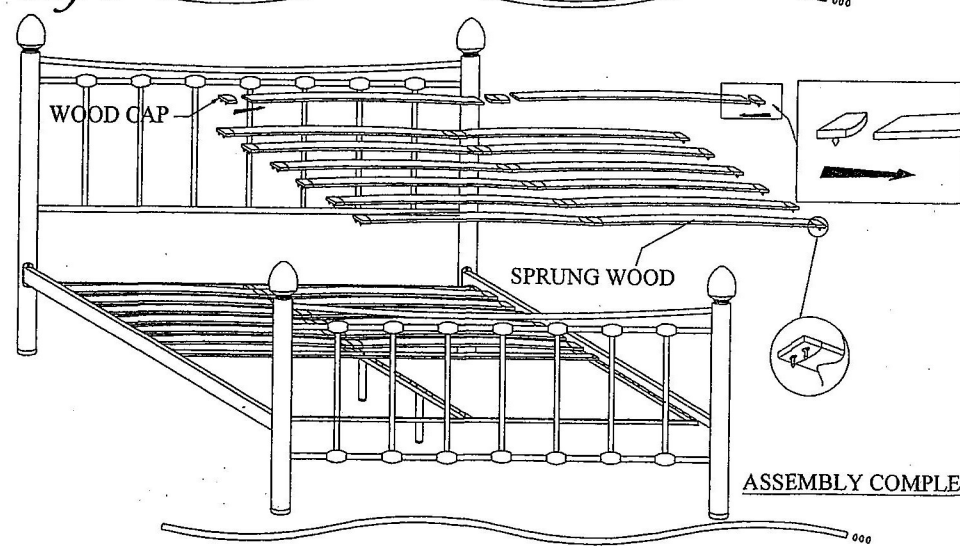

***CAUTION!**

Do not tighten bolts and screws until completely assembled !