


alphason

AW12010

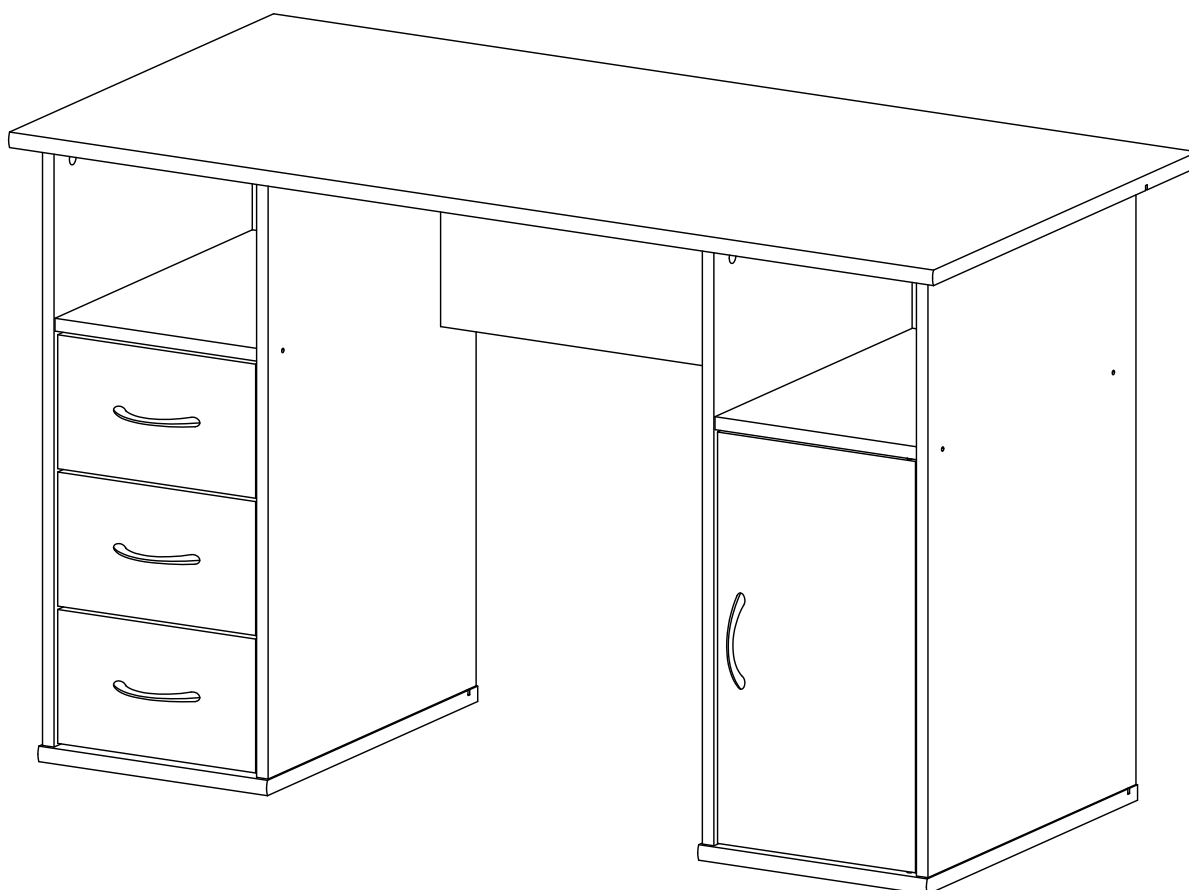

REFERENCE NO:

POR000000

Please retain this booklet as you will be asked to quote this number for any warranty or product related queries

Issue: 00/00/00

PLEASE INSPECT ALL PARTS PRIOR TO ASSEMBLY AND CONTACT US IF ANY OF THE PARTS ARE DAMAGED OR MISSING. THIS MUST BE DONE BEFORE ATTEMPTING ASSEMBLY.



Need help or advice? Missing/damaged parts?
Contact us directly on:

Helpline ☎ 0845 130 6686


International Helpline (English Speaking): +44 1942 524 100



Interested in more Alphason products? Visit our website at:
www.alphasondesigns.com




Have a question? Want more information? Email us on?
customer.services@armourhome.co.uk

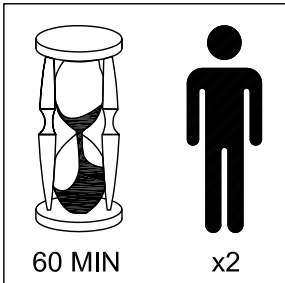

60 MIN

x2

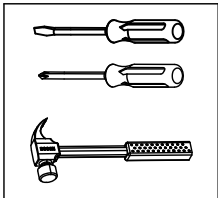


Self-Assemble
tool request

Instructions/Instrucciones/Mode d'emploi

- Do not tighten bolts completely until desk is fully assembled
- Por favor no apretar los tornillos hasta que haya ensamblado
- el escritorio completamente


PARTS LIST

1	x1
2	x1
3	x1
4	x1
5	x1
6	x1
7	x1
8	x1
9	x1
10	x1
11	x2
12	x3
13	x3
14	x3
15	x3
16	x3
17	x1

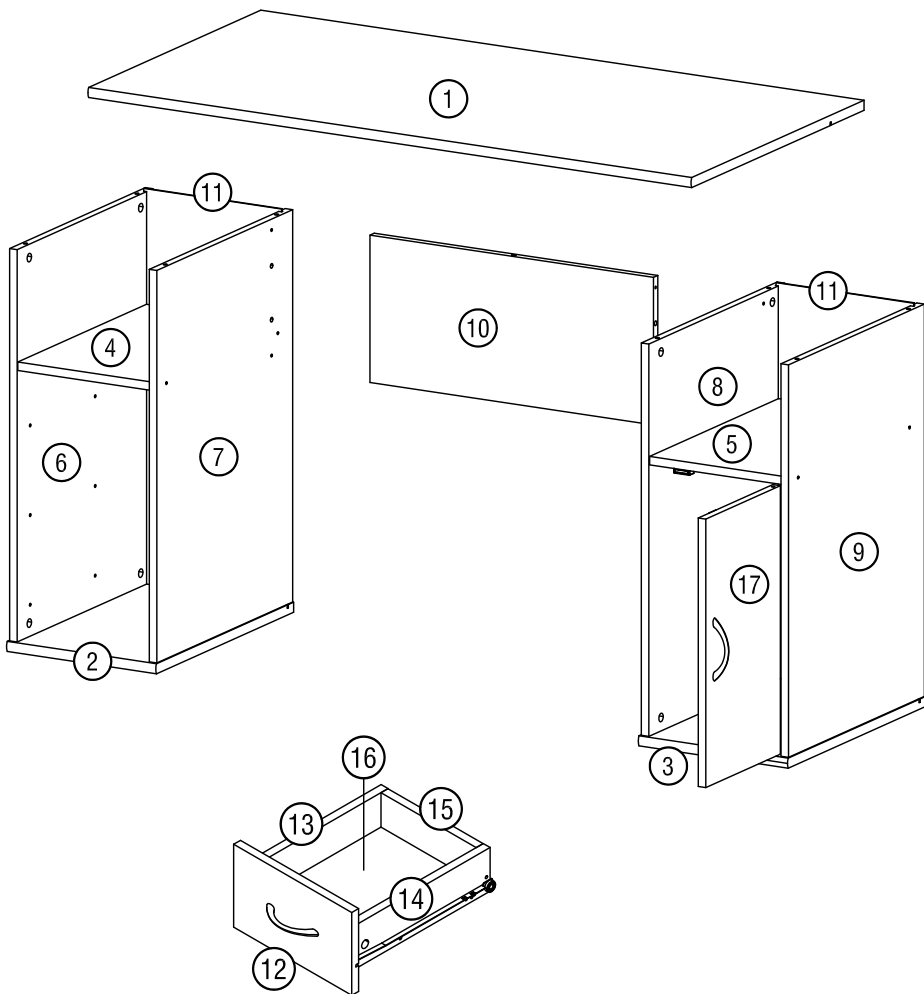


A  x22	B  x22	C  x22	D  x25	E  6 X 13 mm x24	F  4 X 22 mm x8	G  4 x 13 mm x3
H  8 x 50 mm x18	I  x4	J  x1	K  x2	L  3 set	M  x1	N  4 X 15 mm x16
O  x16						


Step 1

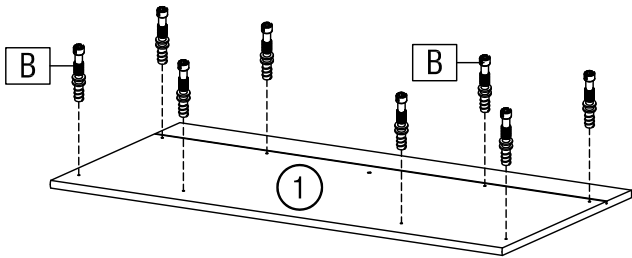


Step 2

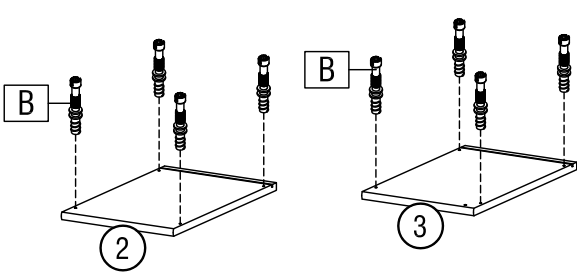


Step 3

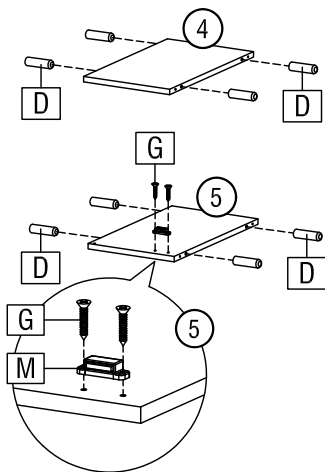







Step 4

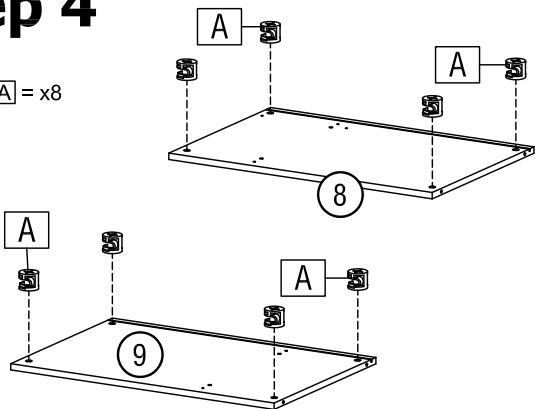


Step 5

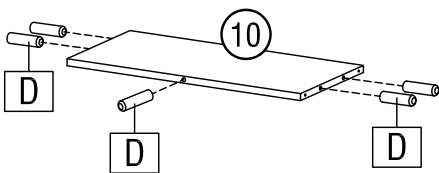


Step 6

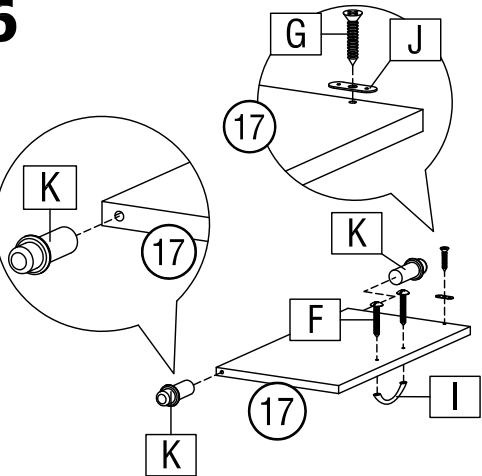


Step 7

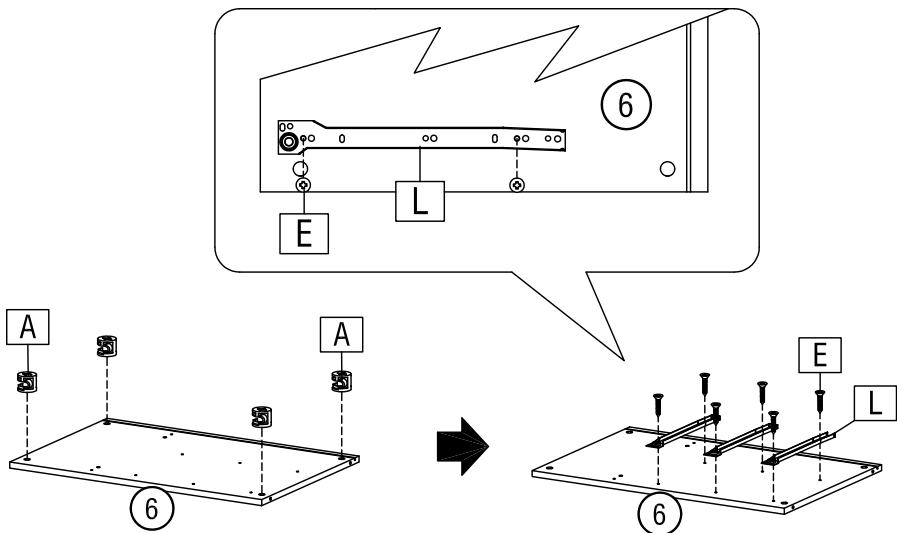


Step 8

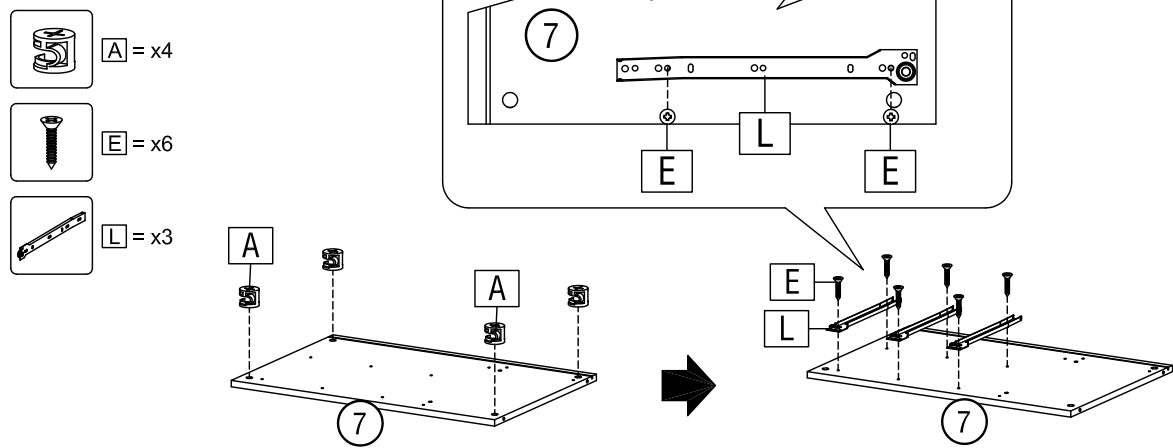


Step 9

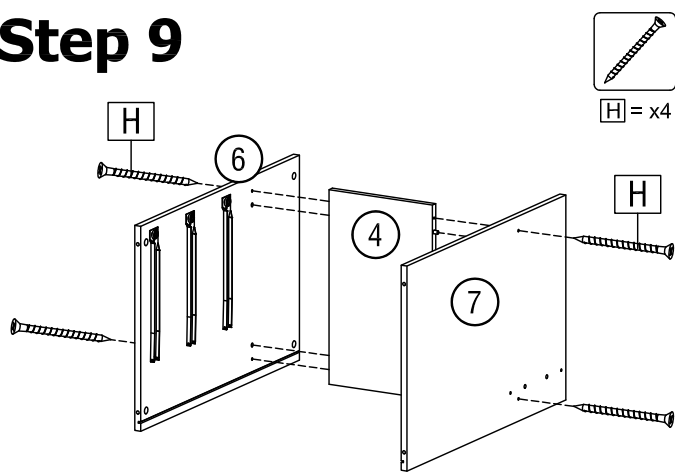


Step 10

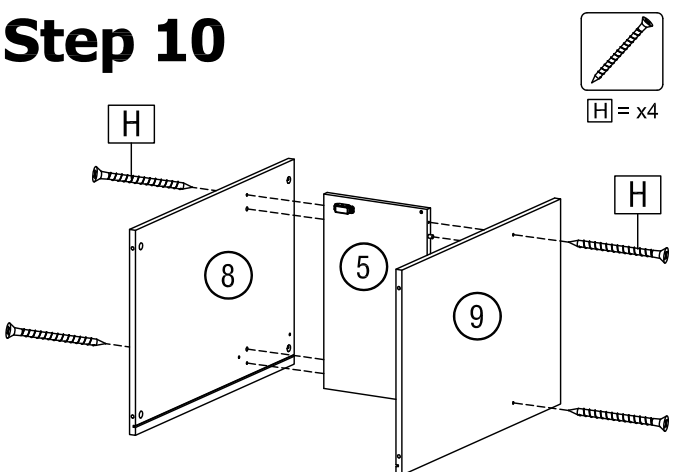


Step 11

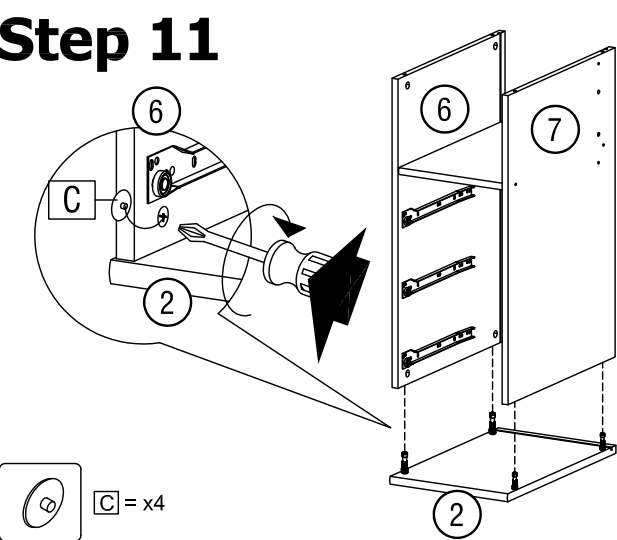


Step 12

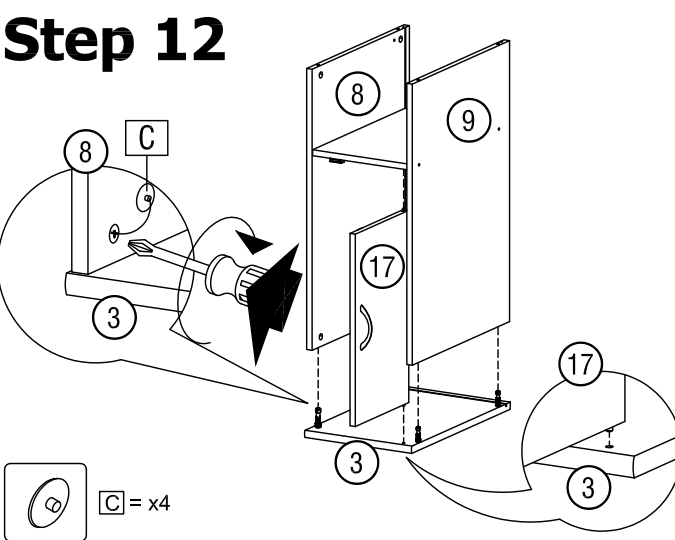


Step 13

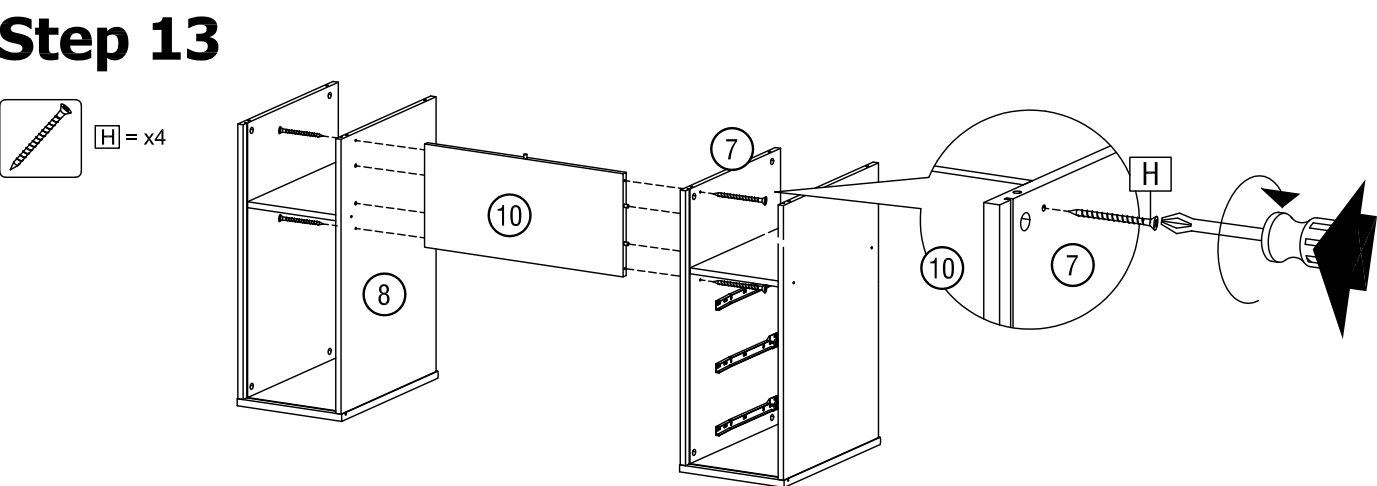

Step 14

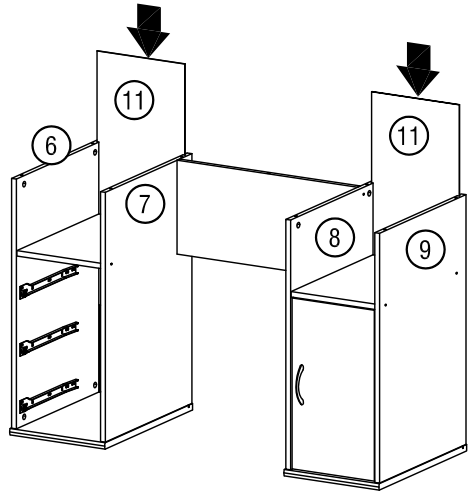


Step 15

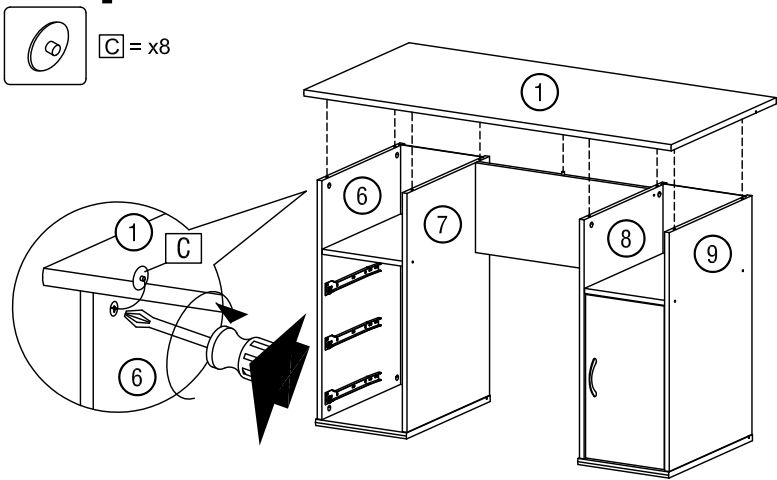


Step 16

- A = x6
- B = x6
- C = x6
- D = x12
- E = x12
- F = x6
- H = x6
- I = x3
- L = 3 set

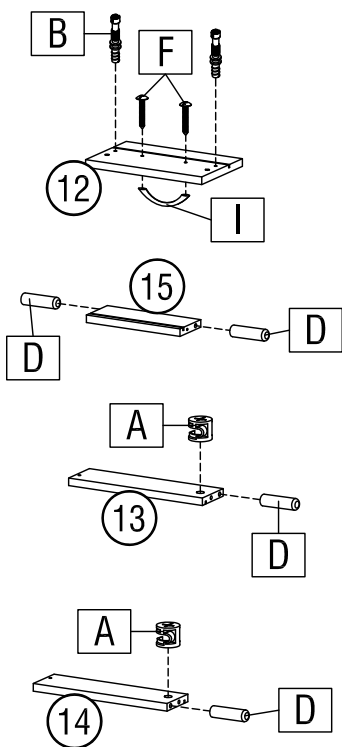


3X

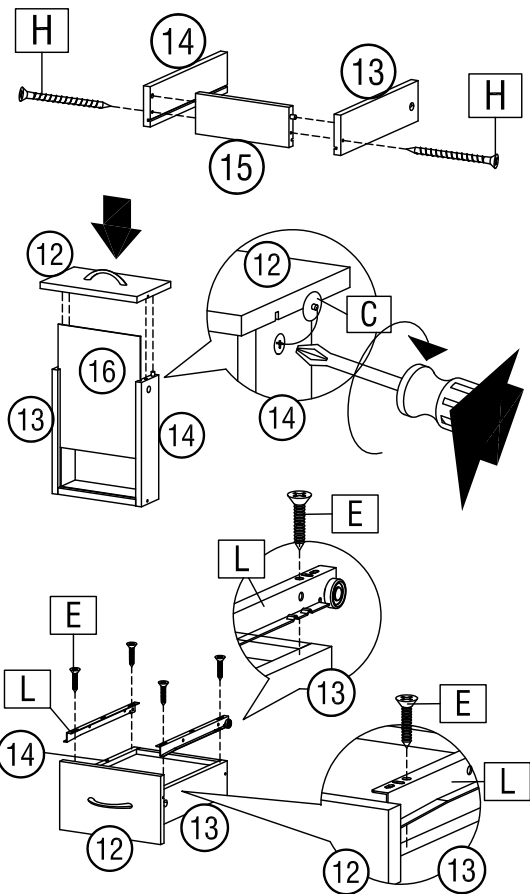

Step 17

- N = x16
- O = x16

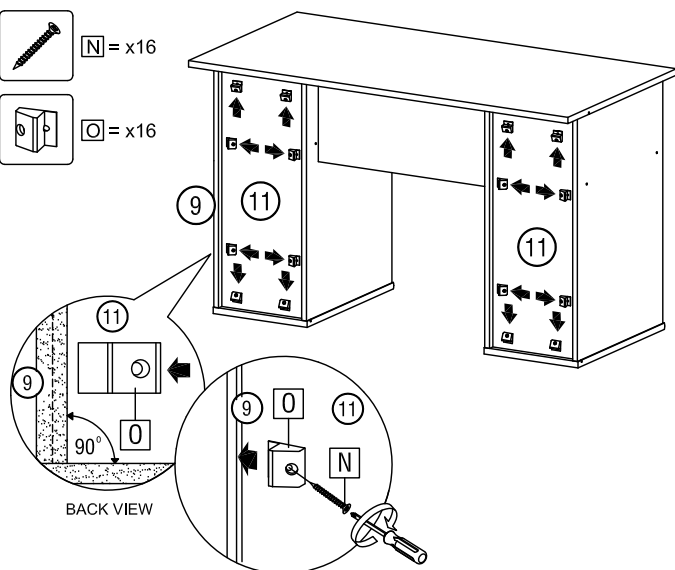

Step 18

